

# **Cam Viewer Pro**

user's manual

TABLE OF CONTENTS

1. INTRODUCTION .....3

2. SYSTEM REQUIREMENT .....3

3. SOFTWARE INSTALLATION .....4

4. MAIN CONSOLE.....18

5. CONFIGURATION.....21

    5.1 Setting – General.....22

    5.2 Setting - Camera .....26

        5.2.1 Add Camera .....26

        5.2.2 Camera Parameter.....28

        5.2.3 IP Camera / Video Server Setting panel .....29

    5.3 Setting - I/O Device .....30

    5.4 Setting - PTZ Config .....31

    5.5 Setting – Hotline .....32

    5.6 Setting - User Account.....33

    5.7 Setting - Address Book.....34

    5.8 Setting – Monitor Display .....35

    5.9 Save/ Load Configuration .....36

    5.10 Counting Application .....37

    5.11 Log Viewer .....38

        5.11.1 Log Viewer – Unusual Event.....38

        5.11.2 Log Viewer – System Log.....39

        5.11.3 Log Viewer - Counting Application.....40

        5.11.4 Log Viewer - Counting Application (Diagram) .....41

    5.12 Backup.....42

        5.12.1 Backup .....42

        5.12.2 Delete Recorded Information from the System .....45

    5.13 Network Service.....47

        5.13.1 Live Streaming Server.....48

        5.13.2 Remote Playback Server.....51

        5.13.3 3GPP Service .....55

    5.14 About Main Console .....56

6. PLAYBACK .....57

    6.1 Playback Console .....58

    6.2 Search Mode .....60

        6.2.1 Unusual Event-General Motion .....60

        6.2.2 Unusual Event-Foreign Object.....60

        6.2.3 Unusual Event-Missing Object .....61

        6.2.4 Unusual Event-Lose Focus/ Camera Occlusion.....61

    6.3 Enhancement.....62

    6.4 Save Video / Save Image.....62

|                                                |    |
|------------------------------------------------|----|
| 6.5 Print / Backup.....                        | 63 |
| 6.6 Log Viewer .....                           | 65 |
| 6.6.1 Unusual Event.....                       | 65 |
| 6.6.2 System Log.....                          | 66 |
| 6.6.3 Counting Application .....               | 67 |
| 6.7 Setting .....                              | 68 |
| 6.8 Remote Server .....                        | 69 |
| 7. SCHEDULE.....                               | 70 |
| 7.1 Day Mode .....                             | 71 |
| 7.2 Week Mode .....                            | 72 |
| 8. GUARD.....                                  | 75 |
| 8.1 Event .....                                | 75 |
| 8.1.1 Event - Signal Lost.....                 | 76 |
| 8.1.2 Event - General Motion .....             | 77 |
| 8.1.3 Event - Foreign Object.....              | 79 |
| 8.1.4 Event - Missing Object .....             | 81 |
| 8.1.5 Event - Lose Focus .....                 | 83 |
| 8.1.6 Event - Camera Occlusion .....           | 85 |
| 8.1.7 Event - Digital Input Event .....        | 87 |
| 8.1.8 Event - System .....                     | 88 |
| 8.2 Action.....                                | 90 |
| 8.2.1 Action - Action Type .....               | 90 |
| 9. START .....                                 | 91 |
| 10. REMOTE LIVE VIEWER .....                   | 92 |
| 10.1 Show Camera(s) On the Display Screen..... | 93 |
| 11. WEB VIEW .....                             | 95 |
| 12. DB TOOL.....                               | 96 |
| 12.1 Export Database .....                     | 97 |
| 12.2 Import Database .....                     | 97 |
| 12.3 Export Configurations .....               | 98 |
| 12.4 Edit Storage Location .....               | 99 |

# 1. Introduction

The Cam Viewer Pro is a multi-camera video surveillance application that enables you to set up a comprehensive and effective surveillance system quickly and easily. It works with PLANET network cameras and video servers to provide video monitoring, recording and event management functions.

The Cam Viewer Pro is scalable from cameras to up to 64 cameras that can monitors, records, and sets schedule and motion detection at the same time. Images can be streamed to a central computer and stored in a located computer. The motion detection can be applied to individual cameras that intelligent feature lets you save space by recording only when something is happening.

The Cam Viewer Pro is possible with the use of a web browser to remote viewing and playback anywhere in the world. The Cam Viewer controls Pan / Tilt / Zoom cameras and can record images from any sites at any interval, including triggered events from sensor detection and video motion detection detected by the camera.

**Note:** The Cam Viewer Pro in the CD-ROM only provide 30-days trial. If you want to use Pro version after trial period. Please consult PLANET local dealer or PLANET sales representative.

## 2. System Requirement

| Total FPS              | ~600                                                                              | 600~480                | 480~240             | 240~120          | 120~             |
|------------------------|-----------------------------------------------------------------------------------|------------------------|---------------------|------------------|------------------|
| CPU                    | Intel Core 2 Duo QX6800                                                           | Intel Core 2 Duo E6600 | Intel Pentium D 930 | Intel P4 3.0 GHz | Intel P4 2.8 GHz |
| RAM                    | 4 GB                                                                              | 2 GB                   | 2 GB                | 1 GB             | 1 GB             |
| Chipset of Motherboard | Intel 946 or 965 chip, Intel Chipset recommended                                  |                        |                     |                  |                  |
| VGA Card               | ATI Radeon 9200, nVIDIA GeForce FX-5200, Intel 945/965 or above (ATI recommended) |                        |                     |                  |                  |
| Ethernet               | 100 BaseTX or Above, Gigabit LAN recommended                                      |                        |                     |                  |                  |
| Hard Disk              | 160 GB or above                                                                   |                        |                     |                  |                  |
| O.S.                   | Windows 2000 / XP / 2003                                                          |                        |                     |                  |                  |
| USB Port               | 1 x USB 1.1/ 2.0                                                                  |                        |                     |                  |                  |


**Total FPS:** Means all the cameras will spend how many frames when this software works. Suppose there are 10 cameras, each one will work with 30fps, the total fps should be 300fps.

## 3. Software Installation


1. Insert the bundled Cam Viewer CD disk into the CD-ROM drive to launch the autorun program. Once completed, a welcome menu screen will appear. Click the “Cam Viewer Pro” hyperlink, the below InstallShield Wizard dialog box will appear.

**Note:** If the welcome screen does not appear, click “Start” at the taskbar. Then, select “Run” and type “D:\Cam Viewer Pro\setup.exe”, assume “D” is your CD-ROM drive.


2. Selects the language which you want, Cam Viewer is current including fifteen languages – Chinese (Simplified), Chinese (Traditional), Danish, English, French (Standard), German, Greek, Italian, Japanese, Korean, Portuguese (Brazilian), Portuguese (Standard), Russian, Spanish and Thai. Please select the language and click “Next” to continue.

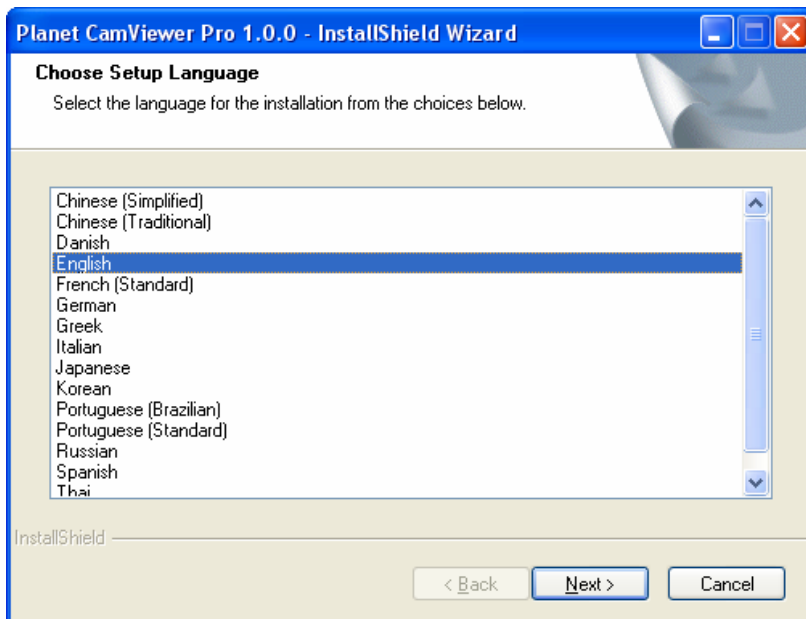


3. The "Welcome to the InstallShield Wizard for Planet Cam Viewer Pro 1.0.0" will display on the screen, please click "Next".

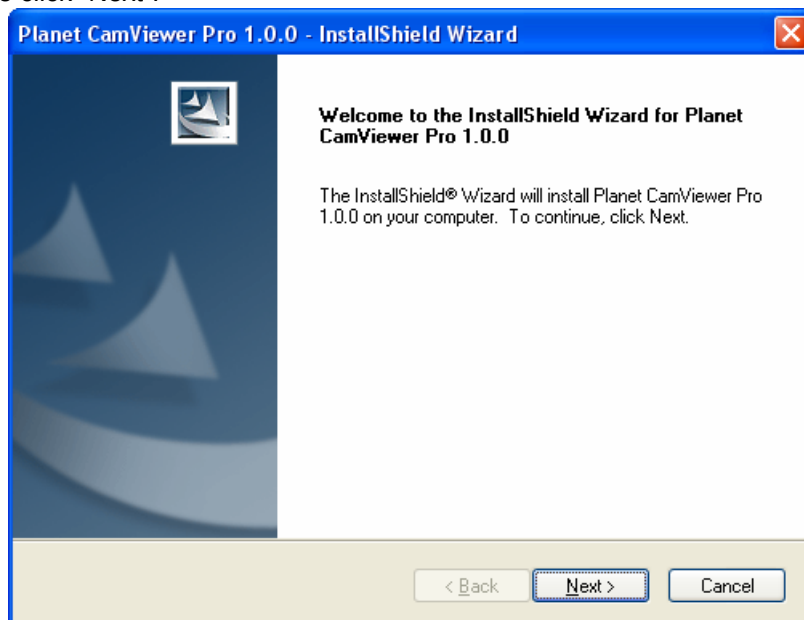

4. Please read the license agreement and then check "I accept the terms of the license agreement" if you are agreed and click "Next" to continue.

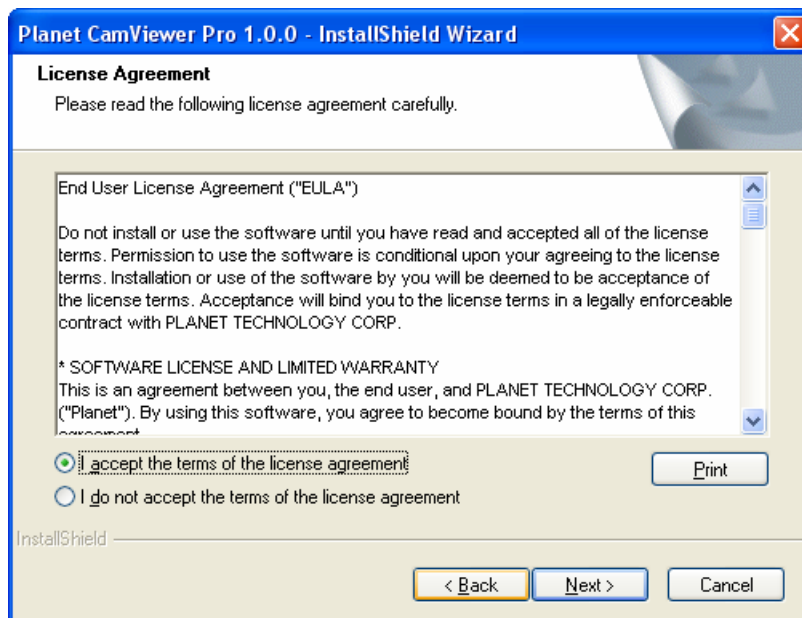


5. Please key-in user name and company name for which you want and click “Next” to continue.

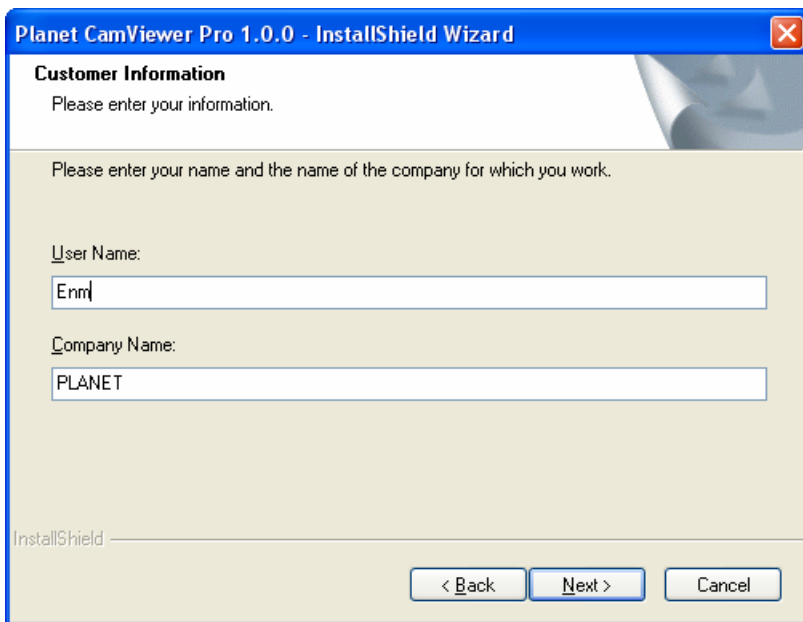


The screenshot shows the 'Customer Information' screen of the Planet CamViewer Pro 1.0.0 - InstallShield Wizard. The window has a blue title bar with the text 'Planet CamViewer Pro 1.0.0 - InstallShield Wizard' and a red close button. The main area is light beige with a blue header bar containing the title 'Customer Information' and the instruction 'Please enter your information.' Below this, a sub-instruction reads 'Please enter your name and the name of the company for which you work.' There are two text input fields: the first is labeled 'User Name:' and contains the text 'Enn'; the second is labeled 'Company Name:' and contains the text 'PLANET'. At the bottom left, the text 'InstallShield' is visible. At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.

6. Check the option “Complete – all program features will be installed (Requires the most disk space)” and click “Next”.

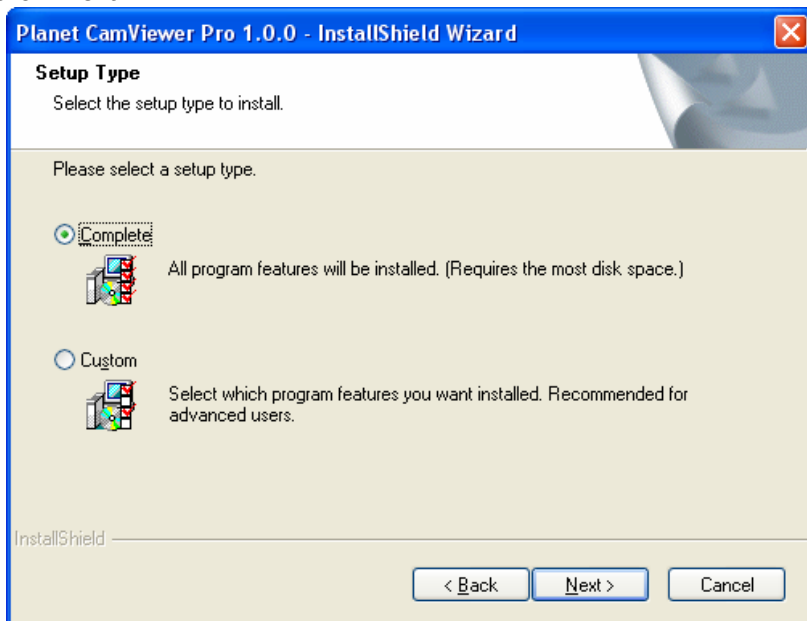


The screenshot shows the 'Setup Type' screen of the Planet CamViewer Pro 1.0.0 - InstallShield Wizard. The window has a blue title bar with the text 'Planet CamViewer Pro 1.0.0 - InstallShield Wizard' and a red close button. The main area is light beige with a blue header bar containing the title 'Setup Type' and the instruction 'Select the setup type to install.' Below this, a sub-instruction reads 'Please select a setup type.' There are two radio button options: 'Complete' (selected) and 'Custom'. The 'Complete' option is accompanied by a small icon of a computer and the text 'All program features will be installed. (Requires the most disk space.)'. The 'Custom' option is accompanied by a small icon of a computer and the text 'Select which program features you want installed. Recommended for advanced users.' At the bottom left, the text 'InstallShield' is visible. At the bottom right, there are three buttons: '< Back', 'Next >', and 'Cancel'.

7. "Ready to Install the Program" will appear to prompt you to start the installation. Please click "Install" to start.

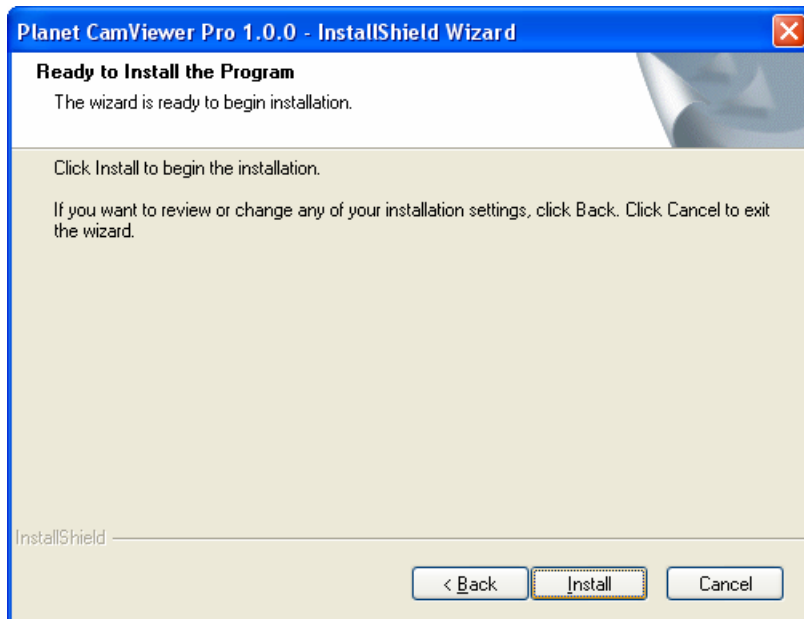


8. You may click "No" to finish the Cam Viewer installation or click "Yes" to install the additional utility - MBM5.


**Note:** When Cam Viewer works with MBM5 (Motherboard Monitor 5), Cam Viewer will display CPU temperature and fan speed. Please click "No" if you don't need this function and the Cam Viewer installation will be finished. When you click "Yes", please refer to below steps to start the MBM5 installation.

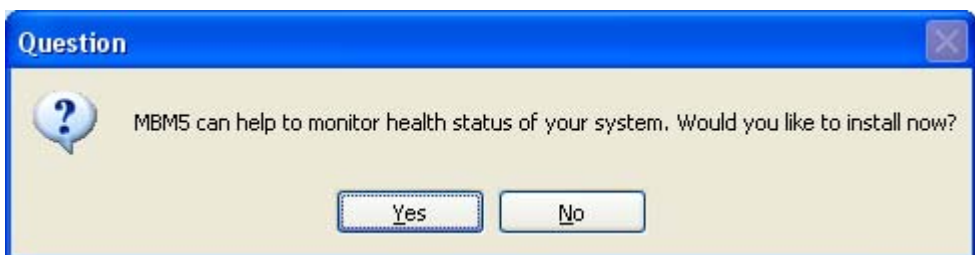


9. The “Welcome to the Motherboard Monitor 5 Setup Wizard” will display on the screen and click “Next”.

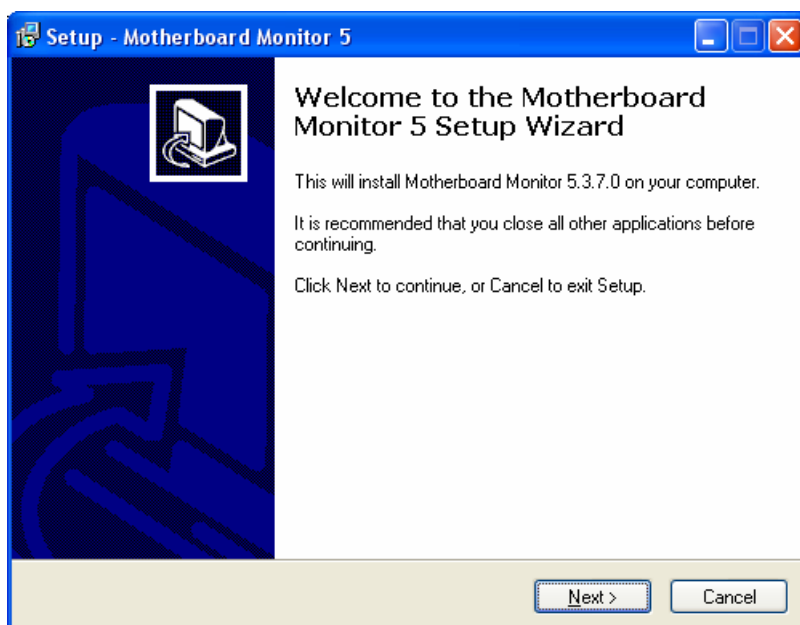


10. Please read the license agreement and then check “I accept the agreement” if you are agreed and click “Next” to continue.

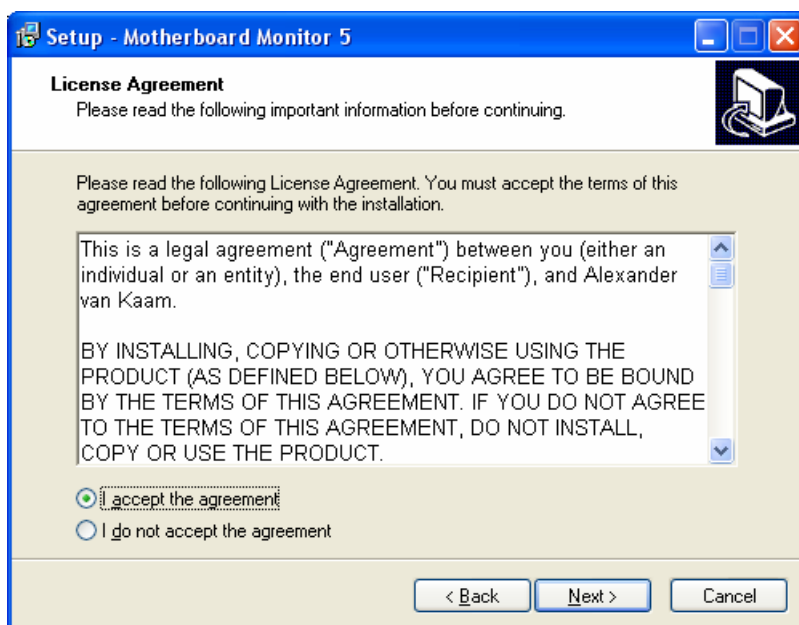


11. Please read the following important information before continuing and click “Next” to continue.

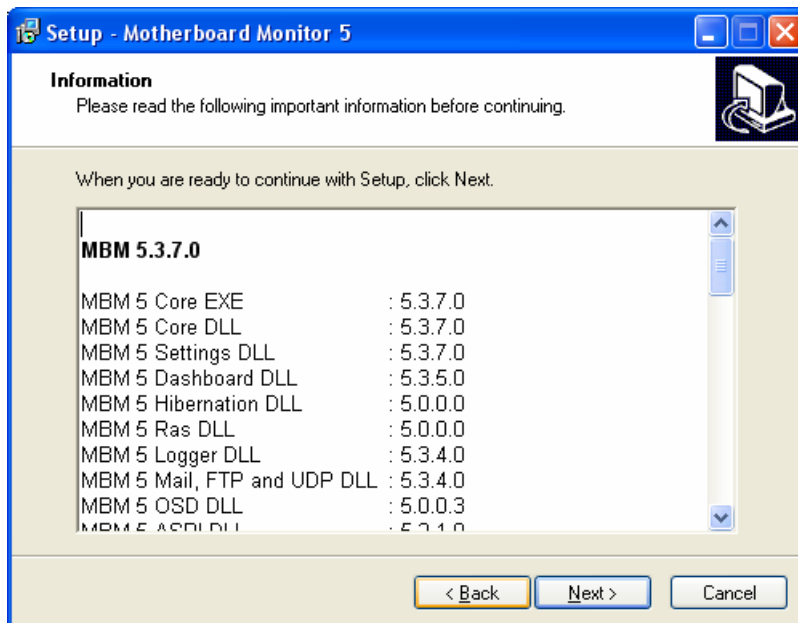


12. Please click “Next” to continue installation.

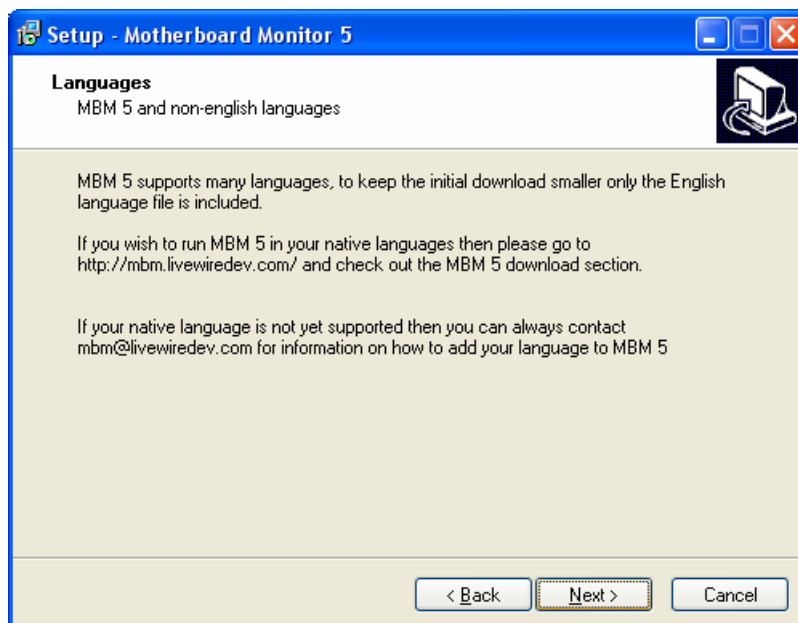


13. Please click “Next” to install with original settings, or you may click “Browse...” button to assign an install folder then press “Next”.

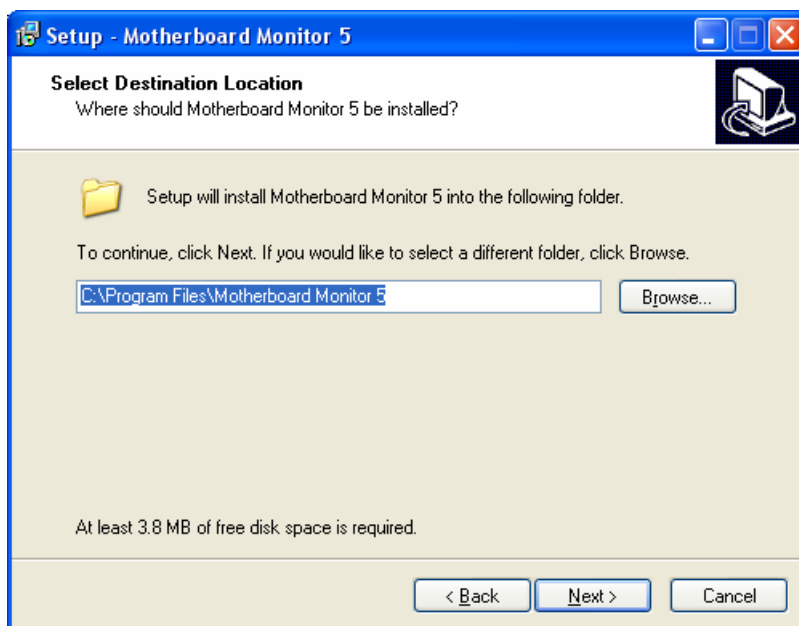


14. Please click “Next” to install with original settings, or you may click “Browse...” button to rename the program’s shortcut of Start Menu then press “Next”.

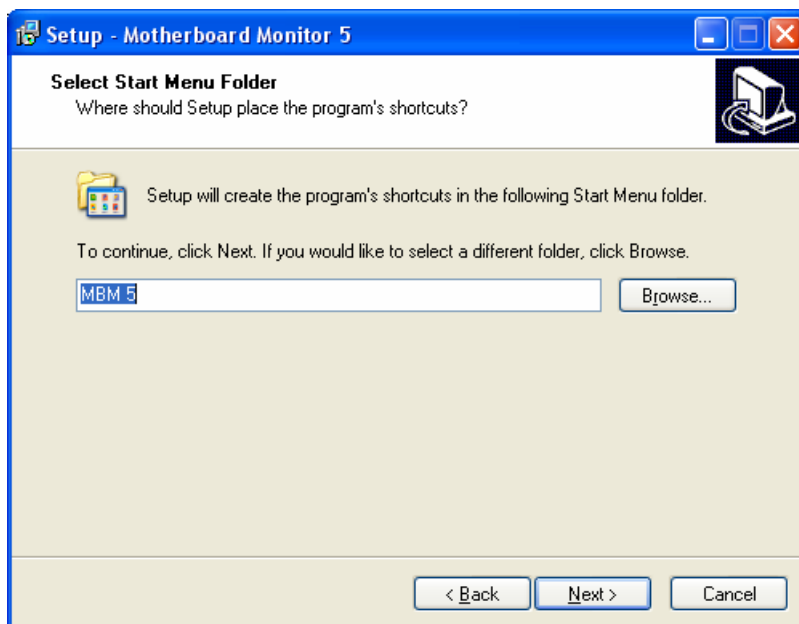


15. Please select "Replace the icons 10 seconds after MBM5 started" and click "Next" to continue installation.

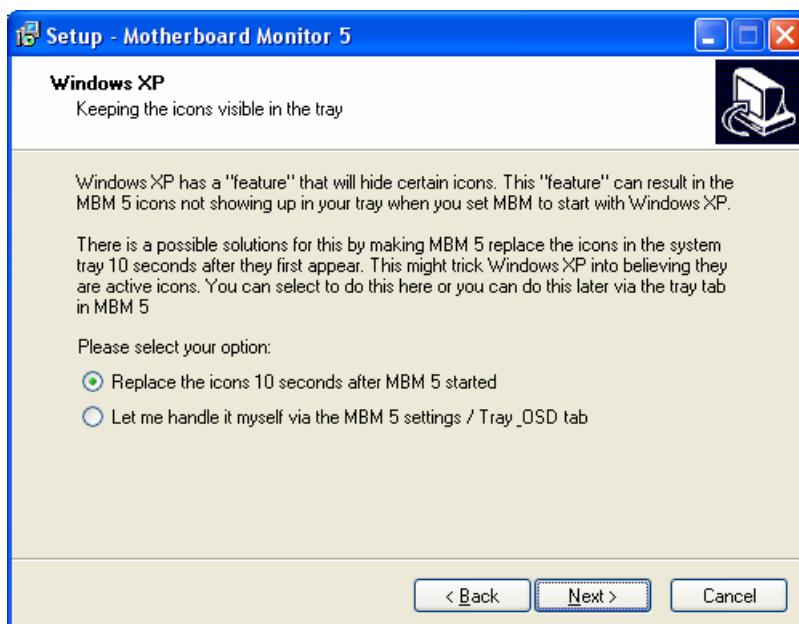


16. Please click "Next" to continue installation.

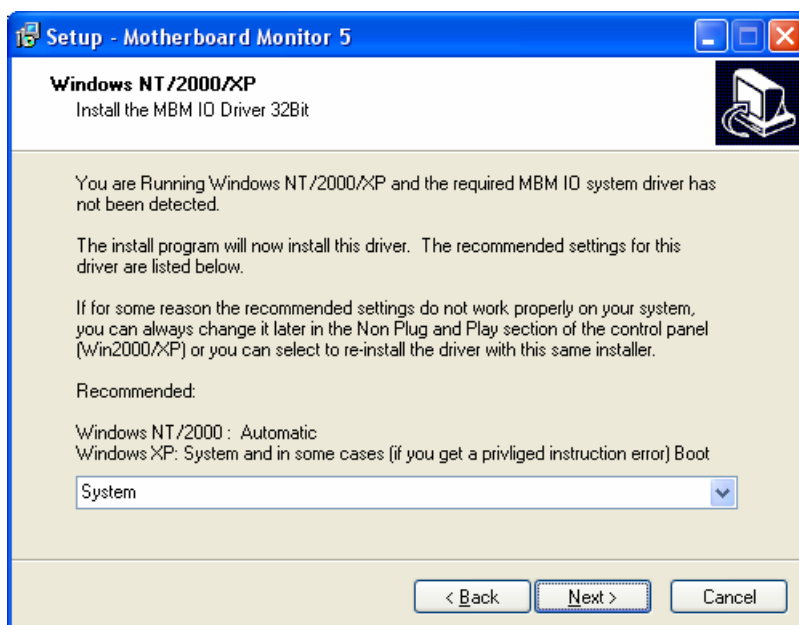


17. According to your motherboard to select correct option and click “Next” to continue.

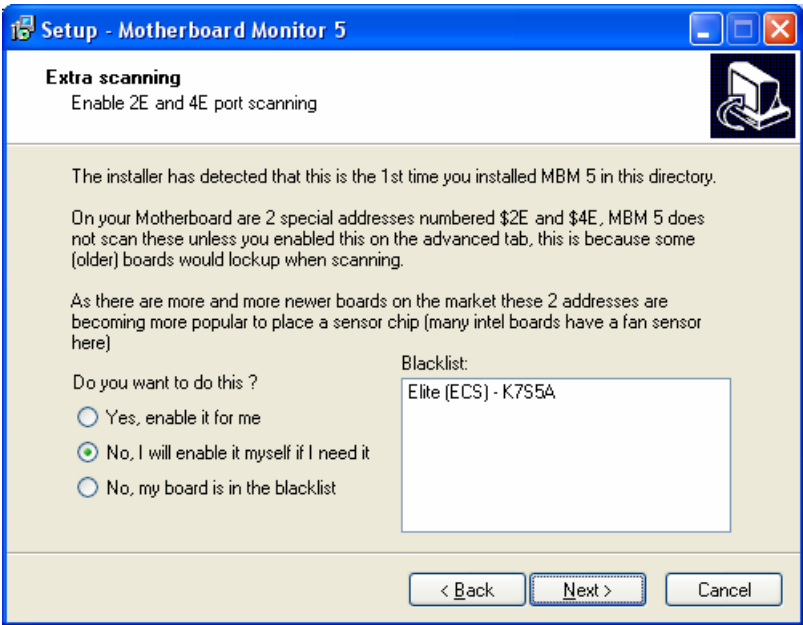


18. When “Ready to Install the Program” will display on the screen and click “Install” to continue.

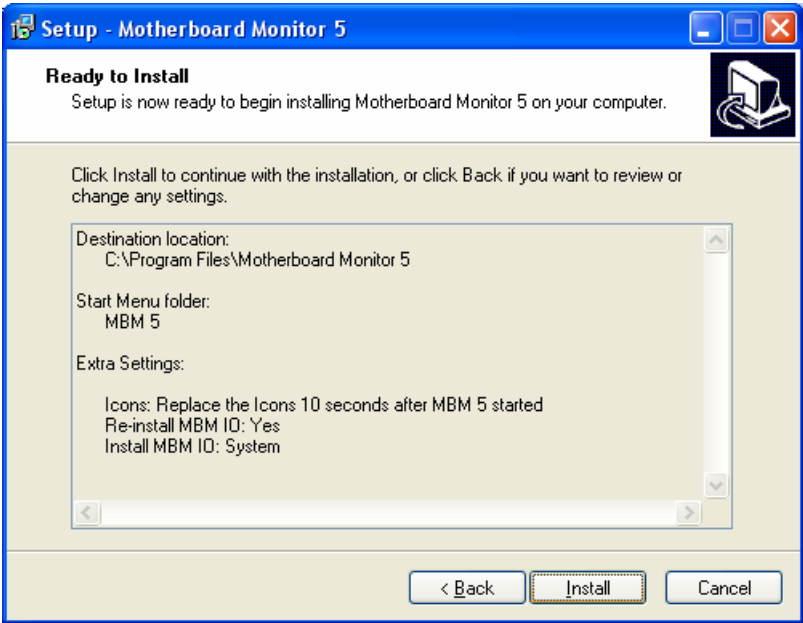


19. The “Welcome to the Motherboard Monitor Configuration Wizard” will display on the screen, please click “Next” to continue.

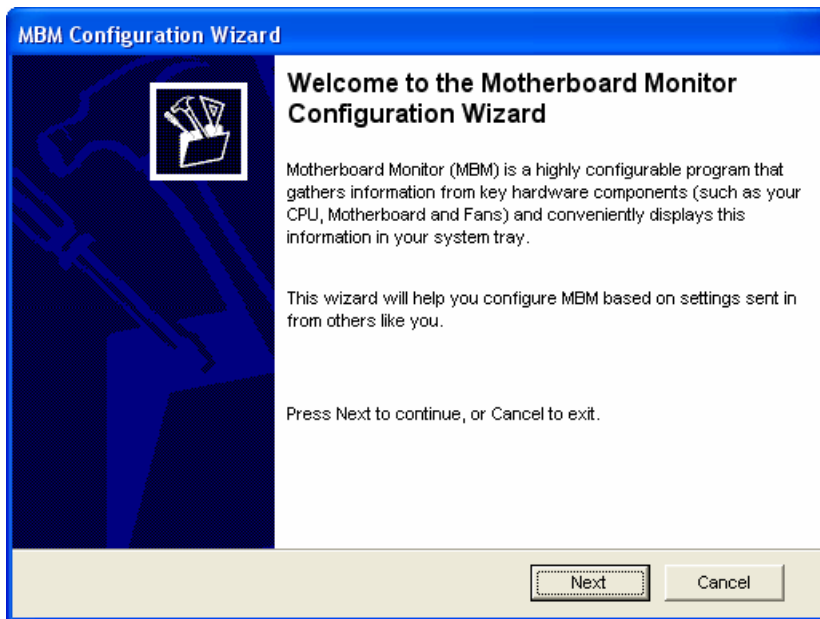


20. The “Motherboard Monitor Configuration Wizard” will display on the screen, please click “Update” to update data. Before update, please make sure your PC is connected to Internet already.

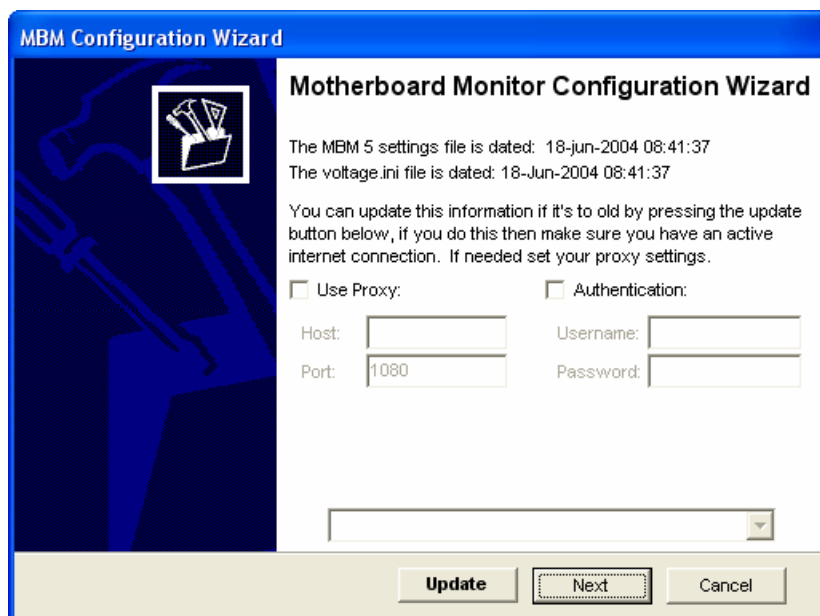


21. Wait a moment, after the program update finish, please click “Next” to continue.

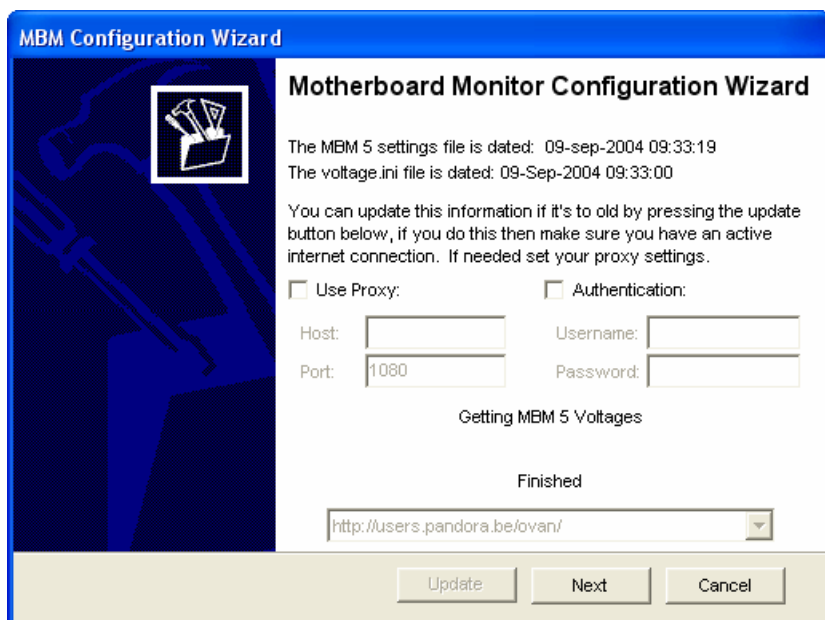


22. Please select your motherboard vendor and model name, then click “Next” to continue

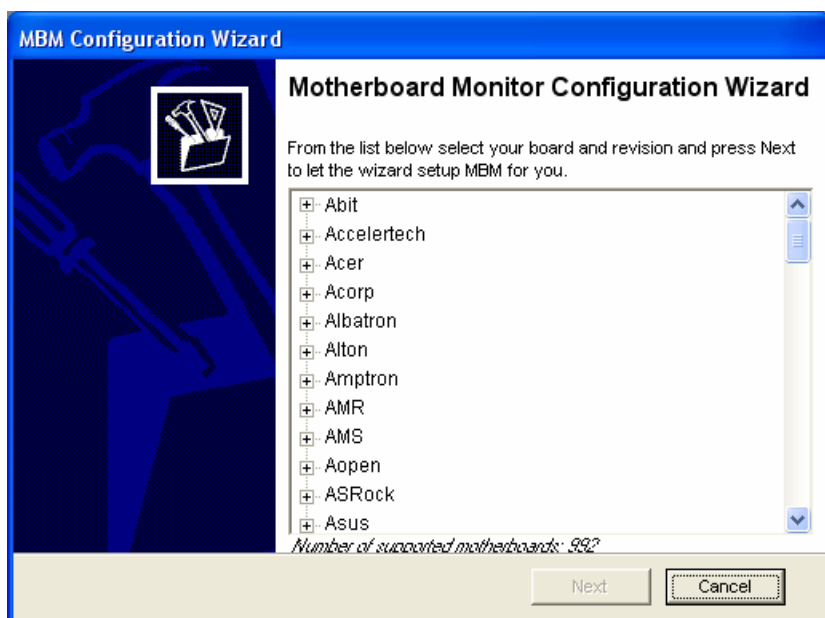

23. Please select temperature format and click "Next" to continue.

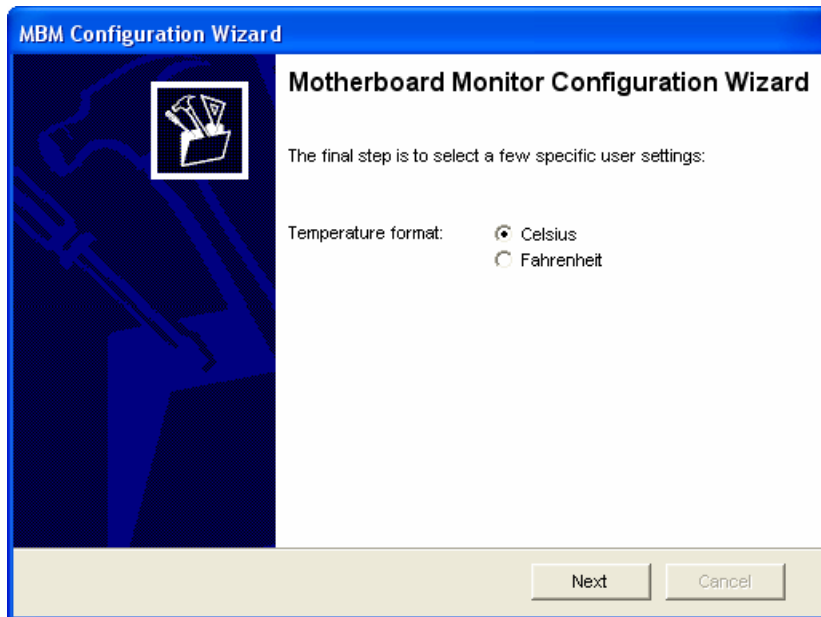

24. Please click "Finish" to end the motherboard monitor configuration wizard.

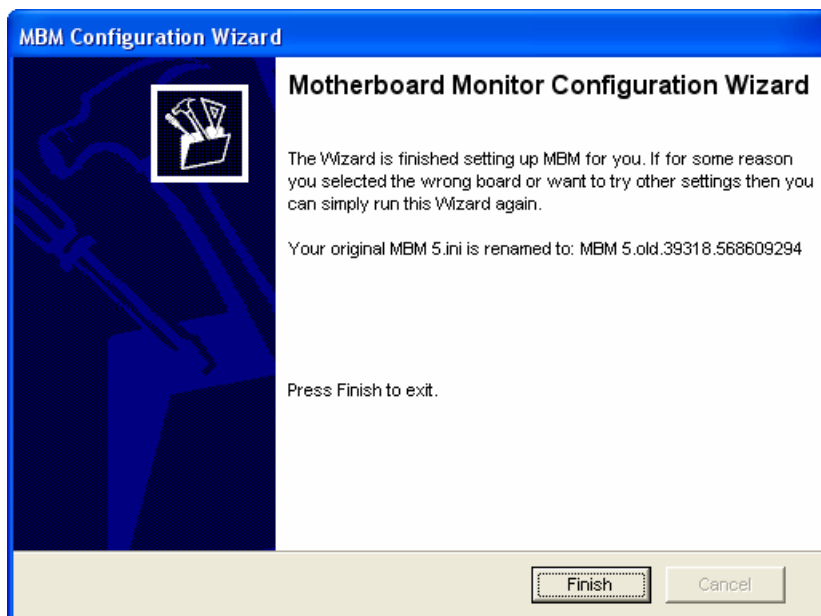


25. Please click “Yes” to restart your computer.



**Note:** Before open the Cam Viewer Pro, please insert USB dongle in the computer first.

To start the Cam Viewer Pro that click on Start > All Program > Planet CamViewer Pro > Main Console

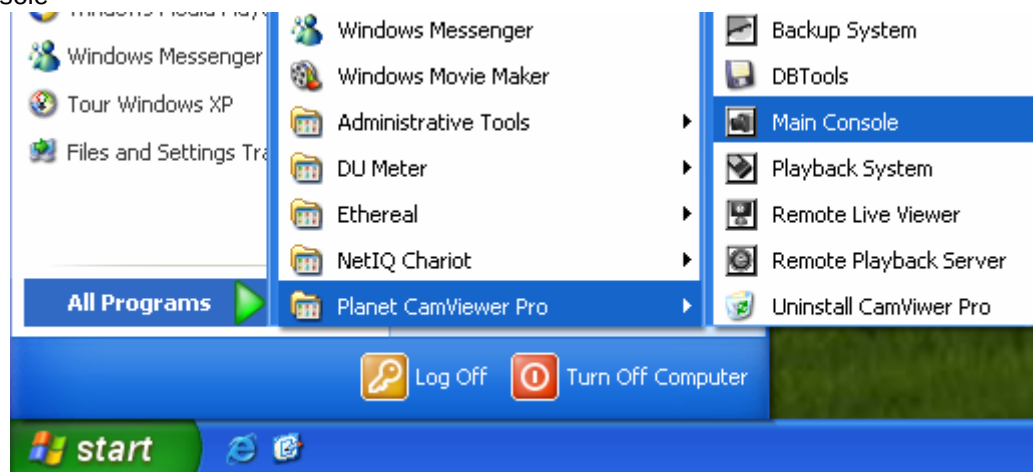

Enter the password you like into the edit box and enter again at the edit of Password Confirm. And then press "OK".



## 4. Main Console





This is the main operation system - to activate, schedule recording, setup smart guard and configure system setting.

**EXIT:** Shut down the Surveillance System or log out current user.

**MINIMIZE:** Minimize the Main Console window.

**SCREEN DIVISION:** Allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click on a particular sub-screen. Double click on the screen again to regain previous screen division layout.

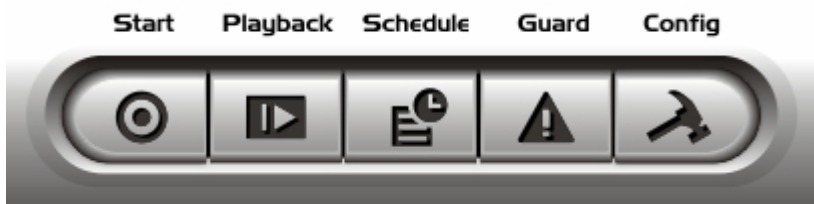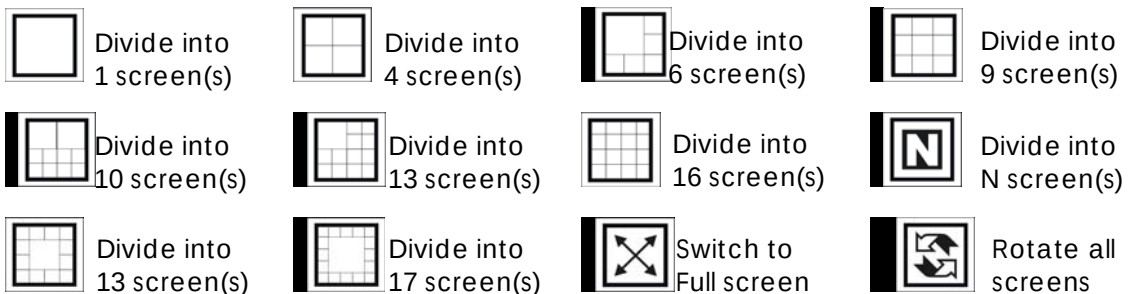

**START:** Click on the Start icon and select from the drop down menu to activate/ deactivate: (a) Recording Schedule System, (b) Smart Guard System, or (c) Counting Application. Select Start/Stop Monitor All to activate/ deactivate all the functions at once.

You may also enable secondary display, open event report, and lock the system here.


**Note:** When activating any of the monitor functions, system considers the current screen status as normal. Therefore, if you want to, for example, detect Missing Object, be sure the object needed to be protected is in its position at the moment you click Start button.

**PLAYBACK:** Click on the icon to get Playback Console. You can watch recorded video, search recorded video, adjust image of the stored data, save video/ pictures, print images, check log information and event records, and set up recording function configuration.

**SCHEDULE:** Organize recording time schedule and setup recorder configuration.

**GUARD:** Add/Edit type(s) of events that you want to detect; setup reaction(s) responding to events.

**CONFIG:** Select from the drop down menu to modify general setting, save/ load configuration settings, start counting application, access log viewer and backup files, or setup network services.

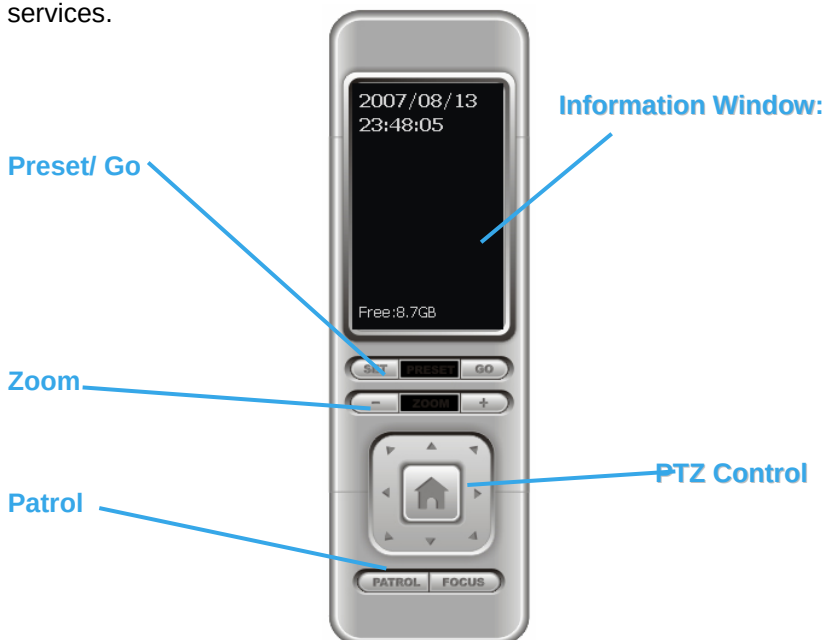

**Information Window:** Display date, time, free HD space, CPU temperature, fan speed, and customized text. To customize Information about window's setting, go to Config > General Setting > General

**PTZ Camera Control:** Control the movement of PTZ cameras. With cameras that support PTZ control, you can move, zoom, patrol, adjust the focus, and set preset points of the cameras.

**Preset/ Go:** Adjust the camera view until you are satisfied. Click on the Set icon and set up the view as the preset point 01. Adjust the camera view again and set up the preset point 02. Repeat the process until finish setting up all preset points. You can enter any names you like to instead of the preset point 01, preset point 02, preset point 03. Click on the Go icon and view the result of your setting.


**Zoom:** Click on the “+” or “–” signs to zoom in and zoom out the view.

**Focus:** You can select to have the camera focused near or far. To focus near means objects that are closer will be clearer than the objects that are further away. On contrast, to focus far means objects that are further will be clearer than the objects that are closer.


Click on the Focus icon and select auto focus if you want the system to decide the focus point for you.

**Patrol:** Go to Patrol > Set Patrol to obtain the Patrol Setup dialog. From the left window, select the cameras that you would like to have in the patrol group. Align the cameras in order in the right window and adjust the time. Rename the group name if you want. After completing the setup, check the Active option, and then click OK.

You can setup up to four groups of auto patrol. To start or stop, click on the Patrol icon in the Main Console, and select Start Patrol or Stop Patrol.

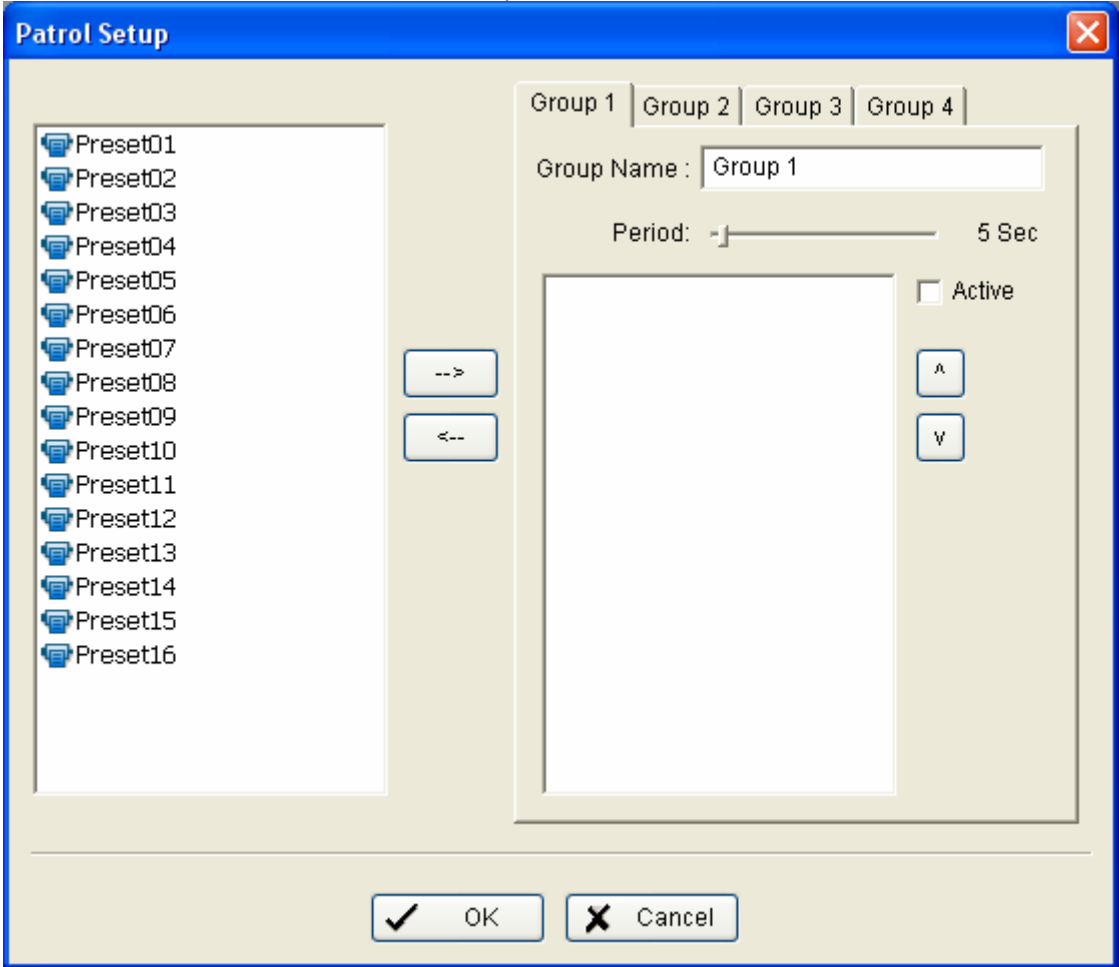


## 5. Configuration

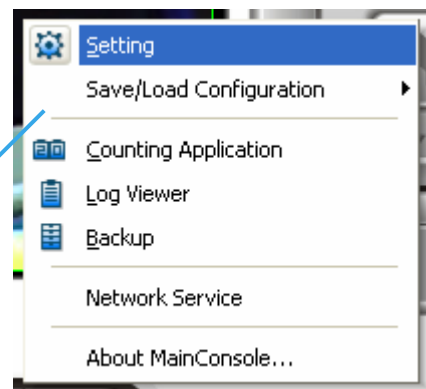

### Config

Modify the setting and access counting application, log viewer, backup, and network services. Click on the Config icon, select from the drop-down menu and open the Configuration panel.

# 5.1 Setting – General

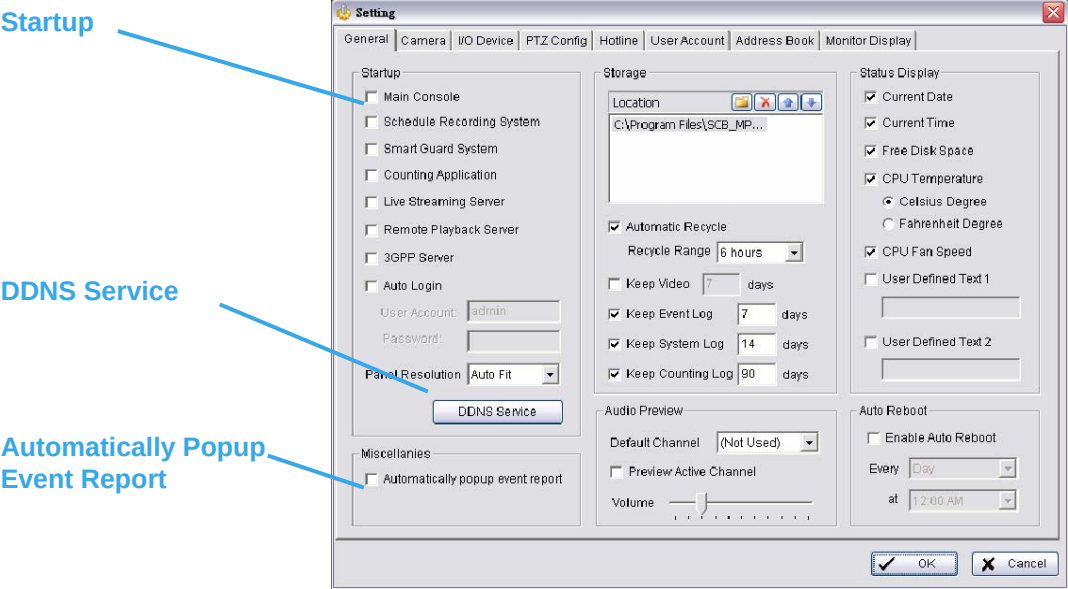

## Startup

Check the box and activate the functions as the system starts. You may start/stop the function in Monitor panel on the Main Console.


**Panel Resolution:** Set up the resolution of the control panel. You may select Auto Fit to have the system choose the best one for you.


**DDNS Service:** Dynamic Domain Name Server (DDNS) function allows you to use Live View or Web View to connect to the Main Console through Internet event if you have a dynamic IP address

Click on the DDNS button to obtain the Dynamic DNS Setup panel. Set up the DDNS function by selecting the provider type, filling in user name, password and hostname, and adjusting the update period.

## Automatically Popup Event Report

Event report dialog automatically popup when events been detected. Make sure to stop Smart Guard System before you modify the setting, otherwise the modification will not take place.

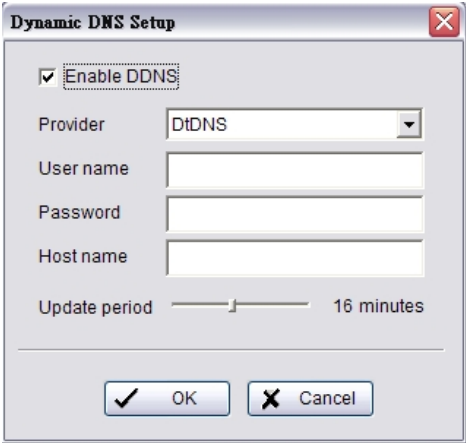

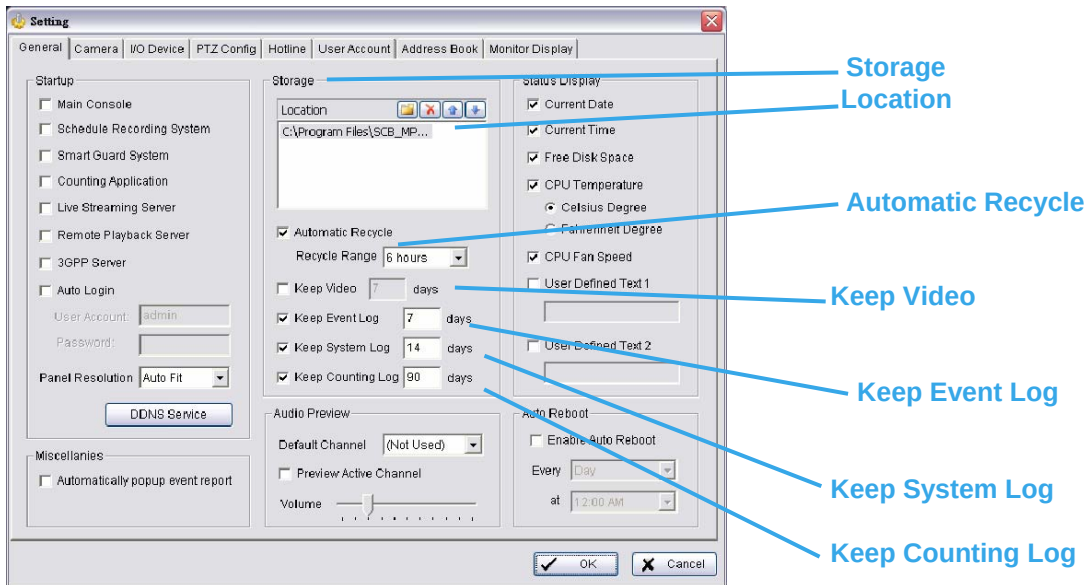

### Storage

**Location:** Assign the default folder for the system to store all data files.


**Automatic Recycle:** The system will automatically delete out-dated data to save storage space.

**Keep Video:** Delete the video records that are older than the number of days set.

**Keep Event Log:** Delete the event log data that is older than the number of days set.

**Keep System Log:** Delete the system log data that is older than the number of days set.

**Keep Counting Log:** Delete the counting application data that is older than the number of days set.

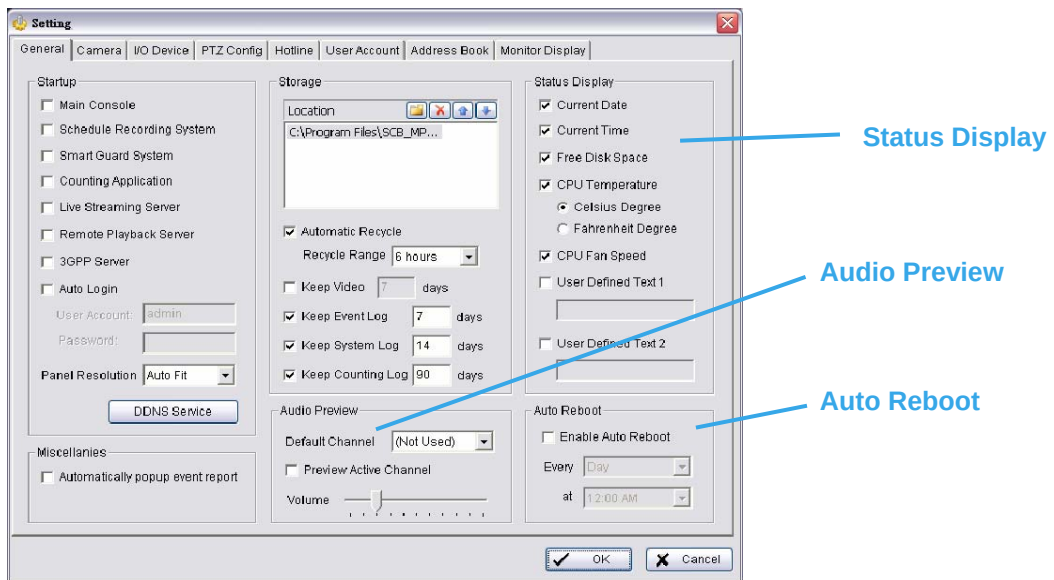

### Audio Preview

**Default Channel:** Select the audio channel that you wish to hear from in “Default Channel.”

**Preview Active Channel:** Check the “Preview Active Channel” option to hear the audio from selected video channel on Main Console. The default channel plays if the video channel isn’t selected.



System plays the audio of default channel



System plays the audio of left-top selected channel

**Volume:** Adjust the volume with the “volume bar.”

### Status Display

Check the boxes of the information that you wish to see in the information display window in the Main Console.



### Auto Reboot

Check the option of “Enable Auto Reboot ” that you can reboot the system on the time you select.




**Step 1:** Check the option of “Enable Auto Reboot”.

**Step 2:** Select the time you want to reboot.

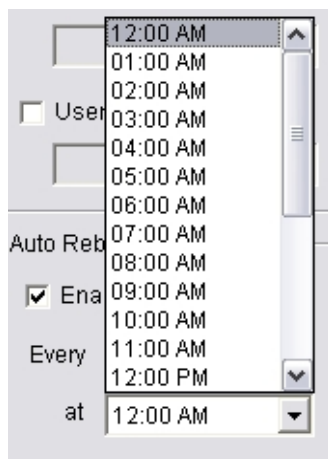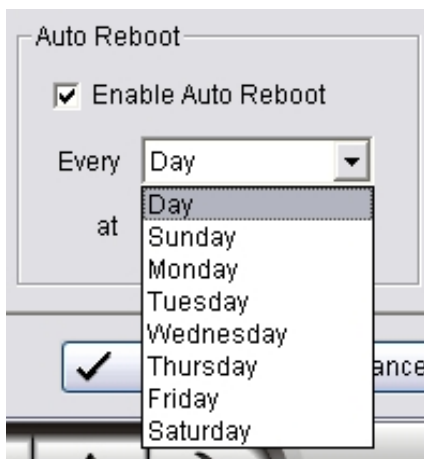


# 5.2 Setting - Camera

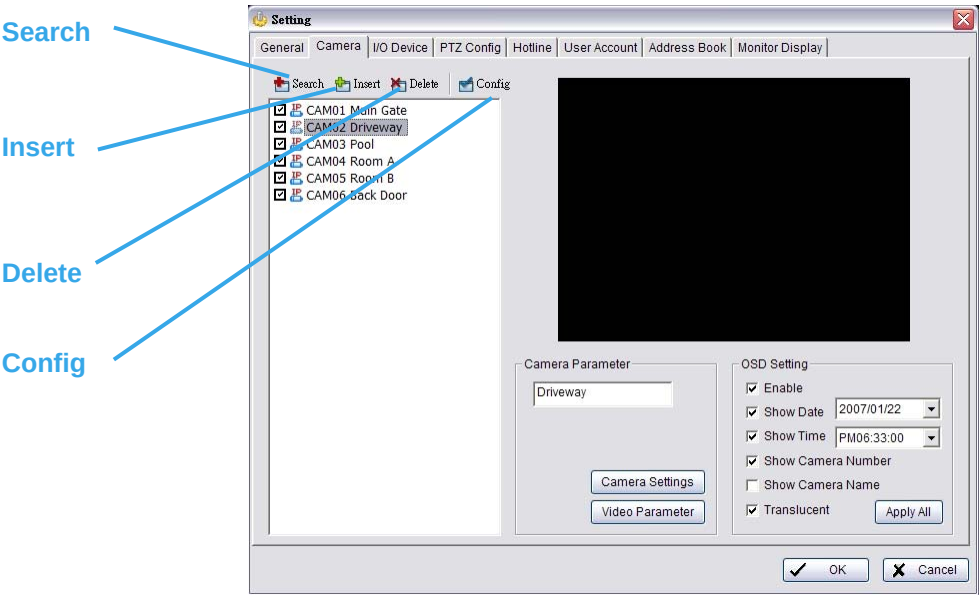

## 5.2.1 Add Camera


Four function buttons will be included in the Setting/Camera panel

**Search:** Click on the Search icon to obtain the Search IP Camera panel. The system will start scanning automatically once the panel is opened; feel free to stop scanning by clicking on the Stop Scan button.

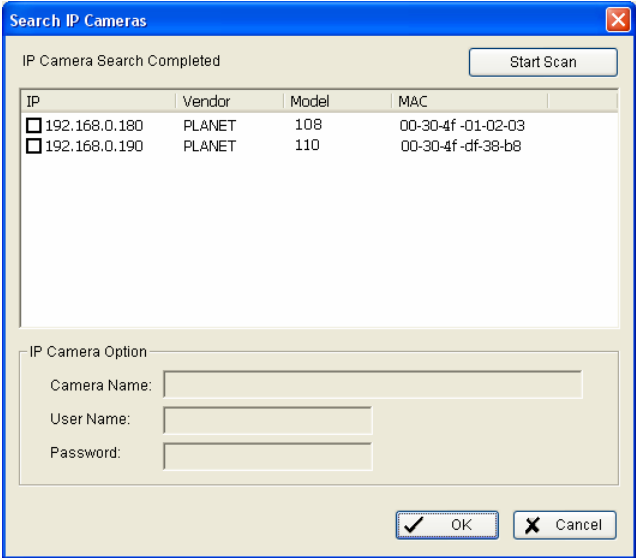

Fill in the user name and password for each IP camera found and click OK to add it to the camera list.

**Insert:** Click on the Insert icon to obtain the IP/Video Server Setting panel and add IP cameras to the list.

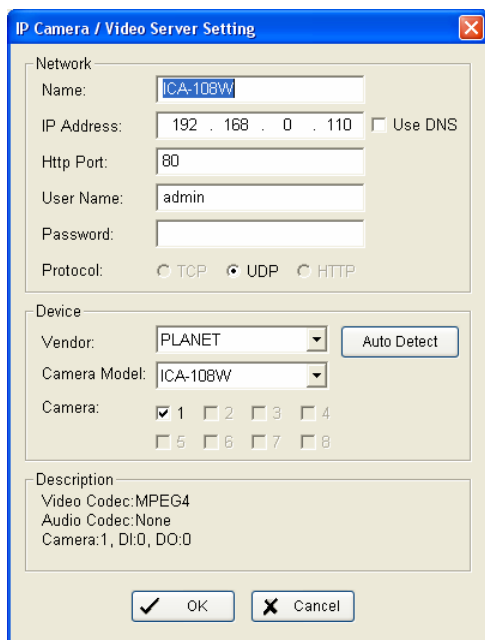

The image shows a dialog box titled "IP Camera / Video Server Setting" with a blue title bar and a red close button. The dialog is divided into three main sections: Network, Device, and Description. The Network section contains fields for Name (ICA-108W), IP Address (192 . 168 . 0 . 110), Http Port (80), User Name (admin), Password, and Protocol (radio buttons for TCP, UDP, and HTTP). The Device section contains a Vendor dropdown (PLANET), a Camera Model dropdown (ICA-108W), an Auto Detect button, and a grid of checkboxes for Camera 1 through 8. The Description section contains text for Video Codec (MPEG4), Audio Codec (None), and Camera (1, DI:0, DO:0). At the bottom are OK and Cancel buttons.

**IP Camera / Video Server Setting**

Network

Name: ICA-108W

IP Address: 192 . 168 . 0 . 110 ☐ Use DNS

Http Port: 80

User Name: admin

Password:

Protocol: ☐ TCP ☒ UDP ☐ HTTP

Device

Vendor: PLANET

Camera Model: ICA-108W

Camera: ☒ 1 ☐ 2 ☐ 3 ☐ 4  
☐ 5 ☐ 6 ☐ 7 ☐ 8


Description

Video Codec: MPEG4  
Audio Codec: None  
Camera: 1, DI: 0, DO: 0

**Delete:** Click on the delete button to remove the selected IP camera(s) from the system. Click OK to finalize the modification.

**Config:** Click on the Config button to obtain the IP/Video Server Setting panel. You can modify the IP camera settings with the Setting panel.

## 5.2.2 Camera Parameter

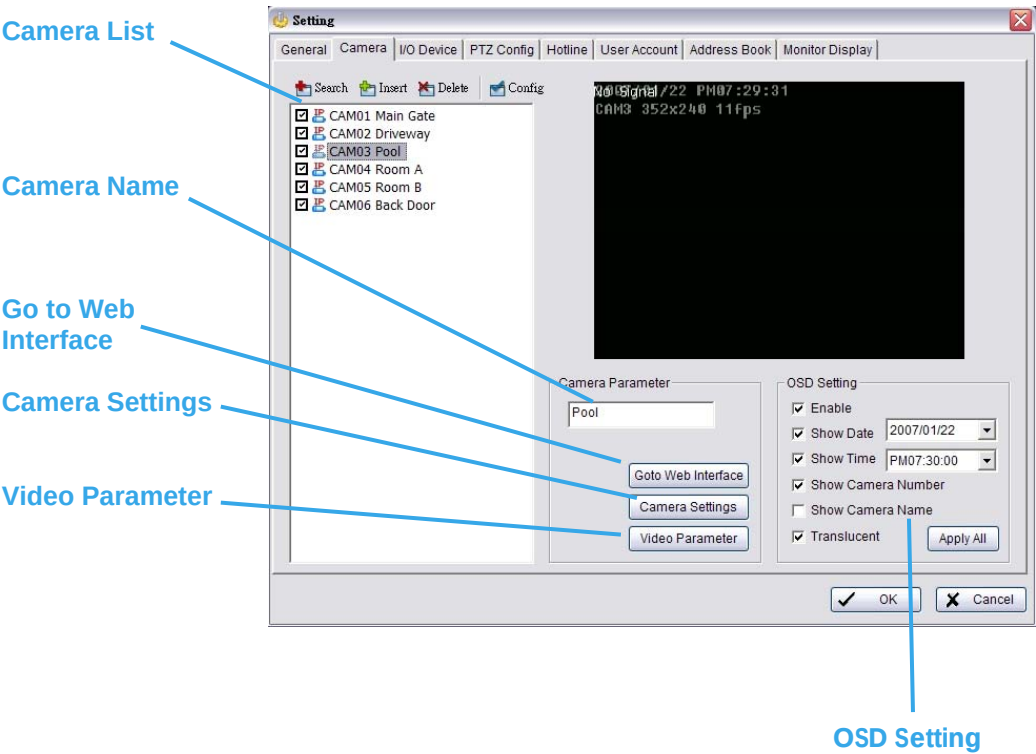

**Camera List:** The camera(s) connected to the system will show on the panel, click the name of the camera to adjust the setting.

**Camera Name:** Name the camera for your convenience.

**Go to Web Interface:** Go to Website interface to configure the camera setting (option).

**Camera Settings:** Set the camera parameter such as resolution, quality and frame rate.

**Video Parameter:** Adjusts the video's brightness, contrast, saturation, and color hue values.

**OSD Setting:** Select the information that you wish to see in the on-screen display, or the sub-screen of the camera.

### 5.2.3 IP Camera / Video Server Setting panel

IP Camera / Video Server Setting

Network

Name:

ICA-108W

IP Address:

192 . 168 . 0 . 110

☐ Use DNS

Http Port:

80

User Name:

admin

Password:

Protocol:

☐ TCP ☒ UDP ☐ HTTP

Device

Vendor:

PLANET

Auto Detect

Camera Model:

ICA-108W

Camera:

☒ 1 ☐ 2 ☐ 3 ☐ 4  
☐ 5 ☐ 6 ☐ 7 ☐ 8

Description

Video Codec:MPEG4

Audio Codec:None

Camera:1, DI:0, DO:0

☒ OK ☐ Cancel

**Network:** Fill up the Network field (including Name, IP Address, Http Port, User Name, Password and Protocol) referring to the instruction provided by the camera manufacturer. Check “Use DNS” to use domain name instead of IP address.

**Device:** Choose the IP camera manufacturer from the drop-down menu. Click on “Auto Detect” and the model name will show in the box.

**Description:** Show information of the IP camera.

## 5.3 Setting - I/O Device

**Setting**

General | Camera | I/O Device | PTZ Config | Hotline | User Account | Address Book | Monitor Display

**I/O Device Setting**

Module: IVS-110

Device: SCB-IOB0404

COM Port: COM1

ID:

Add

Modify

Remove

**Digital input/output pins of selected I/O module**

Name: Type:

| Pin | Name     | Signal Type |
|-----|----------|-------------|
| DIO | Input 0  | N/O         |
| DO0 | Output 0 | N/O         |

**Digital Input Monitor**

0

**Digital Output Simulation**

0

OK Cancel

**Module Setting:** Name the module device and ID that has been connecting the digital input/output device(s) to your system.

**Device:** This column displays the device(s) already installed to the system.

**ID:** Select the number of the I/O port to which you plug the ribbon cable.

**Input Monitor:** The device(s) is turned on if the dot is in red. By triggering the digital input device, the related icon will light up. This is used to check if the device is correctly connected or not.

**Output Monitor:** The device(s) is turned on if the dot is in red. By clicking on the icon, you may trigger the digital device connecting to the system. This can be used to test if the output device is correctly connected.

## Device Setting

**Name:** Insert the name of the device (input and output).

**Type:** Select the device type from the drop-down menu.


**N/O:** Normal Open.

**N/C:** Normal Close.

## 5.4 Setting - PTZ Config

### Basic Setting

### Advanced Setting

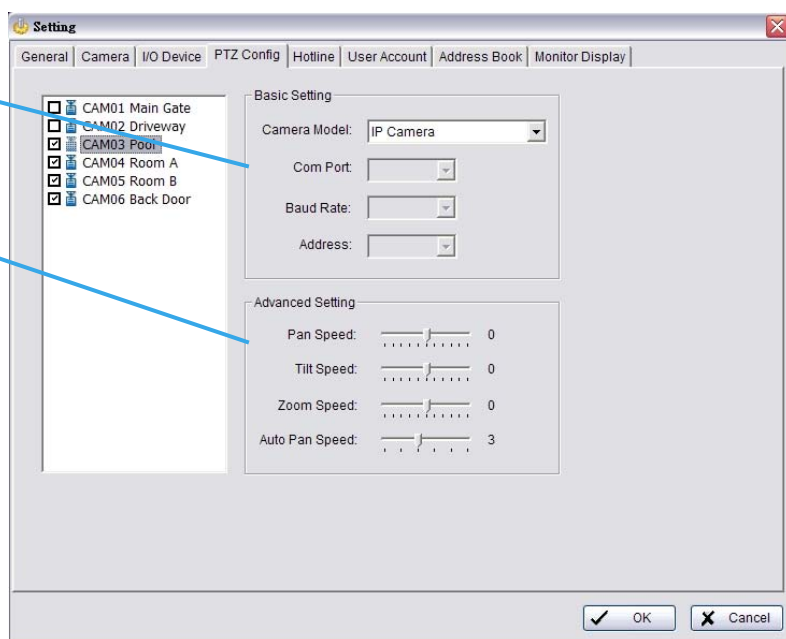

Install PTZ cameras following the instruction of the camera manufacturers. A PTZ camera is usually connected to the PC with RS-485.

Check the box on the camera list to activate the PTZ control function of a PTZ camera.

**Basic Setting:** Select the camera model, com port, baud rate, and address according to your PTZ camera.

**Advanced Setting:** You may setup the pan speed and tilt speed. Adjust the settings by dragging the bars.

## 5.5 Setting – Hotline

The screenshot shows the 'Setting' window with the 'Hotline' tab selected. The window has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Camera', 'I/O Device', 'PTZ Config', 'Hotline', 'User Account', 'Address Book', and 'Monitor Display'. The 'Hotline' tab is active, showing two main sections: 'E-Mail' and 'Telephone'. The 'E-Mail' section includes fields for '\*SMTP Server:' (with placeholder text 'Enter your SMPT here'), '\*E-Mail Sender:' (with placeholder text 'Enter your e-mail sender here'), 'E-Mail Subject:', and 'Body Content:'. There is a checkbox for 'SMTP server needs authentication' and fields for 'User Account:' and 'Password:'. A 'Send Test Mail' button is at the bottom of this section. The 'Telephone' section includes a 'Modem:' dropdown menu (set to 'Agere Systems AC'97 Modem'), a 'Wave File:' field with a 'URL' icon, 'Automatic hangup after' set to '30 sec', a 'Make Test Phone Call' checkbox, and a 'Phone Number:' field. 'Dial' and 'Hang Up' buttons are below the phone number field. At the bottom of the window are 'OK' and 'Cancel' buttons.

Configure the settings of hotlines, including E-mail and telephone calls, once an unusual event is detected.


**E-mail:** Input the following information: server, sender's E-mail address, E-mail's subject title, and body content. You may click on the Send Test Mail button to test the settings.

**Telephone:** Select the modem that the system is going to dial the info call with, and then insert the phone number. (A modem is required for voice transition.)

**Note:**


1. You must use a modem with voice capability.
2. You may select a Wave format file; it will be played in the phone to alarm the person who picks up the phone call.

# 5.6 Setting - User Account

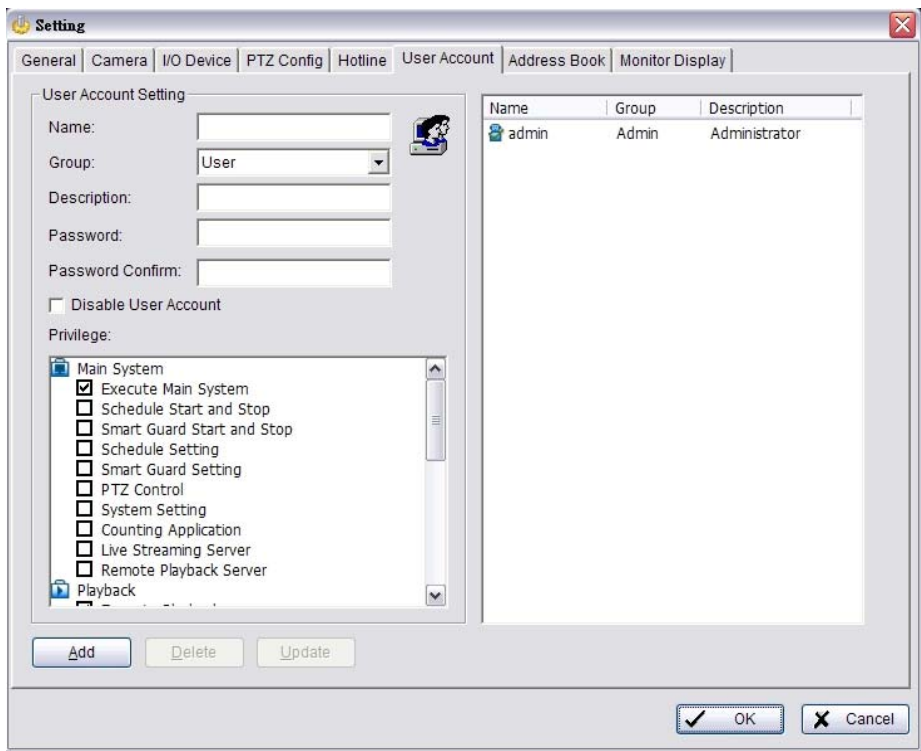


- User Account:** The administrator may manage the user accounts here. From the list on the right, highlight each account and modify the privilege setting.
- Name:** Enter the user's new account here which you want.
- Group:** Distribute user in Admin or User group.
- Password:** Enter the user's new password here.
- Password Confirm:** enter the user's new password here again to confirm.
- Disable User Account:** Choose this to disable user account.

# 5.7 Setting - Address Book

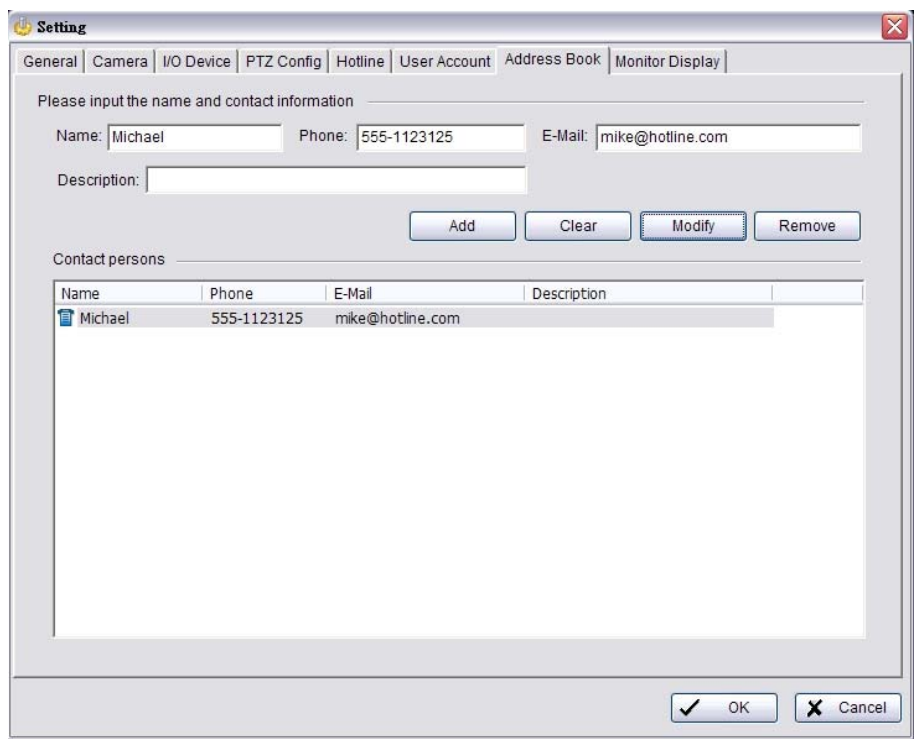

**Address Book:** Manage the address book from which you may send out a phone call or an E-mail when an unusual event is detected.

## 5.8 Setting – Monitor Display

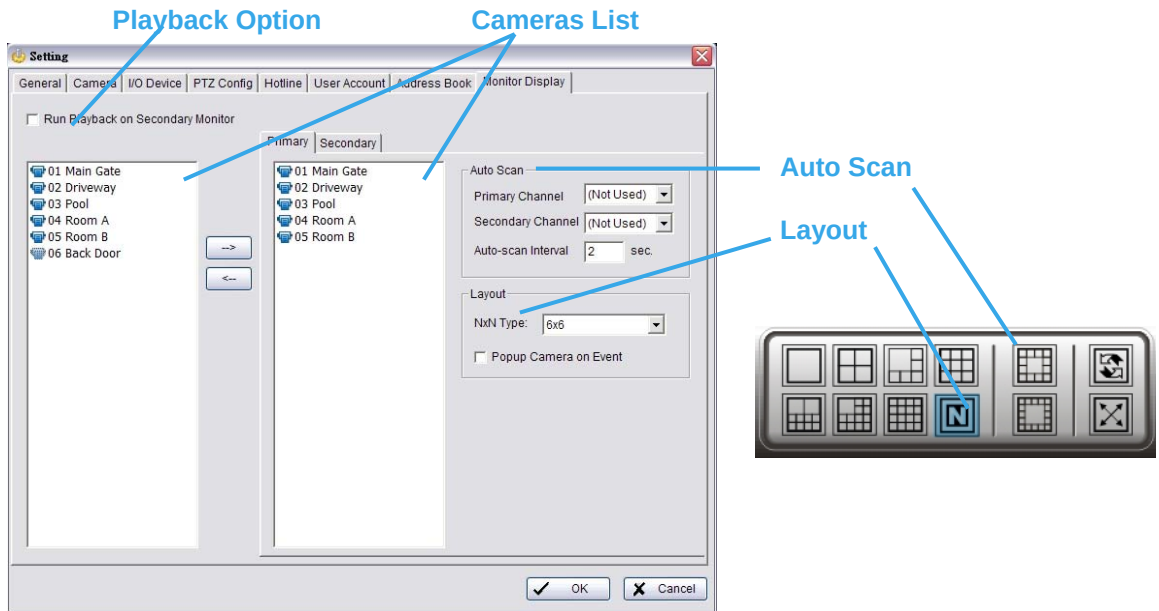

**Playback Option:** Execute Playback on the secondary monitor by checking the box. Make sure to adjust the display setting of your computer in advance to avoid system error.

**Cameras List:** The left side displays a list of all cameras; modify the cameras shown on primary/secondary monitor in the right window.

**Auto Scan:** Activate auto scan to rotate the channels/ cameras on the display screen. For instance, you may select to show only 4 sub-screens on the main console while having 16 channels connected to the system. With auto scan function, you will be able to see all 16 channels by turns. You can set up a primary channel that will always be on the screen and a secondary channel that has secondary priority.

**Layout:** Choose the number of divisions for NxN division on the Main Console screen.

## 5.9 Save/ Load Configuration




The Save/ Load Configuration function allows system users to save any specific setting as a cfg (Config) file. You may save up several different cfg files at any time.

**Save Configuration:** To save a specific setting, go to Config > Save/ Load Configuration > Save. In the popup window, type in the file name and then save it as a cfg file.

**Load Configuration:** To load a specific setting, go to Config > Save/ Load Configuration > Load. In the popup window, go to the directory that you saved the cfg files at, select any one of them and then click OK to load the file. Main Console will be automatically shutdown after loading a new configuration. Please re-start Main Console manually.

**Note:** MainConsole will be automatically shutdown after loading a new configuration. Please re-start MainConsole manually.

## 5.10 Counting Application

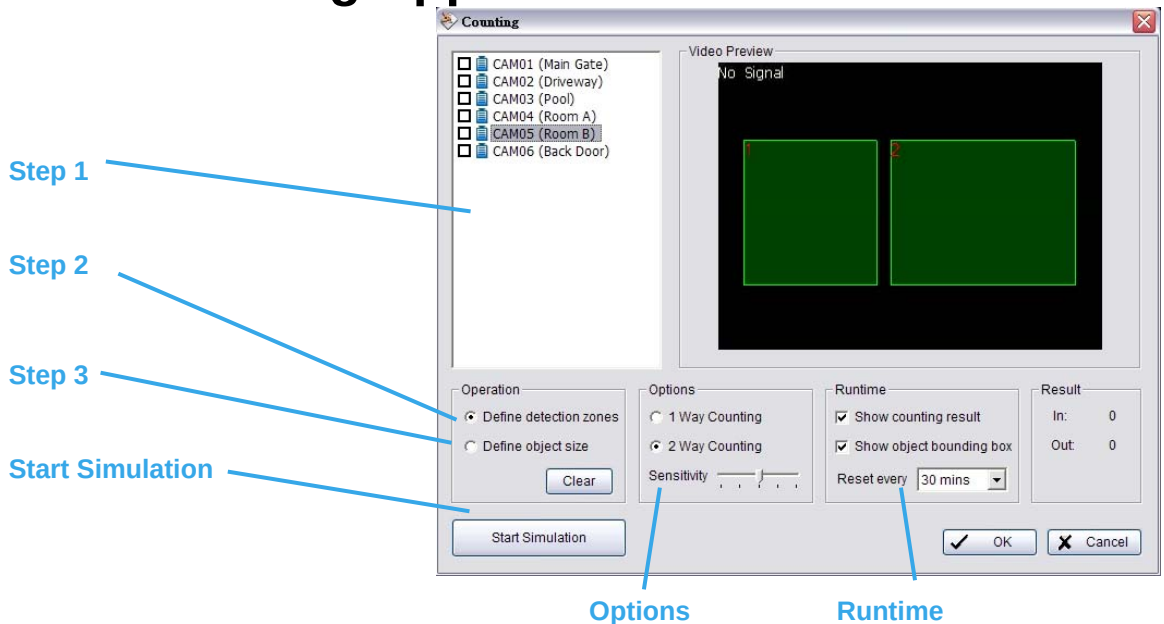

**Step 1:** Check the box of the camera to apply the Counting Application to it.

**Step 2:** In Operation section, check the option “Define detection zones” and drag the cursor to draw Region 1 and Region 2 on the Video Preview.

**Step 3:** In Operation section, check the option “Define object size” and drag the cursor to define the object size on the Video Preview. Objects that are about the size be counted while going across these two regions.


**Options:** 1Way Counting will take objects going from Region 1 to Region 2 as one count. In 2Way Counting mode, it counts either going from Region 1 to Region 2 or from Region 2 to Region 1.

**Runtime:** Check the boxes to show the counting result on the screen and/ or show object bounding box, which draws the shape of the object that the system detects in red squares. You can choose from the drop-down menu of how long you want to reset the counting number.

**Start Simulation:** Click to test the setting.

# 5.11 Log Viewer

## 5.11.1 Log Viewer – Unusual Event

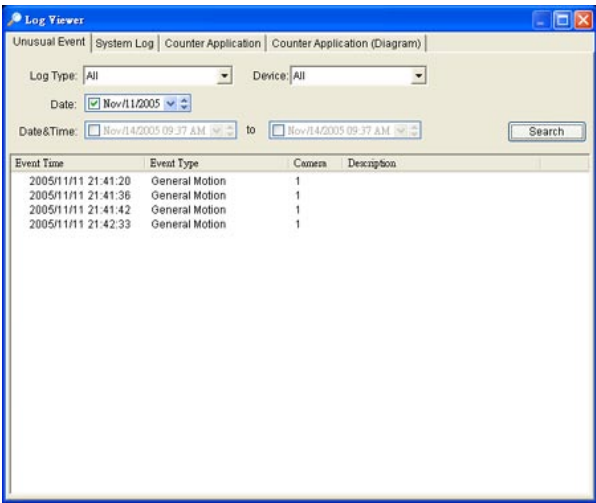

**Unusual Event:** View the history of unusual event that had been detected by the Smart Guard System.

**Step 1:** Choose the type of event you want to check or select “All” from the drop-down menu for all types of events.


**Step 2:** Select the camera you want to check the event(s) from or select “All” for all available channels.

**Step 3:** You may view events happened on a particular date or during a given time period. To search and view unusual event happened on a particular date, mark the box right next to “Date” and indicate the date.

You may also point out two different time points and search for unusual events happened during the period. Mark the box in the Date&Time column and then enter the date and time.

**Step 4:** Click Search.

## 5.11.2 Log Viewer – System Log

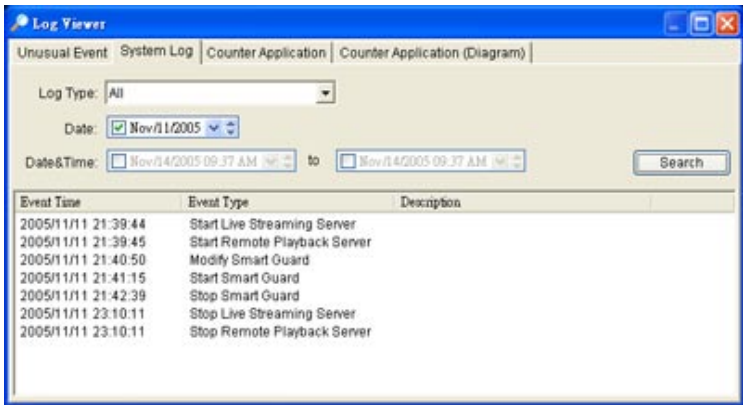

**System Log:** You can choose the log type from the drop-down menu, following is a complete list of all log types:

- |                          |                                   |
|--------------------------|-----------------------------------|
| 1. Main Console Startup  | 12. Stop Smart Guard              |
| 2. Main Console Shutdown | 13. Modify Smart Guard            |
| 3. User Login            | 14. Modify Schedule               |
| 4. User Login Failed     | 15. Modify Configuration          |
| 5. Start Schedule        | 16. Start Live Streaming Server   |
| 6. Stop Schedule         | 17. Stop Live Streaming Server    |
| 7. Execute Recycle       | 18. Modify Live Streaming Server  |
| 8. Execute Backup        | 19. Start Remote Playback Server  |
| 9. Enable Channel        | 20. Stop Remote Playback Server   |
| 10. Disable Channel      | 21. Modify Remote Playback Server |
| 11. Start Smart Guard    | 22. IP Camera Connection Lost     |


**Step 1:** Choose the type of event you want to check or select “All” from the drop-down menu for all types of events.

**Step 2:** You may view events happened on a particular date or during a given time period. To search and view unusual event happened on a particular date, mark the box right next to “Date” and indicate the date. You may also point out two different time points and search for unusual events happened during the period. Mark the box in the Date&Time column and then enter the date and time.

**Step 3:** Click Search.

### 5.11.3 Log Viewer - Counting Application

**Counting Application:** Display the history of Counting Application during a given time period.

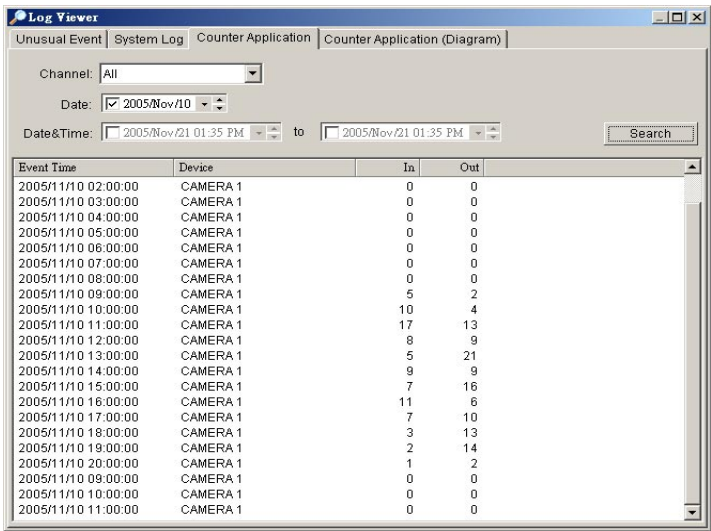


**Step 1:** Select the channel you want to check or select “All” from the drop-down menu for all channels.

**Step 2:** You may view events happened on a particular date or during a given time period. To search and view unusual event happened on a particular date, mark the box right next to “Date” and indicate the date. You may also point out two different time points and search for unusual events happened during the period. Mark the box in the Date&Time column and then enter the date and time.

**Step 3:** Click Search.

## 5.11.4 Log Viewer - Counting Application (Diagram)

**Counting Application (Diagram):** Display the Counting Application data in diagram format.

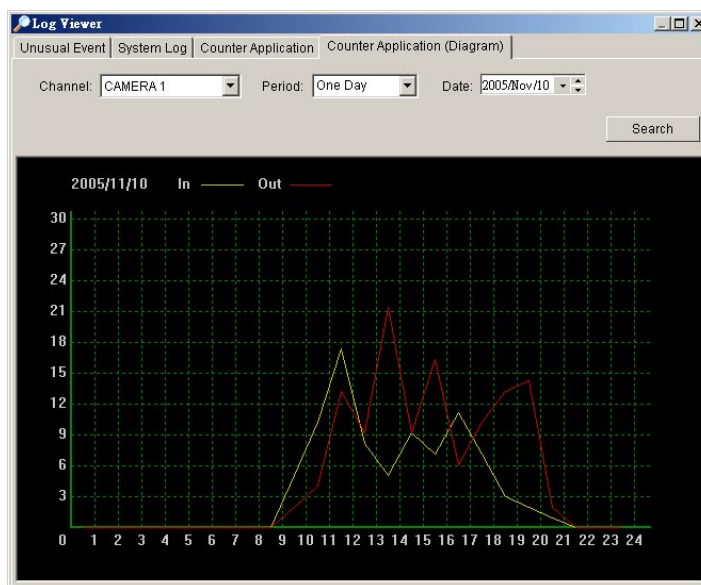

**Step 1:** Select the channel you want to check or select "All" from the drop-down menu for all channels.

**Step 2:** From the drop-down menu, set up how you would like the diagram to be displayed. You have the options of one day, one month, or one year.

**Step 3:** Select a specific date to make it the start point of the diagram.


**Step 4:** Click Search.

# 5.12 Backup


## 5.12.1 Backup

The backup function saves video record and other log information. User may open backup files on any PC with Windows Operation System and operate the full function Playback panel on it. Follow the instructions below to obtain backup files.

**Step 1:** Click on “New Period” to obtain the Select DateTime Period panel.

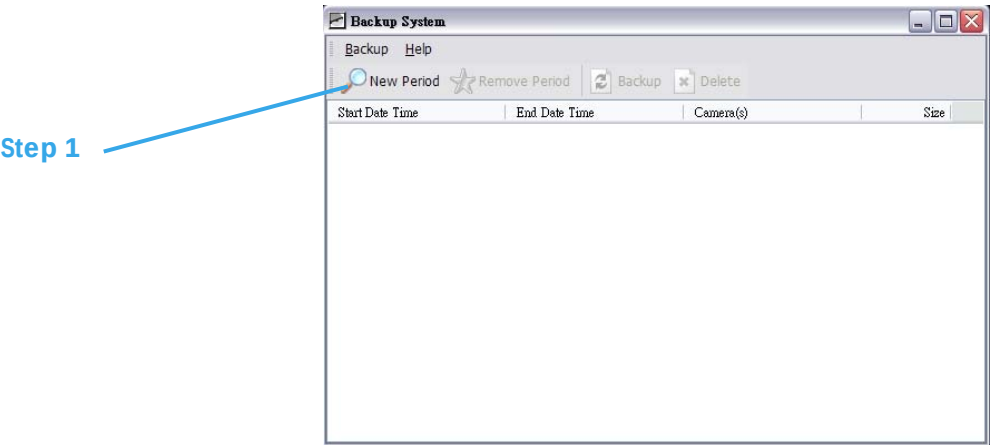

**Step 2:** From the record date section, select the date you want to backup from. You will see color lines appear in the time table implying available data recorded. Red, green, and blue stands for record always, record on motion, and record on event data files, respectively.


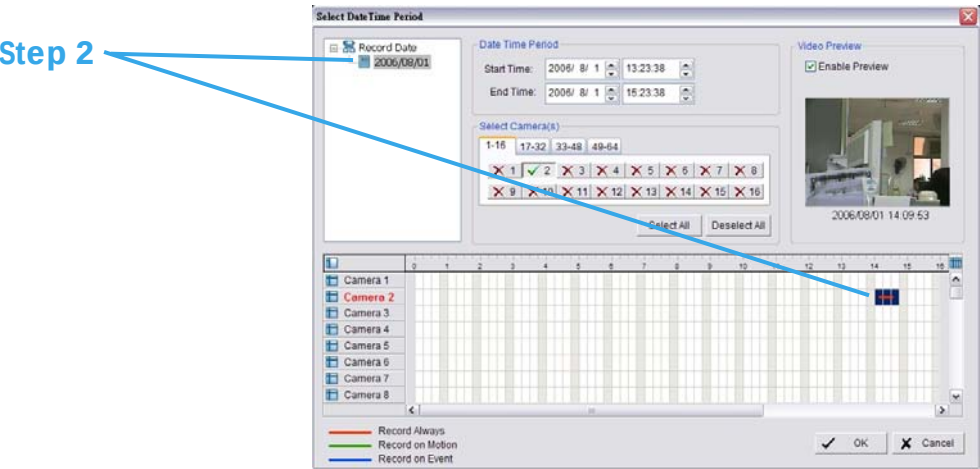


**Step 3:** Select the data you want to backup by highlighting the time period. Besides the time-table, you may also set up start time and end time in the Date Time Period section.

**Step 4:** Click on the camera number icon to add camera(s) or click Select All to add all the cameras.

**Step 5:** Check the box of Enable Preview to get the preview of the video you select.


**Step 6:** Click OK when the settings are complete and go back to the Backup panel.

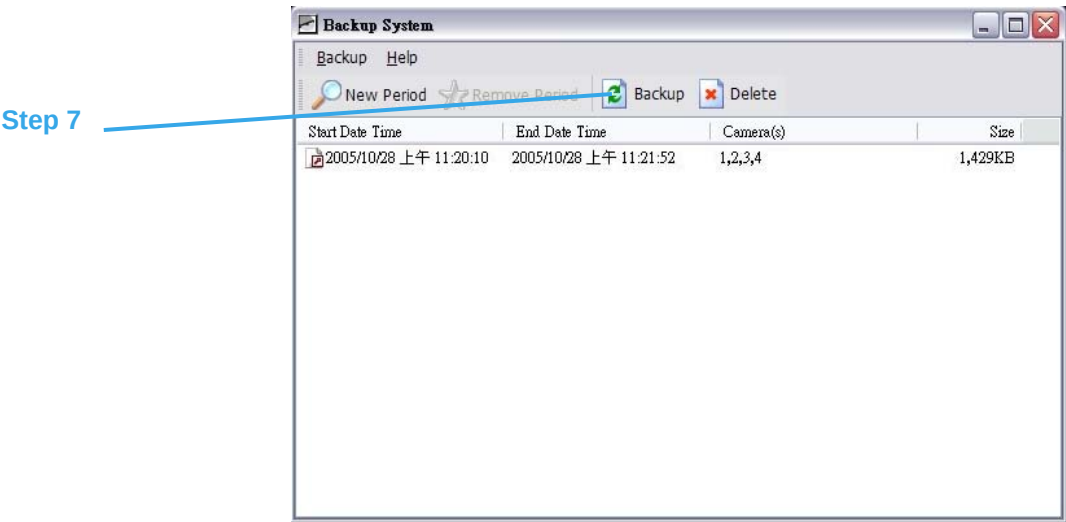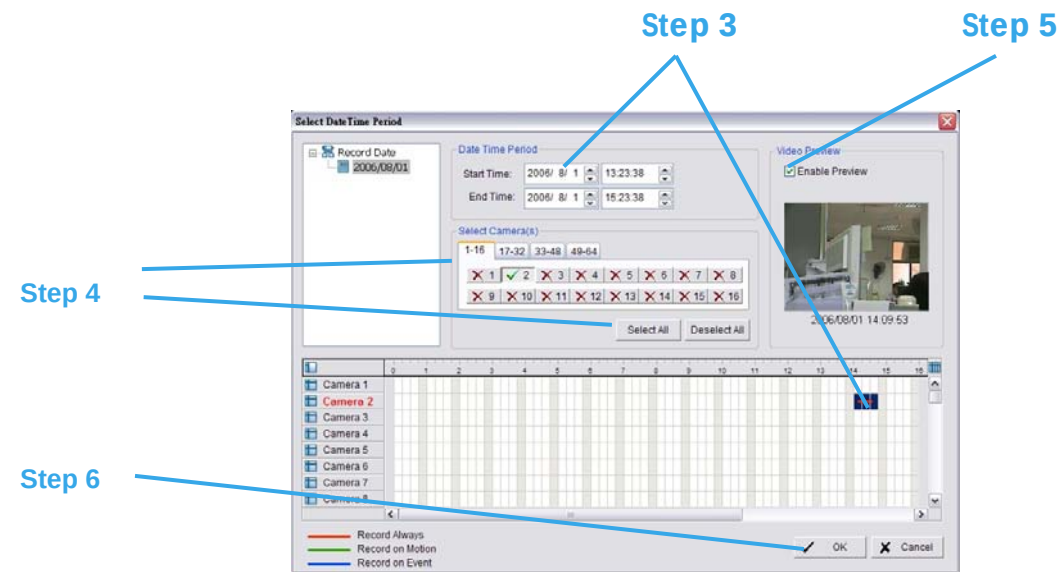

**Step 7:** Click the Backup icon to see the size of the file.

**Step 8:** Choose the path you want to save the file or burn the file into a CD (direct CD burning for Windows XP only).


**Step 9:** Select the log information you would like to backup (Event Log, System Log and/or Counter Log) and then click OK.

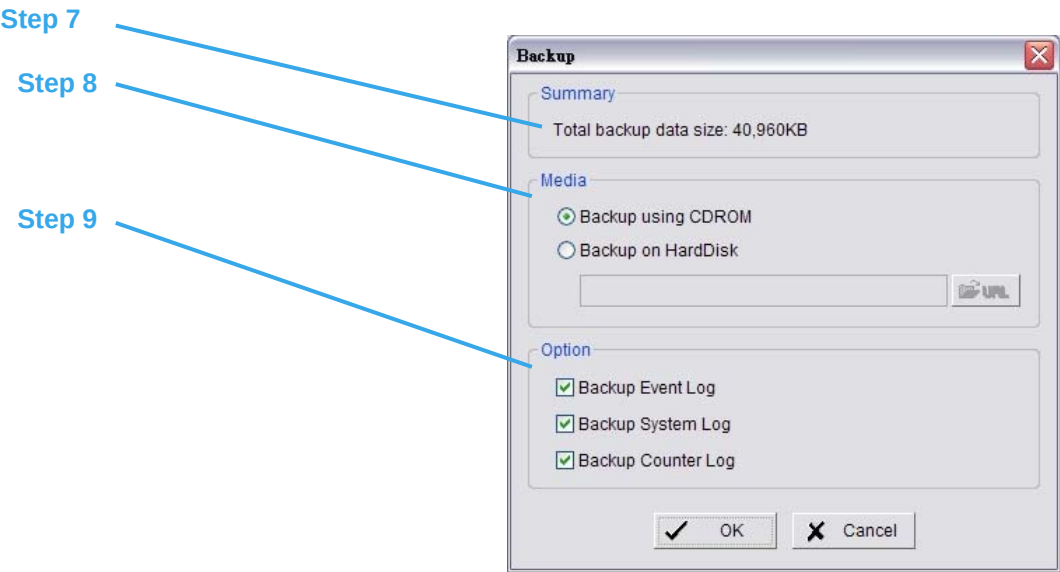

## 5.12.2 Delete Recorded Information from the System

**Step 1:** Click on “New Period” to obtain the Select Date Time Period panel.

Step 1

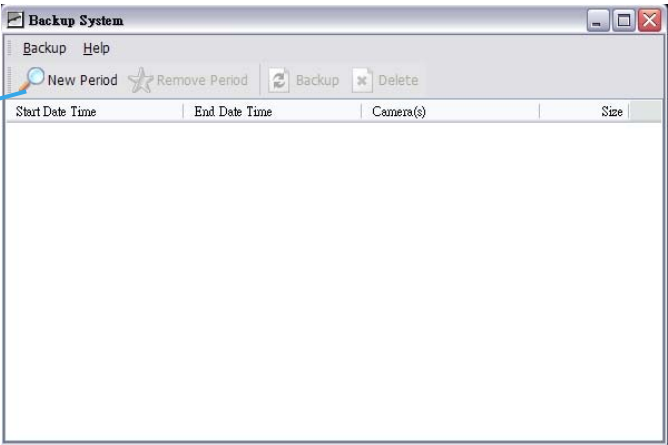


**Step 2:** From the record date section, select the date you want to delete the file from. You will see color lines appear in the time table implying available data. Red, green, and blue stands for record always, record on motion, and record on event data files, respectively.

**Step 3:** Select the data you want to delete by highlighting the time period. Besides the time-table, you may also set up start time and end time in the Date Time Period section.

Step 2


Step 3

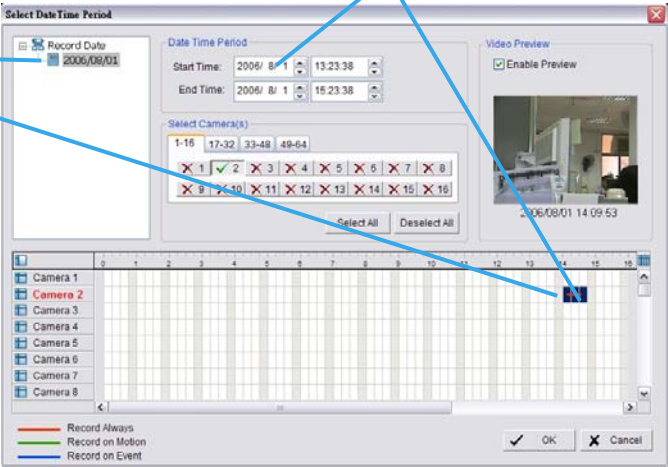


Step 4: Click on the camera number icon to add camera(s) or click Select All to add all the cameras.

Step 5: Check the box of Enable Preview to get the preview of the video you select.


Step 6: Click OK when the settings are complete and go back to the Backup panel.

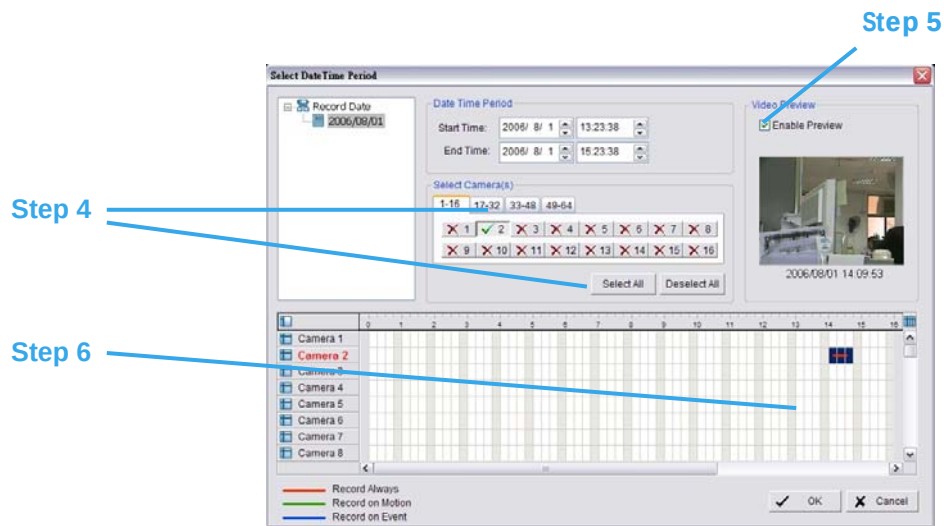

Step 7: Click on the “Delete” icon and delete the data.  
*Note:* the deleted video cannot be recovered.

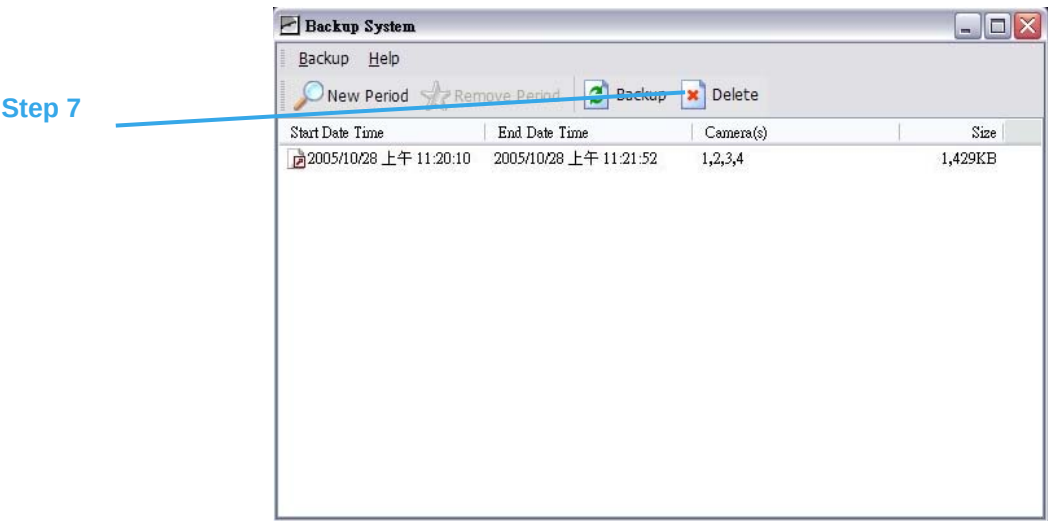

## 5.13 Network Service

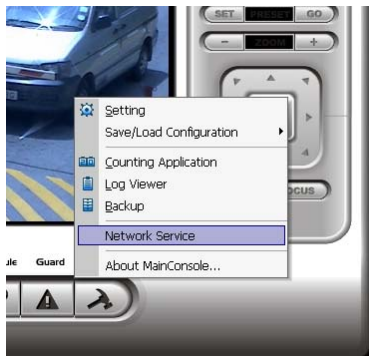


There are 3 types of network services: live streaming server, remote playback server, and 3GPP service. From the Main Console, go to Config > Network Service to obtain the Network Service panel.

### 5.13.1 Live Streaming Server

When starting the live streaming function of your computer, you allow remote users to log on to the specific computer and view cameras that are connected to it. As system administrator, you are able to monitor these accounts in order to maintain the system efficiency.

#### Main

On Live Streaming Server panel, you can see the clients who are currently logging on to your computer and watching the live video from the remote side.

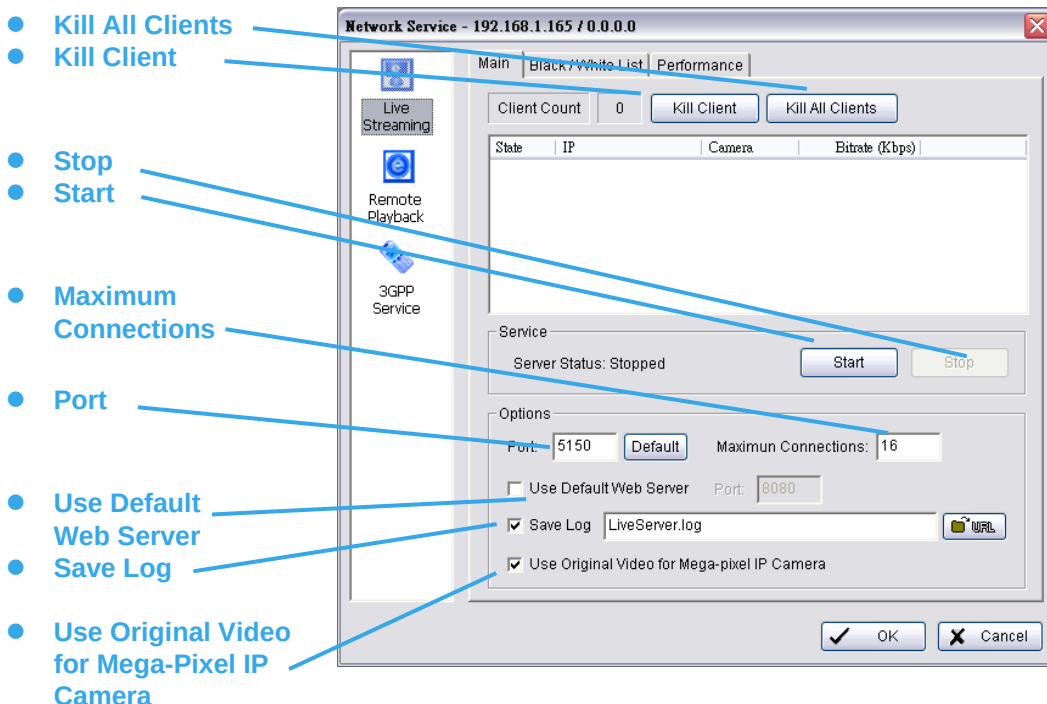

**Start:** By starting the system, you turn the computer into a live streaming server; thus allow remote users to log on to the system.

**Kill Client:** Highlight an IP address and click on the “Kill Client” button to block a client from your system.

**Kill All Clients:** By clicking on this button, you may block all the clients logging to your system.

**Stop:** Stop broadcasting live stream video.

**Options:** You may only adjust the setting when the server is stopped.

**Port:** Assign a port for the clients to connect to your system to the network.


**Maximum Connections:** Number of connections that are allowed to connect to your system. One camera video counts as one connection.

**Use Default Web Server:** Activate the Web server by checking the box; clients will be able to watch live video via Internet Explorer. The port for live streaming server is set to 80 by default. (\*must check this item for system access via IE)

**Save Log:** Save the log information at appoint folder.

**Use Original Video for Mega-Pixel IP Camera:** Check this box for original Mega-Pixel resolution; otherwise, the resolution will be compressed for better transmitting quality purpose.

### Black/ White List

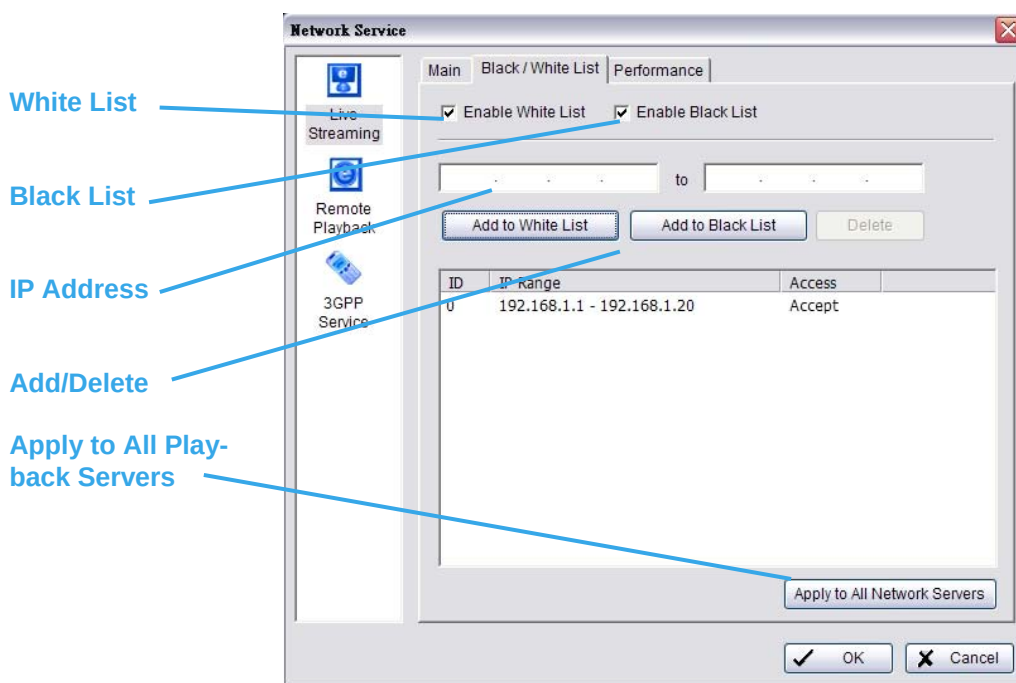

**White List:** Check the “Enable White List” box to activate the white list filter. Only IP from the white list is allowed to log in.

**Black List:** Check the “Enable Black List” box to activate the black list filter. IP from the black list will be blocked.

**IP Address:** Enter an IP address into the IP address field on the left. To add an IP address range to the system, enter 2 sets of IP address to indicate a series of IPs.


**Add/Delete:** To Add the IP(s) onto the list or remove it from the list.

**Apply to All Playback Servers:** To apply the setting to both live streaming server and remote playback server.

Performance

Total bit rate

Individual Camera bit rate

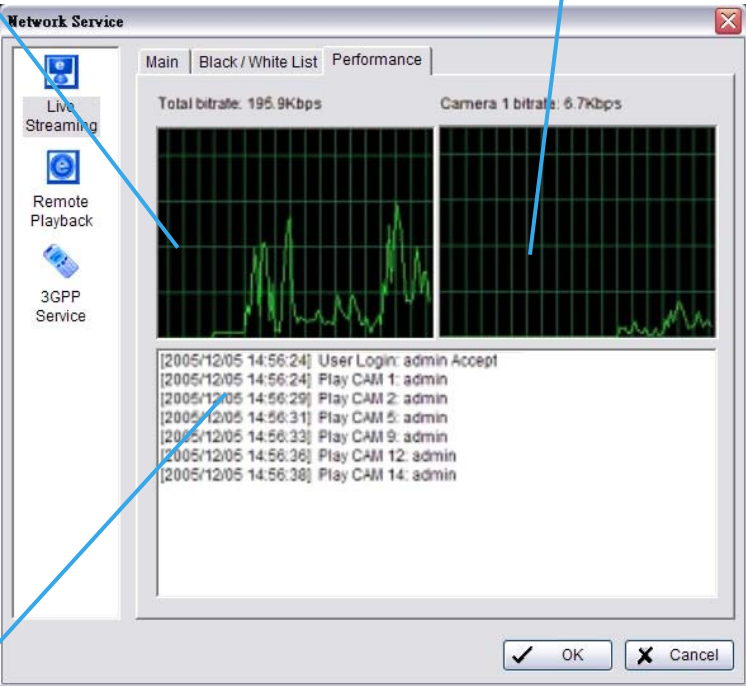


Live Streaming Server log information

### 5.13.2 Remote Playback Server

When starting the remote playback function of your computer, you allow remote users to log on to the specific computer and withdraw data files that are stored on it. As system administrator, you are able to monitor the accounts that log on in order to maintain the system efficiency.

**Main**

On Remote Playback Server panel, you can see the clients who are currently logging on to your computer and watching the live video from the remote side.

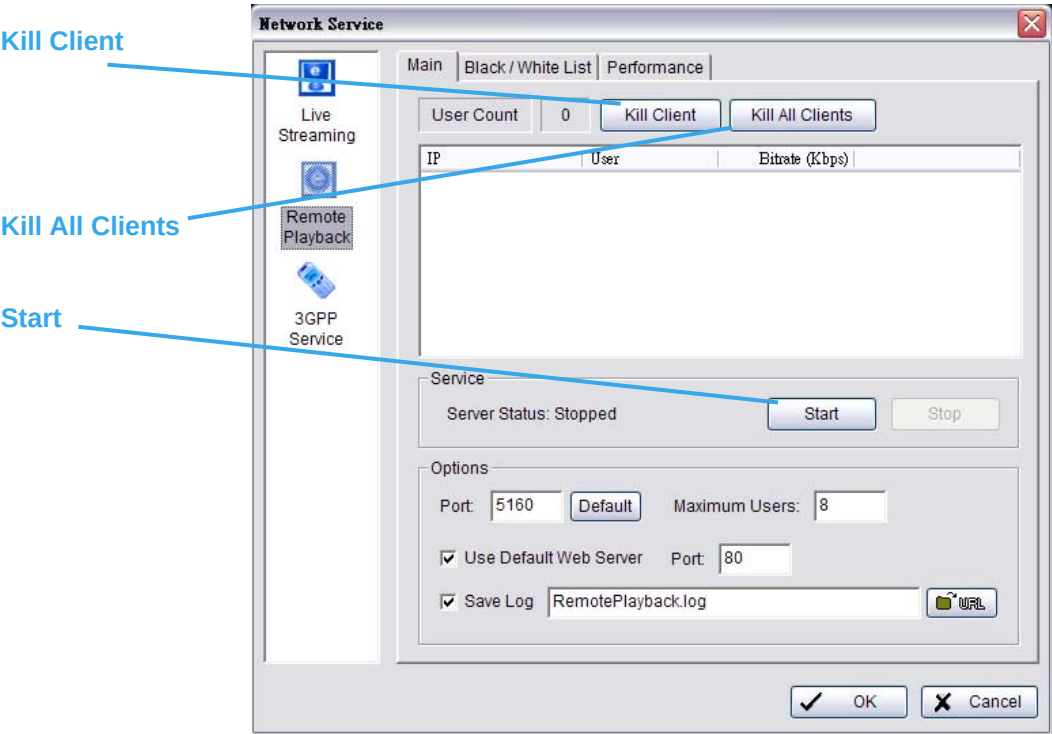

**Start:** By starting the system, you turn the computer into a remote playback server; thus allow remote users to access the system.

**Kill Client:** Highlight an IP address and click on the “Kill Client” button to block a client from your system.


**Kill All Clients:** By clicking on this button, you may block all the clients logging to your system.

**Stop:** Stop broadcasting playback video.

Port

Maximum Users

Save Log

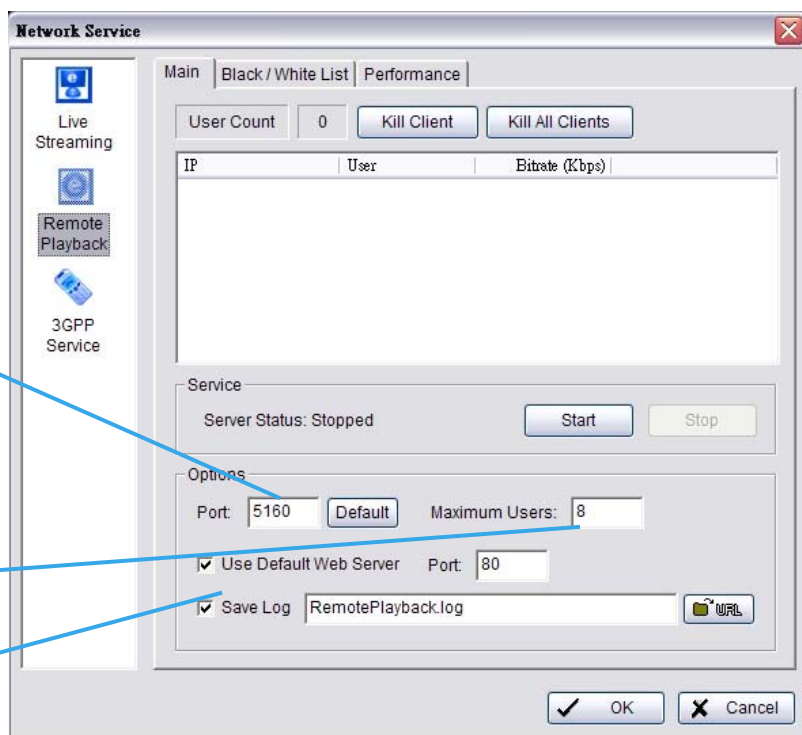


**Port:** Assign a port for the remote playback server to connect to your system to the network.

**Maximum Connections:** Number of connections that are allowed to connect to the Remote Playback Server. One camera video counts as one connection.

**Save Log:** Save the log information at appoint folder.

Black/ White List

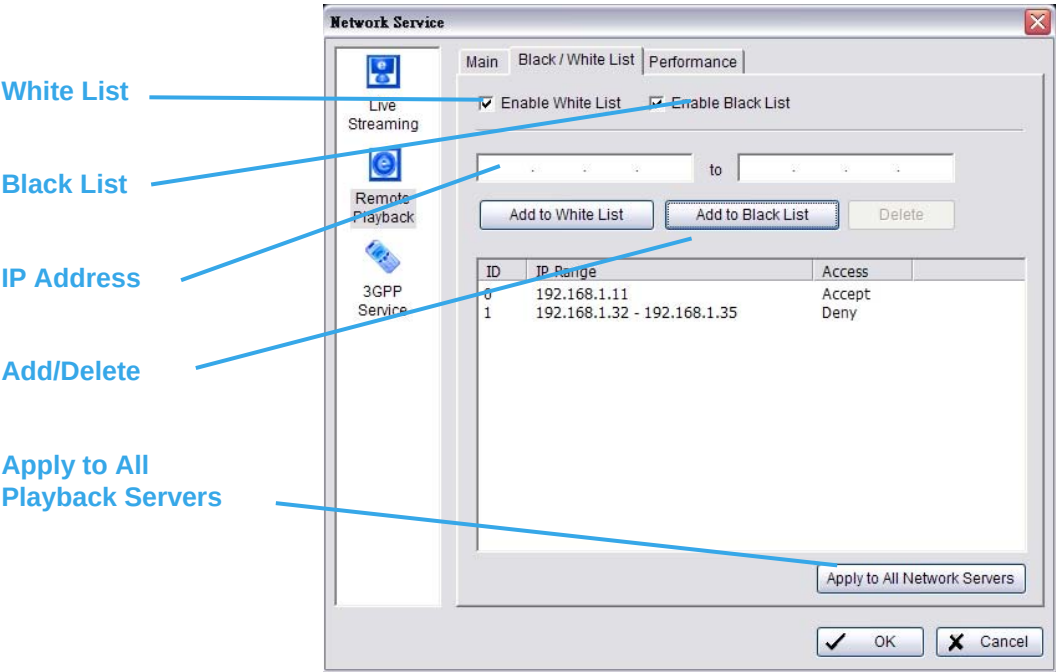

**White List:** Check the “Enable White List” box to activate the white list filter. Only IP from the white list is allowed to log in.

**Black List:** Check the “Enable Black List” box to activate the black list filter. IP from the black list will be blocked.

**IP Address:** Enter an IP address into the IP field on the left. To add an IP range to the system, enter 2 sets of IP to indicate a series of IPs.


**Add/Delete:** To Add the IP(s) onto the list or remove it from the list.

**Apply to All Playback Servers:** To apply the setting to both live streaming server and remote playback server.

Performance

Total bit rate


Individual Camera bit rate

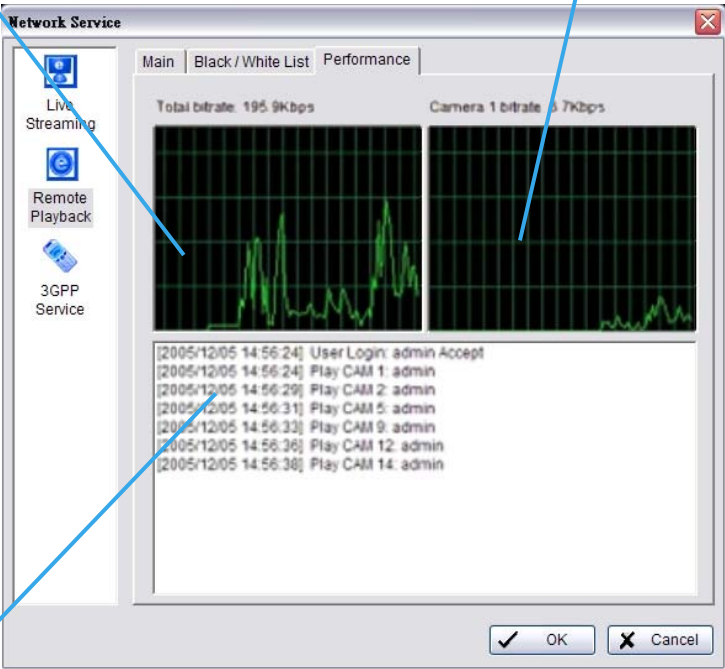

Live Streaming Server log information

### 5.13.3 3GPP Service

When starting the 3GPP service function of your computer, you allow remote users to log on the 3GPP supported mobile phone and view cameras that are connected to it.

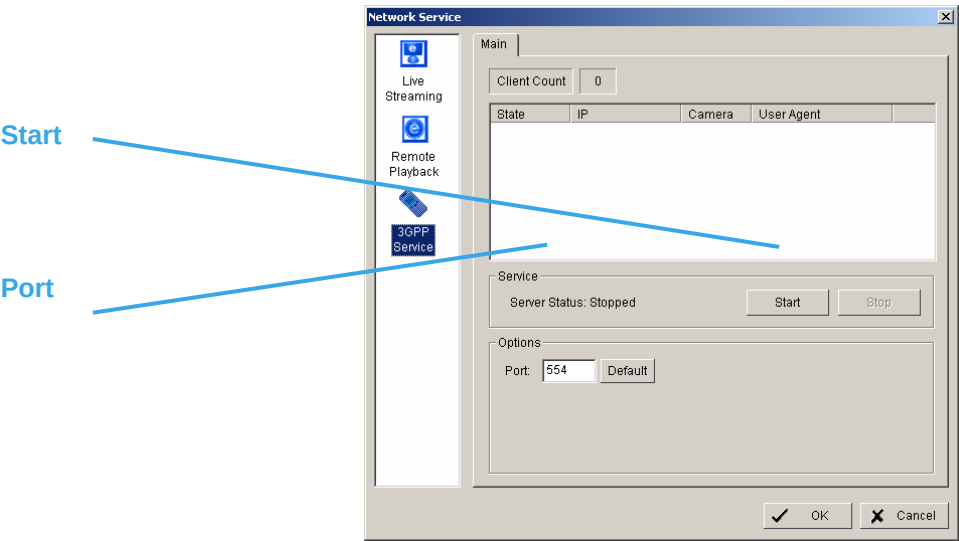

**Start:** By starting the system, you turn the computer into a remote playback server; thus allow remote users to access the system.



**Stop:** Stop broadcasting playback video.

**Options:** You may only adjust the setting when the server is stopped.


**Port:** Assign a port for the clients to connect to your system to the network.

## 5.14 About Main Console

Go to About Main Console to view the version of your surveillance system and the hardware information.

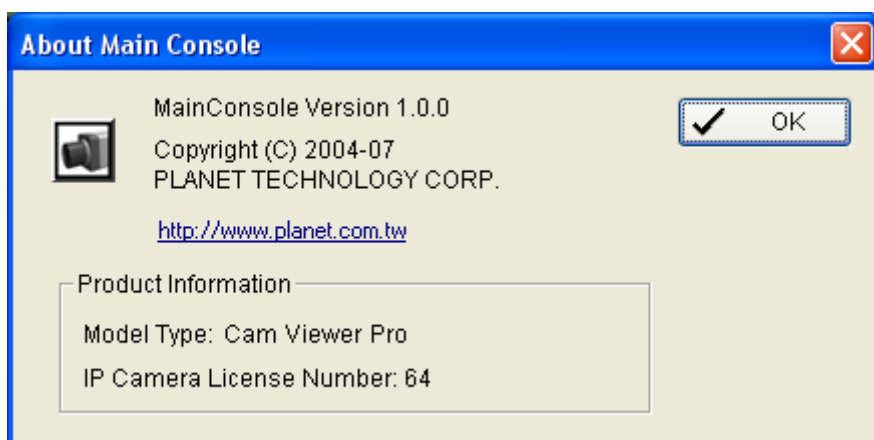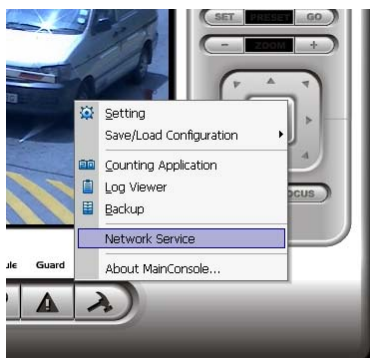

## 6. Playback

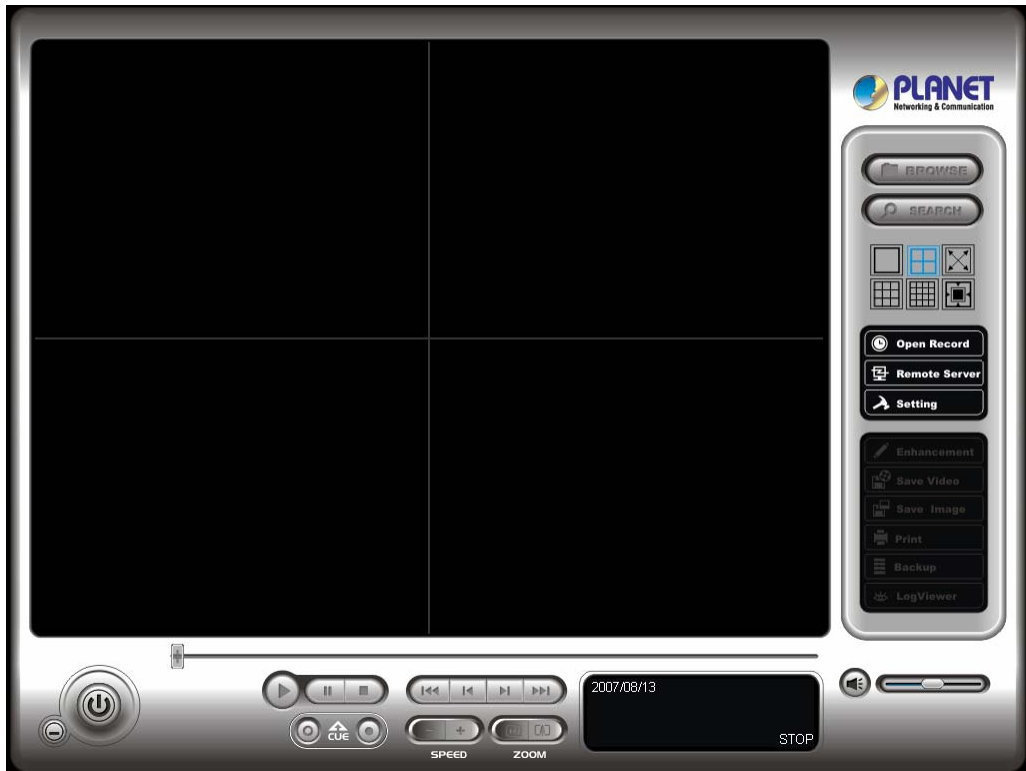

Watch the recorded video, view and/or search for unusual events and recorded system information.

**Minimize:** Minimize the Playback console.

**Exit:** Shut down the Playback console.

**Scroll Bar:** Indicate the status of the playing video; drag it to where you want to review.

**Control:** Play, pause and stop the video.

**Cue:** When playing video, click on the Cue In/ Cue Out icon at where you want to set as the starting/ ending point of a saved video clip. The Cue In and Cue Out time will be displayed on the Playback Information Window once they are set.

**Speed:** Control the speed of the playing video. Click + to speed up and – to speed down.

**Zoom:** Zoom in and zoom out. Get a close up view of the recorded video; move to the spot you want to view by dragging the screen.

# 6.1 Playback Console


**Information Windows:** Display video date and time, current video status, cue in/ out points' time, and speed.

**Audio Volume Control:** Adjust the sound level.

**Screen Division:** Allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click on a particular sub-screen. Double click on the screen again to regain previous screen division layout.

**Browse Mode:** Play the recorded video.

**Open Record:** Click on Open Record button to access the Date-Time Panel and withdraw the video record that you want to review.

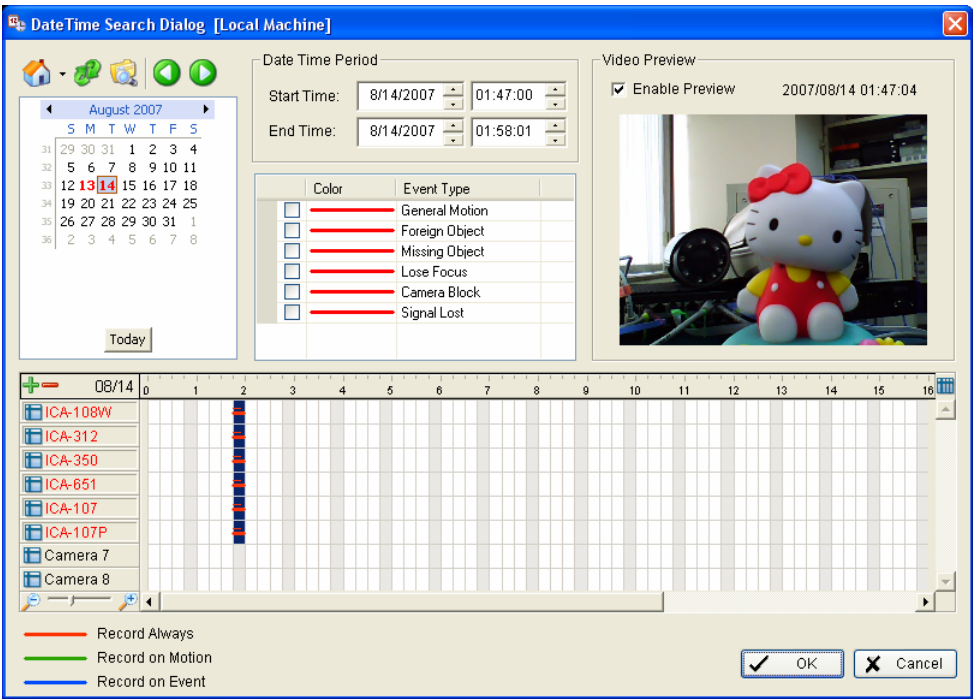

**Record Display Window:** The record display window shows the information of the available video clips. It may show in calendar or list control view. For further details about how to modify the record display window view.

Click on the  icon on the top of the display window to obtain the Remote Playback Site Management dialog. You may select to access local machine or set up remote playback server.

Click on the  icon to refresh the record display window, and click on the  icon to

access the log viewer dialog. Additionally, utilize the   icons to go to previous and next recording Date.

**Date Time Period:** Select the start and end time points that indicate the time period you would like to view.

**Video Preview:** Check the enable preview option to view the selected video.

**Event Type:** There are 6 event types; see Chapter 4 Guard for details. You may set up different colors for different event types to help you select events.

**Time Table:** Utilize the  icon to select all channels; also utilize the  icon to deselect all channels. Finally, utilize the scale bar  to modify the scale of the time table.

### To Withdraw the Record:

**Step 1:** From the record display window at the top left of the Date Time Panel, select the date you want to withdraw the record from. The red/green/blue lines shown on the time table indicate available recorded video records.

**Note:** The record display window can be shown in (a) calendar view or (b) list control view. To modify the setting of the record display window, click on the Setting button at the right of the Playback Console.

**Step 2:** Use color bars to differentiate event types from each other. This will help you select video clips.

**Step 3:** Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in Date Time Period Section. In addition, modify the scale of the time table with the + and – signs on the bottom left.

**Step 4:** Check the Enable Preview option to get the preview of the video you select.

**Step 5:** Click the camera name to increase or decrease cameras you want to playback.

**Step 6:** Click OK when completing the setting

## 6.2 Search Mode

Click on the Search Mode icon to obtain the Intelligent Search Tool panel. You can setup unusual events here to detect abnormality occurred during the recording period.

**Intelligent Search Tool Panel:** Click on the Search Mode icon and get the Intelligent Search Tool panel. Set up unusual events here to detect abnormality that occurred during the recording period.

There are 5 types of unusual events: General Motion, Foreign Object, Missing Object, Lose Focus, and Camera Occlusion.

### 6.2.1 Unusual Event-General Motion

**General Motion:** Detect all movements in the defined area.


**Define Detection Zone:** Left click and drag to draw a detection zone. You may define more than one zone on the screen by repeating the process.

**Sensitivity:** Modify the sensitivity setting by changing the slider control. Move toward right will increase the sensitivity level, which means a relatively small movement will trigger the alarm; in contrast, move the slider control toward left will reduce the sensitivity for movement detection.

Set up an appropriate sensitivity level reduces the frequency of false alarm. For instance, you can lower the sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Move the slider control to the **right to increase** time interval so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the time interval.

**Stop When Found:** Check the option to have the video stopped when detecting motion in the detection zone. Uncheck the option to have video kept rolling, and all detected events will show on the list in search result box. Click on the listed event in the box to jump to the point in the video where a motion is detected.

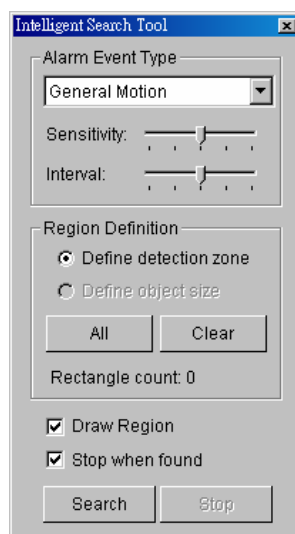

### 6.2.2 Unusual Event-Foreign Object


**Foreign Object:** Alarm is set off when any additional object appears in the defined area on the screen.

**Define detection zone:** Before detecting foreign object, it is required to define a detection area. In order to do so, left click and drag on the screen. Alarm will be triggered when any additional object appears in the detection zone.

**Define object size:** Drag and draw on the screen to define the size of a foreign object.

**Sensitivity:** Modify the sensitivity setting by changing the slider control. Move toward right will increase the sensitivity level, which means a relatively small movement will trigger the alarm; in contrast, move the slider control toward left will reduce the sensitivity for movement detection.

**Interval:** Click and move the slider control to the **right to increase** time interval so that the alarm will only be triggered when the object has been removed from the area for longer. Move to the **left to**

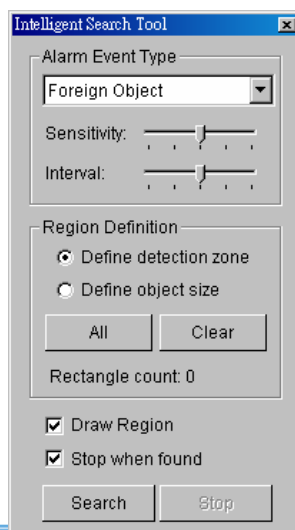

**reduce** the time interval.  
Set up an appropriate Interval value will reduce the chance of false alarm. For example, you can lower the Interval to avoid the alarm being triggered by a pedestrian.

### 6.2.3 Unusual Event-Missing Object


**Missing Object:** Alarm is set off when the selected object is removed from the defined area on the screen.

**Define detection zone:** Before detecting missing object, it is required to define a detection zone. Left click and drag to draw a detection zone. Alarm will be triggered when the defined object is removed from the detection zone.

**Define object size:** This tells the System how big the defined object is. Drag and draw a square that is about the same size as the object that you want to protect on the screen.

**Sensitivity:** Modify the sensitivity setting by changing the slider control. Move toward right will increase the sensitivity level and a relatively small movement will trigger the alarm; in contrast, move the slider control toward left will reduce the sensitivity for movement detection.

**Interval:** Click and move the slider control to the **right to increase** time interval so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the time interval.

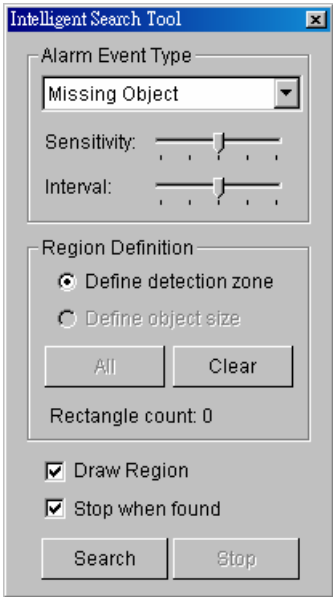


### 6.2.4 Unusual Event-Lose Focus/ Camera Occlusion

**Lose Focus:** System will inform you when the camera(s) lose its focus.

**Camera Occlusion:** Alarms when any of the cameras is blocked.

## 6.3 Enhancement

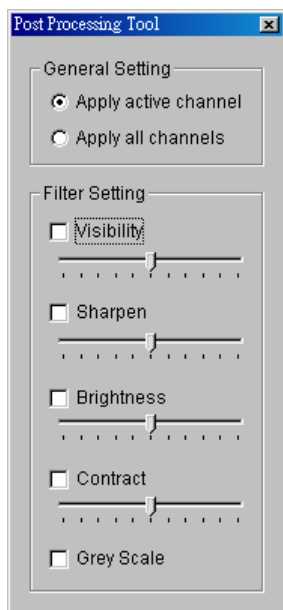

**General Setting:** Check the option and chose whether you want to apply the setting to all the channels or only to those currently shown on the screen.

### Filter Setting

**Visibility:** Check the option and adjust the gamma value of the image to enhance the image and make it cleaner.

**Sharpen:** Check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.

**Brightness:** Check the option to activate the function. Move the slider control to the right to make the image brighter.

**Contrast:** Check the option to activate the function. Move the slider control to the **right to increase** contrast.

**Grey Scale:** Check the option to show the record in grey scale mode so the image displays in black and white.

## 6.4 Save Video / Save Image

### Save Video

**Step 1:** Click on the display screen to choose the camera display that you want to save as a video clip.

**Step 2:** Set up the cue in and cue out points; the cue in and cue out time will show on the information window.

**Step 3:** Click Save Video icon, choose the folder where you want to save the file at, enter the file name and click SAVE. You may export (i.e. save) the record with both audio and video or video only.

**Step 4:** Choose the compression format and then save the video.

### Save Image

**Step 1:** Click on the display screen to choose the camera display from which you want to save pictures.


**Step 2:** Click Save Image button when the image you want is shown on the screen. You may click Pause to freeze the video, use Step Forward/ Step Backward function to find the picture(s) that you want to save.

**Step 3:** Choose the folder and the format of image (BMP or JPEG) you prefer and then click save.

**Note:** You may skip step 3 by pre-setting a folder and format that you want to save the images.

## 6.5 Print / Backup

**Print:** Print the current image of the video you choose.

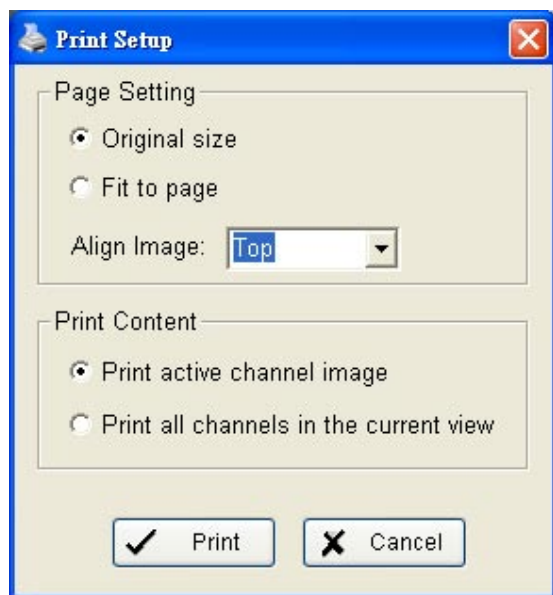

**Print in original size:** Select to have the image print in original size.

**Fit the page:** Select to have the image fit the page.

**Align Image:** Top, Center, or Bottom

**Print Content:** Print the image from currently selected channel or all the channels shown on the screen.

### Backup

Different from Save Video, the Backup function saves everything from the Playback panel, including log information.

You can start a full function Playback Console and load the backup files into it on any PC with Windows operating system. This means you may monitor the real time video and work on the backup files on separate computers simultaneously.

**Step 1:** Press the "Open Record" to select data and press "Backup".

**Step 2:** You can adjust the Start Time and End Time you want to backup.

**Step 3:** You can adjust the Cameras you want to backup.

**Step 4:** You can calculate the size of the backup data.

**Step 5:** Select the directory you want to save the backup data.

**Step 6:** Check the log you want to backup.

**Step 7:** Press the "Backup" to start backing up.

**Step 2**


**Step 3**

**Step 4**

**Step 5**

**Step 6**


**Step 7**

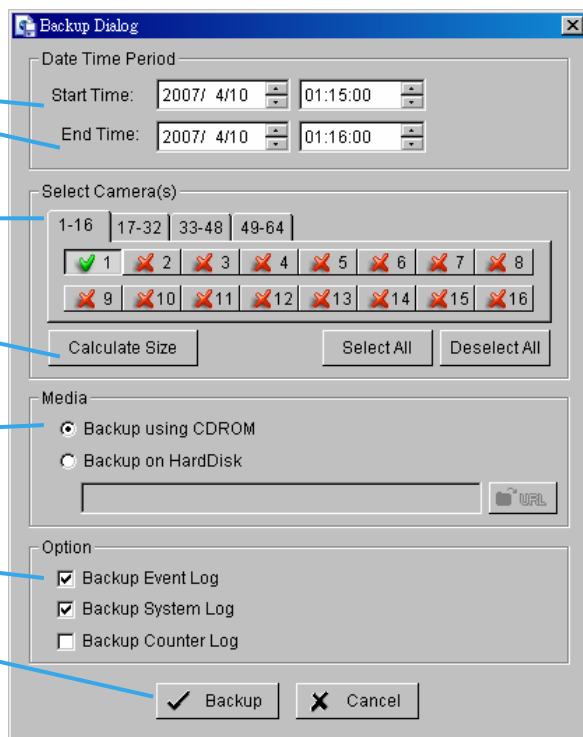

## 6.6 Log Viewer

### 6.6.1 Unusual Event

View the unusual event history that had been detected by the Smart Guard System.

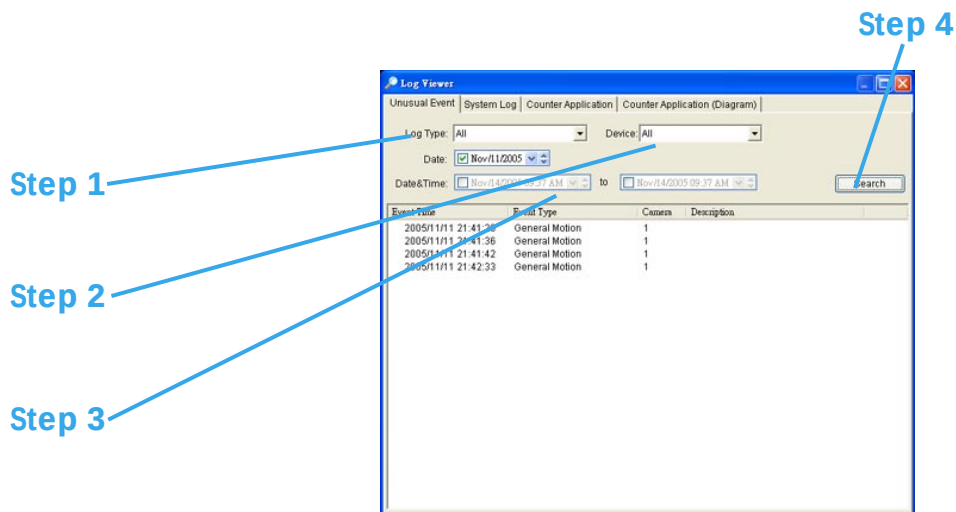

**Step 1:** Choose the type of events you wish to view or select “All” from the drop-down menu to view all types of events.

**Step 2:** Choose the camera channel you wish to view or select “All” for all the channels available.

**Step 3:** You can either view the events that happened on a particular date or during a given time period. To search and view unusual event on a particular date, check the option right next to “Date” and select a specific date.

You may also point out two different time points and search for unusual event happened during the period. Check the options in the Date & Time columns and enter the date and time.

**Step 4:** Click Search

**Note:** When working with a video record,


1. Log Viewer will search for Unusual Event in the video record in Date & Time mode, start from the beginning to the end of the record, which is the default setting of the system.
2. A link will appear right next to each event time. By clicking on the link, the video will jump to the point where the unusual event takes place.

## 6.6.2 System Log

Select **Log Type** from the drop-down menu. There are total 11 types of log types, including:

**Step 1**

**Step 2**

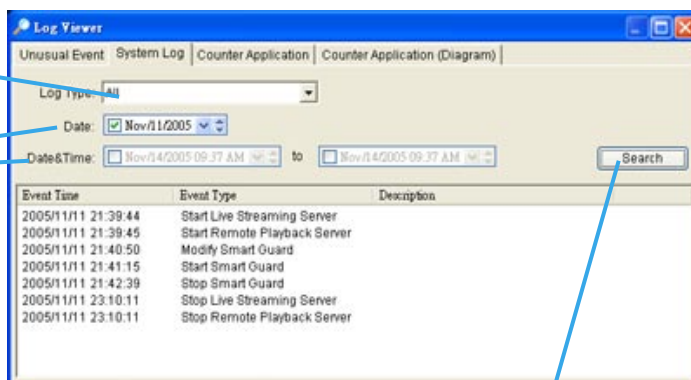

**Step 3**

- |                          |                                   |
|--------------------------|-----------------------------------|
| 1. Main Console Startup  | 12. Stop Smart Guard              |
| 2. Main Console Shutdown | 13. Modify Smart Guard            |
| 3. User Login            | 14. Modify Schedule               |
| 4. User Login Failed     | 15. Modify Configuration          |
| 5. Start Schedule        | 16. Start Live Streaming Server   |
| 6. Stop Schedule         | 17. Stop Live Streaming Server    |
| 7. Execute Recycle       | 18. Modify Live Streaming Server  |
| 8. Execute Backup        | 19. Start Remote Playback Server  |
| 9. Enable Channel        | 20. Stop Remote Playback Server   |
| 10. Disable Channel      | 21. Modify Remote Playback Server |
| 11. Start Smart Guard    | 22. IP Camera Connection Lost     |

**Step1:** Choose the type of event you wish the check or select “All” from the drop-down menu and view all types of events.

**Step 2:** You can either view the events that happened on a particular date or during a given time period. To search and view unusual event on a particular date, check the option right next to “Date” and select a specific date.

You may also point out two different time points and search for unusual event happened during the period. Check the options in the Date & Time columns and enter the date and time.

**Step 3:** Click **Search**.

### 6.6.3 Counting Application

You can see the results of Counting Application during the time period you set.

Log Viewer

Unusual Event

System Log

Counter Application

Counter Application (Diagram)

Channel: All


Date: 2005/Nov/10

Date&Time: 2005/Nov/21 01:35 PM to 2005/Nov/21 01:35 PM

Search

| Event Time          | Device   | In | Out |
|---------------------|----------|----|-----|
| 2005/11/10 02:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 03:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 04:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 05:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 06:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 07:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 08:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 09:00:00 | CAMERA 1 | 5  | 2   |
| 2005/11/10 10:00:00 | CAMERA 1 | 10 | 4   |
| 2005/11/10 11:00:00 | CAMERA 1 | 17 | 13  |
| 2005/11/10 12:00:00 | CAMERA 1 | 8  | 9   |
| 2005/11/10 13:00:00 | CAMERA 1 | 5  | 21  |
| 2005/11/10 14:00:00 | CAMERA 1 | 9  | 9   |
| 2005/11/10 15:00:00 | CAMERA 1 | 7  | 16  |
| 2005/11/10 16:00:00 | CAMERA 1 | 11 | 6   |
| 2005/11/10 17:00:00 | CAMERA 1 | 7  | 10  |
| 2005/11/10 18:00:00 | CAMERA 1 | 3  | 13  |
| 2005/11/10 19:00:00 | CAMERA 1 | 2  | 14  |
| 2005/11/10 20:00:00 | CAMERA 1 | 1  | 2   |
| 2005/11/10 09:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 10:00:00 | CAMERA 1 | 0  | 0   |
| 2005/11/10 11:00:00 | CAMERA 1 | 0  | 0   |

The Counting Application result data will show in a diagram.


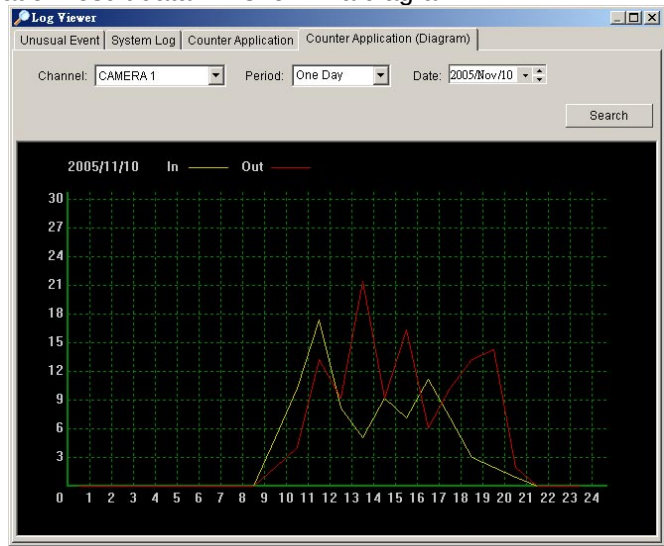


## 6.7 Setting

### Record Display

**Calendar View:** Make the record display windows as calendar view.

**List Control:** Make the record display windows as list control.

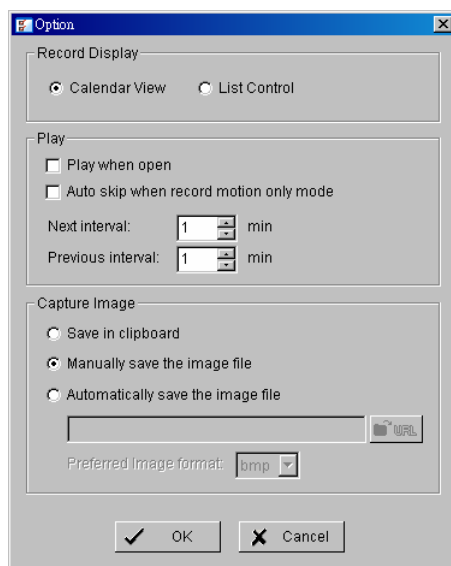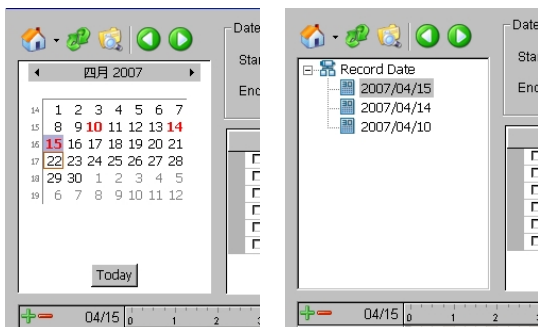

### Play

**Play when open:** Check the option and set the system to start playing the video clip every time when a record is withdrew.

**Auto skip when record motion only mode:** Check the option to set up the system to automatically skip to the points where there were motions recorded.

**Next interval:** Set the interval with which the video goes forward when you click on the Next icon on the control panel.

**Previous interval:** Set the interval with which the video goes backward when you click on the Previous icon on the control panel.


**Capture Image:** Setup how you want to save image.

**Save in clipboard:** The image will be saved in the clipboard and can be pasted on other application software.

**Manually save the image file:** You can manually select where you want to save the image, name the saved file, and choose the format you want to save the image.

**Automatically save the image file:** By pre-setting a path/URL and the image format, the system will automatically save the image accordingly when you click the Save button in the control panel.

## 6.8 Remote Server

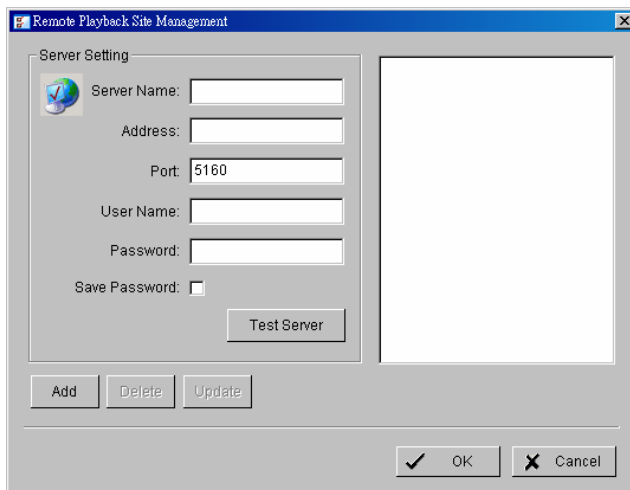

### Add Remote Playback Site

Pressing the "Remote Server" can go to remote playback site management to add and setup the remote playback site.

**Step 1:** Enter the IP address or DNS, Port, Username, and Password.


**Step 2:** Click "Add" to add the server.

**Step 3:** Click OK to exit the Setting panel.

### Access Remote Playback Site

Go to Date Time Panel and click on the  icon on the top of the display window to access the Remote Playback Site.

# 7. Schedule

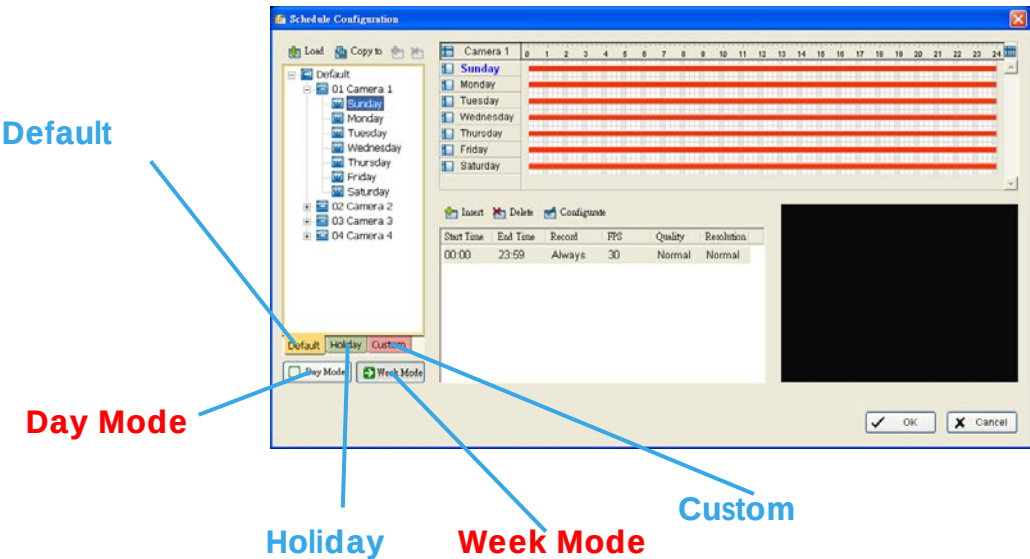

Click on the Schedule icon on the Main Console and set up the time duration for video recording on the schedule configuration panel.

# 7.1 Day Mode

Schedule the cameras to turn the recorder on and off at the same time every day according to your setting.

To setup the time schedule for each camera, you may

- 1. **Load** the preset modes or
- 2. **Insert** a new schedule manually

## Load Preset Modes

Click on the **Load** icon for the drop-down menu.

**Regular Mode:** Video recording 24 hours a day with the setting of 30 FPS (frames per second), Normal video quality and Normal resolution.

**Office Mode:** Video recording from 8 am to 8 pm (08:00 – 20:00, shown on the red bar in the Schedule Configuration panel) with 30 FPS, Normal video quality, and Normal resolution.

**Shop Mode:** Video recording from 10 am to 10 pm (10:00 – 22:00) with 30 FPS, Normal video quality, and Normal resolution.


**High Security Mode:** Video recording 24 hours a day with the setting of 30 FPS, the highest video quality, and High resolution.

**Disk Saving Mode:** The system will start recording only when a motion is detected on the screen, 24 hours a day (shown on the green bar in the Schedule Configuration panel), with the setting of 30 FPS, Normal quality, and Normal resolution. You can adjust the sensitivity, interval, and area of motion detection in the Schedule Configuration.

**Minor Mode:** The system will start recording only when a motion is detected on the screen, 24 hours a day (shown on the green bar in the Schedule Configuration panel), with the setting of 15 FPS, Low quality, and Low resolution. You can adjust the sensitivity, interval and area of motion detection in the Schedule Configuration.

## Insert a New Schedule Manually

**Step 1:** Left-click and draw the bar you want to the time table. The scheduled time will show as a grey bar.

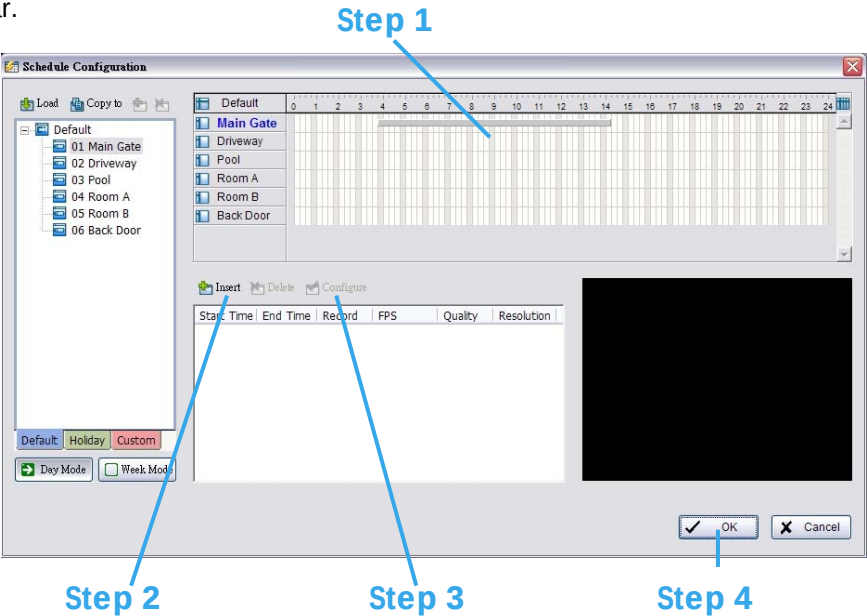


- Step 2: Click the **Insert** icon and add a new schedule in the Regular Mode, i.e. to record video during the time period you set with 30 FPS, Normal video quality, and Normal resolution.
- Step 3: Change the setting if wished by clicking on the **Configure** icon or double click the **schedule information**.
- Step 4: Click OK.

Copy Schedule

You may set up the schedule for each channel/camera by repeating the process above, or simply apply the setting of a single camera to all the others.

Copy To

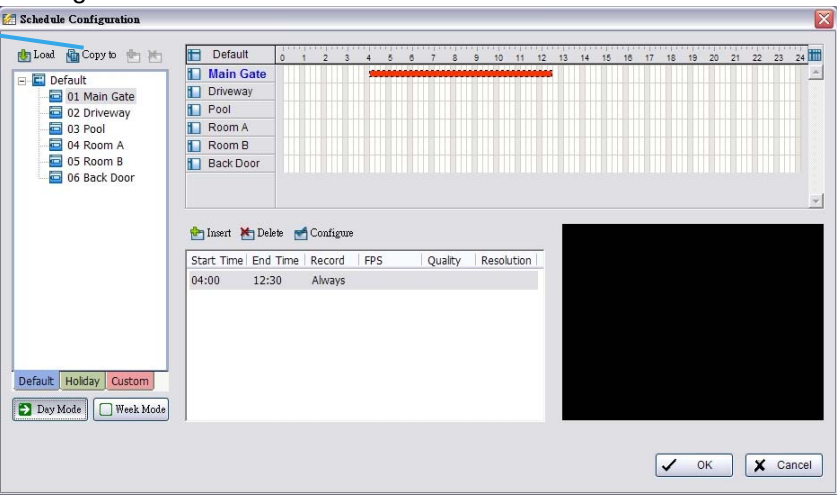

7.2 Week Mode


Schedule the cameras for each day of the week differently. In addition, you may assign extra holidays under the Week Mode.

Custom

Holiday

Default

Week Mode

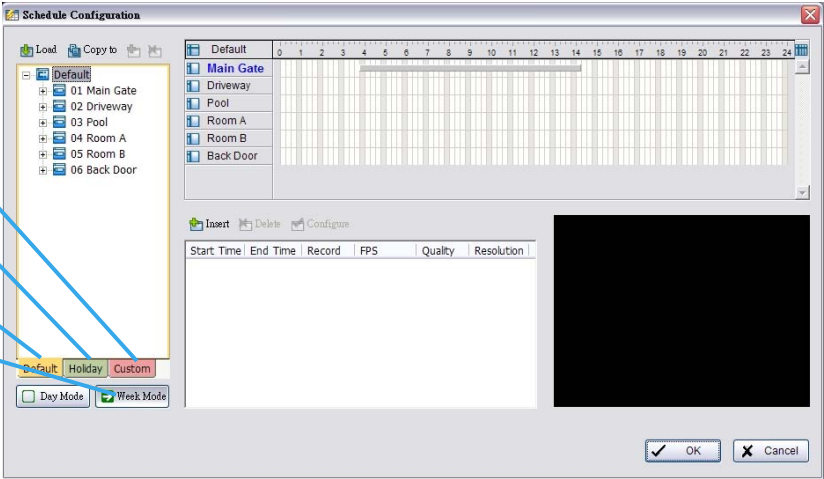


- Default:** Follow the same process to setup the schedule for every day in a week.
- Holiday:** You may assign holidays where the system will work according to the setting of Sunday.
- Custom:** You can assign a particular date(s) on which the system will work according to a special schedule(s) different from the others.

**Adjust the Scheduled Setting:** You can manually change the setting at any time after you insert or load a period of schedule.


**Option 1:** Move the cursor to the **Time Bar** and change the length or move the bar sideways to change the start and end points.

**Option 2:** Click on the Configure icon or double click on schedule information on the screen (highlighted in blue) to obtain the Encoding Option panel and change the setting as wished.

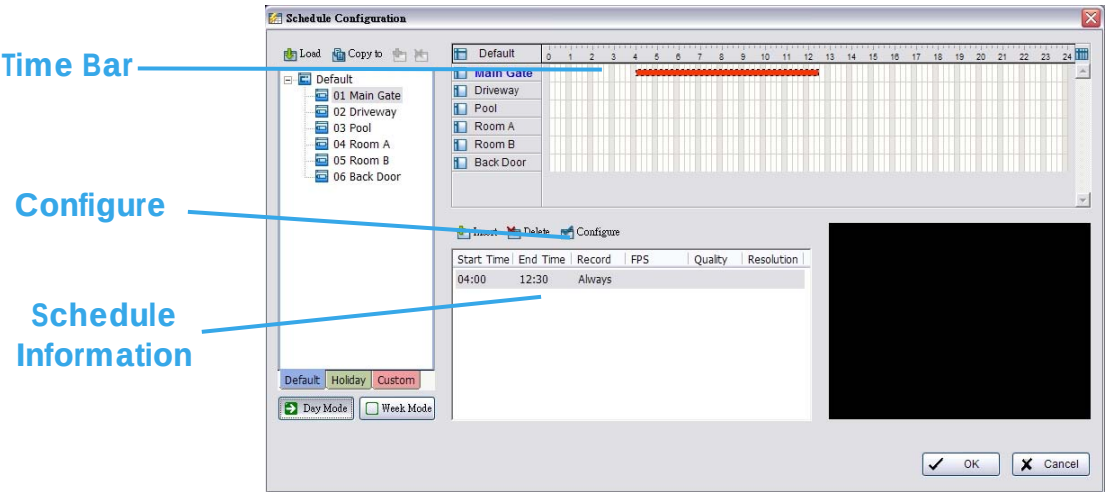

**Configure:** Click on the configure icon to obtain the Encoding Option panel.

### Encoding Option Panel

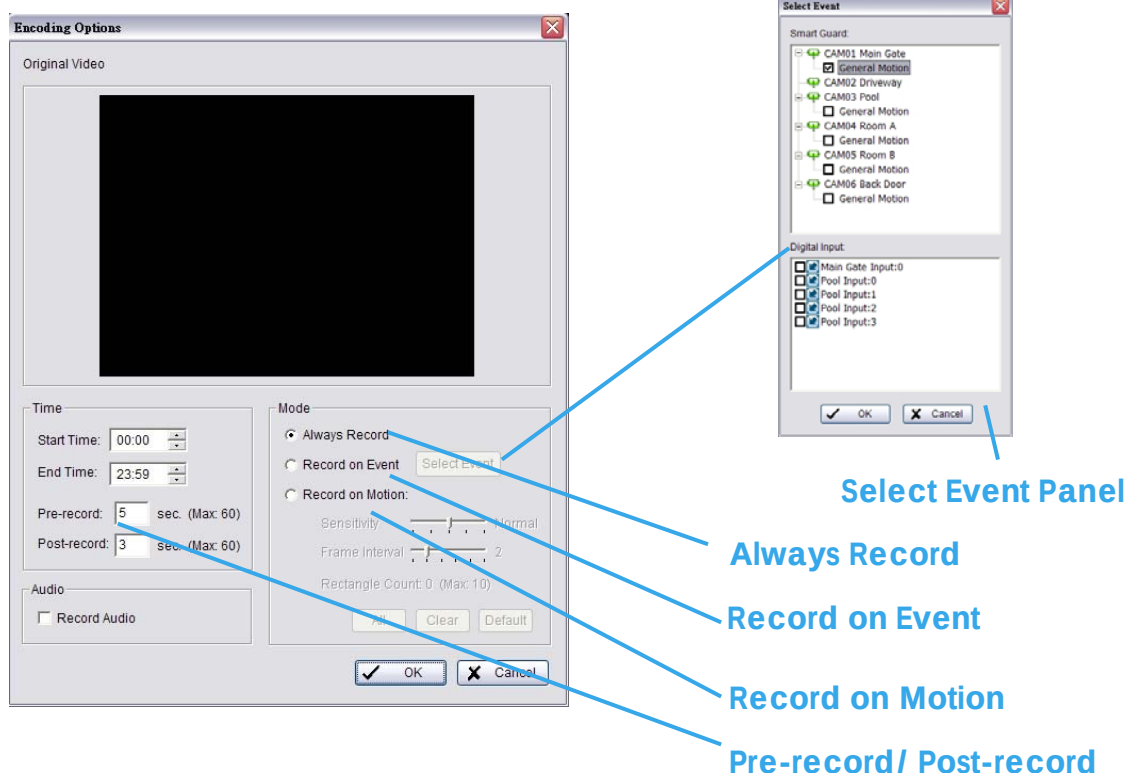


**Always Record:** Select this option to record the video at all time.

**Record on Event:** Select this option to obtain the Select Event panel. From the Smart Guard list, check the box of the camera(s) that you want to trigger the recording action. Click OK to complete the setting.

**Record on Motion:** Select this option to start recording when there are motions detected. To detect Motion, you have to define a detection zone. Left-click and drag the mouse to draw a detection zone. You may define more than one zone on the screen by repeating the same process. User can also click on "All" button to select the entire detection zone. You may adjust the sensitivity and the frame interval.

**Pre-record/ Post-record Time:** The pre-record/ post-record function saves the recording data accordingly. For instance, to set up a 5 second pre-record time means the system will start saving the recording data 5 seconds before the event happens.


# 8. Guard

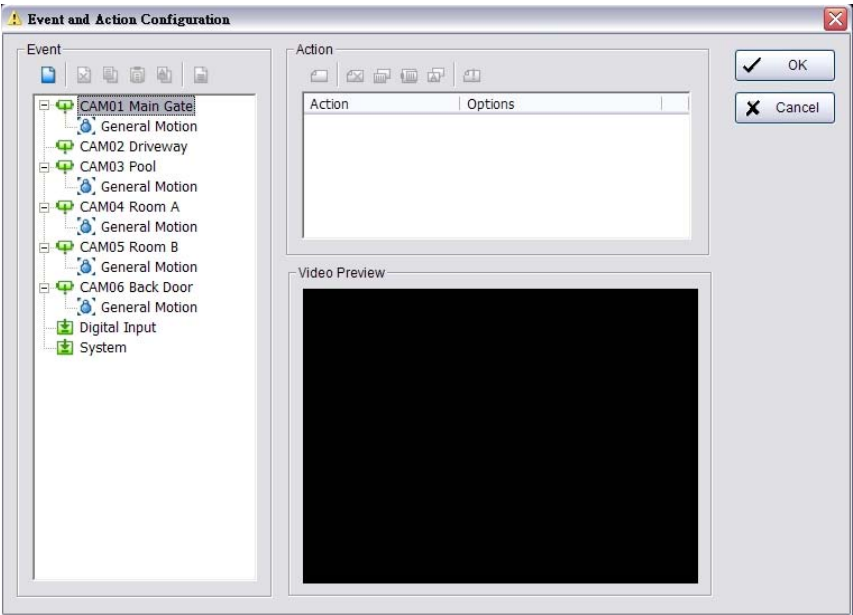


Click on the Guard button on the Main Console to start the Event and Action Configuration panel. You need to specify an event to be detected as well as to set up an action with which the system will take when the specified event is detected.

## 8.1 Event

There are three sources of events: Camera (video image), Digital Input (device connected to you PC) and System (condition of your hardware). You can assign multiple events by following the instructions below.

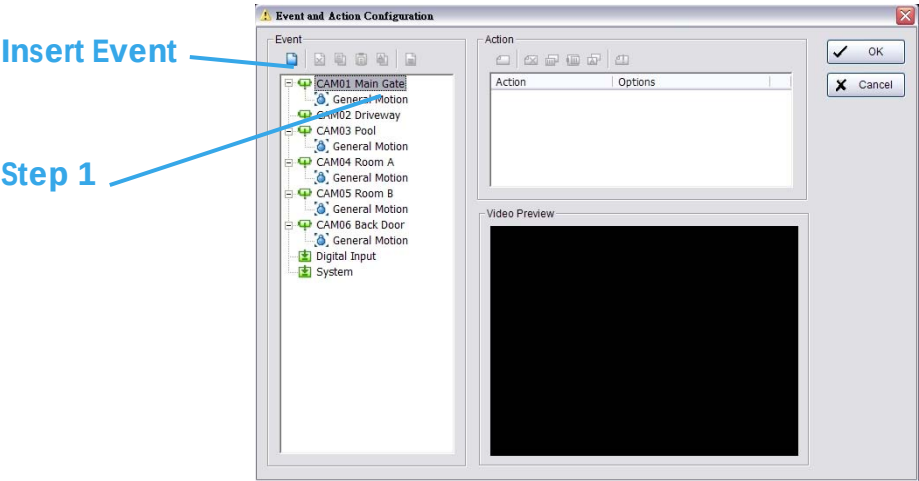


**Step 1:** Select a channel from the camera list and click the insert event icon .

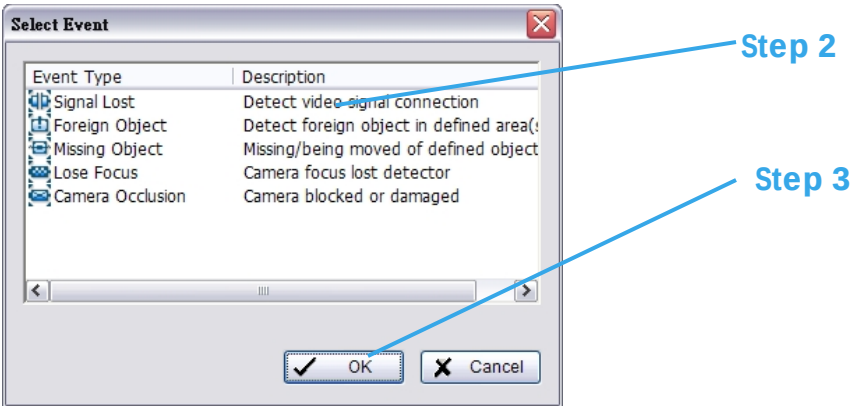

**Step 2:** There are six types of events: Signal Lost, General Motion, Foreign Object, Missing Object, Lose Focus, and Camera Occlusion. Select the event you want on the Event Type list, and then click OK.

**Step 3:** Configure the setting of the Event Type. See the following instructions.


### 8.1.1 Event - Signal Lost

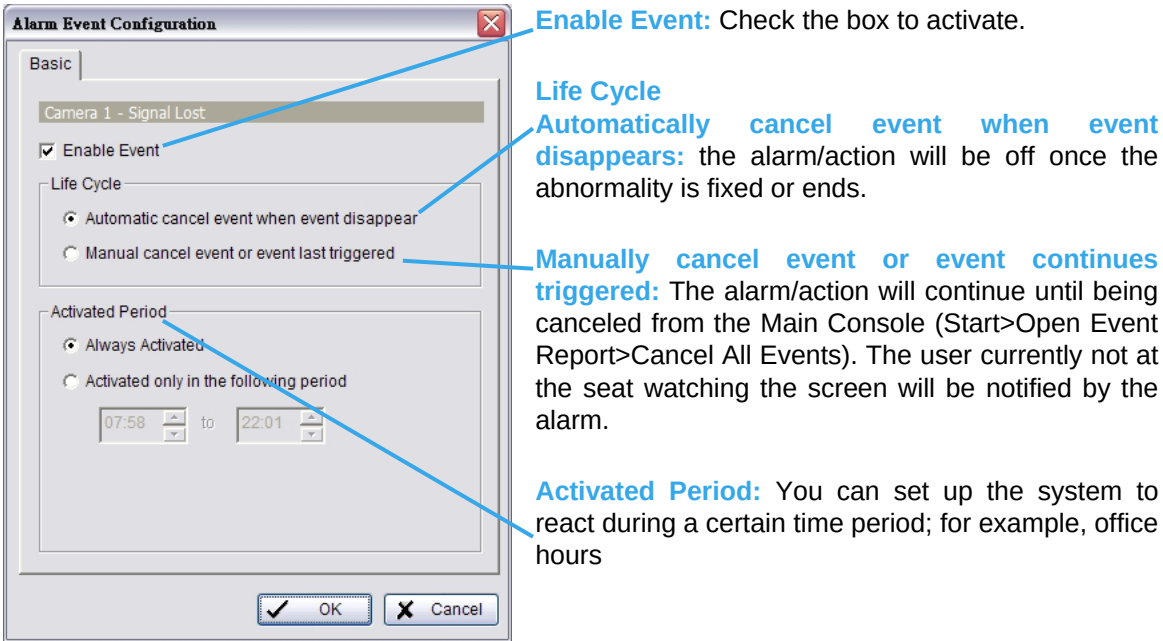

## 8.1.2 Event - General Motion

Detect any movement in the defined detection zone.

### Basic Setting

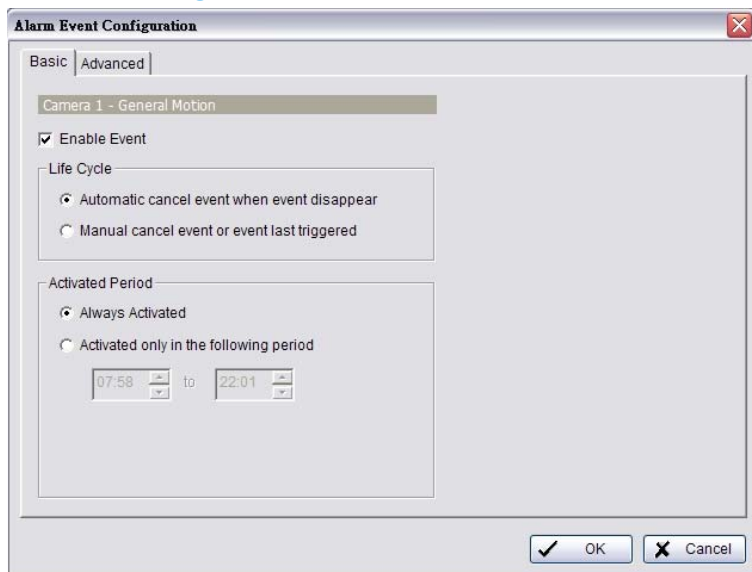

**Enable Event:** Check the box to activate.


### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

### Advanced setting

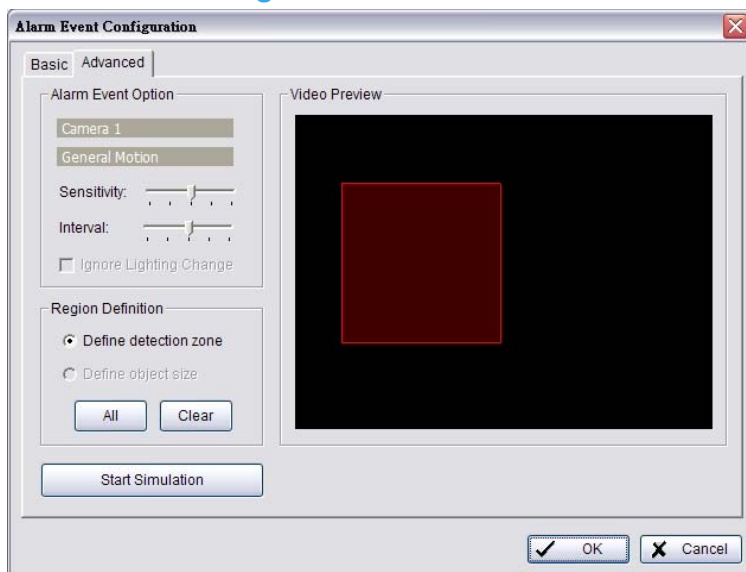

**Sensitivity:** Click and move the slider control to the **right to increase** sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the **left to reduce** the sensitivity of movement detection. Set up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Click and move the slider control to the **right to increase** interval time so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the interval time.


**Region Definition:** To detect General Motion, you have to define a detection zone. Left-click and drag the mouse to draw a detection zone. You may define more than one zone on the screen by repeating the same process. User can also click on "All" button to select the entire detection zone.

**Start Simulation:** Click the Start Simulation button and test the function on the preview screen.

## 8.1.3 Event - Foreign Object

Alarm will be set off when an object appears in the defined area on the screen.

### Basic Setting

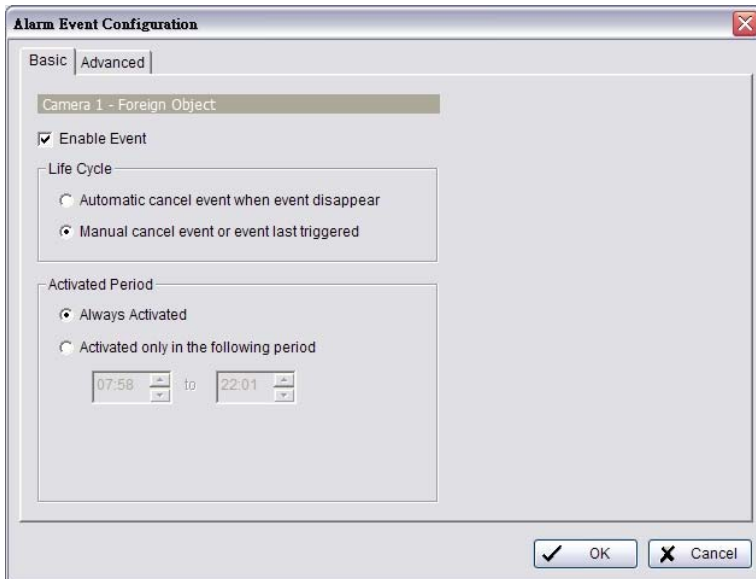

**Enable Event:** Check the box to activate.


### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

Advanced setting

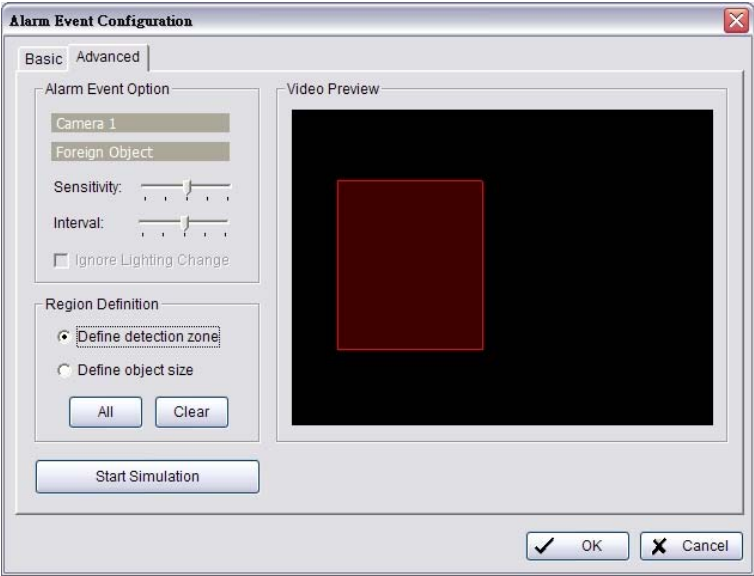

**Sensitivity:** Click and move the slider control to the **right to increase** sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the **left to reduce** the sensitivity of movement detection. Set up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Click and move the slider control to the **right to increase** interval time so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the interval time.

**Region Definition:** To detect Foreign Objects, you have to define a detection zone and define the size of the object you want to detect. Left-click and drag the mouse to draw the detection zone (Region 1).

After defining the detection zone, select **Define object size**, and then left-click and drag the mouse to indicate the size of the object you want to detect.


*Hint:* For instance, if you want to prevent somebody from leaving a briefcase in a hallway, you may put a briefcase in the hallway where the camera is aiming. On the screen of the camera, draw an area that fits the size of the briefcase and define it as the object size, and then remove the briefcase before activating the Smart Guard function on the Main Console. The system will consider everything in the screen normal when you click Start to activate the monitor function.

**Start Simulation:** Click the Start Simulation button and test the function on the preview screen.

## 8.1.4 Event - Missing Object

Alarm will be set off when an object disappears in the defined area on the screen.

### Basic Setting

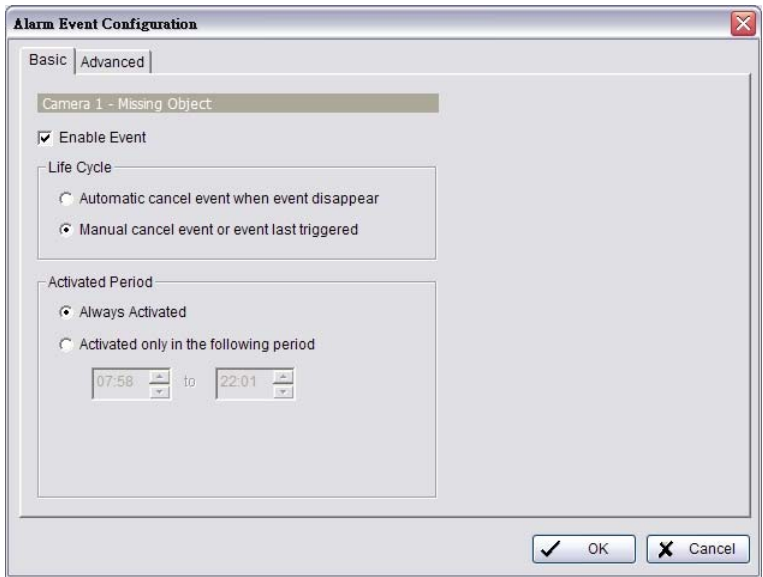

**Enable Event:** Check the box to activate.


#### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

### Advanced setting

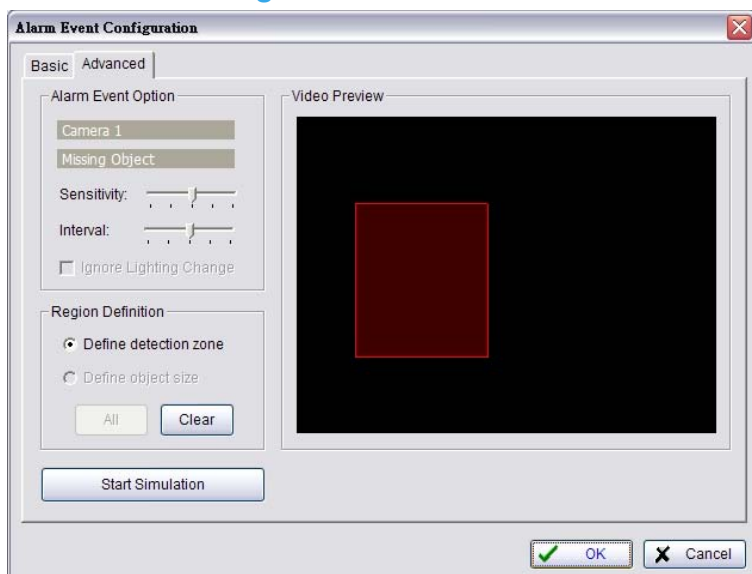

**Sensitivity:** Click and move the slider control to the **right to increase** sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the **left to reduce** the sensitivity of movement detection. Set up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Click and move the slider control to the **right to increase** interval time so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the interval time.

**Region Definition:** To detect Foreign Objects, you have to define a detection zone and define the size of the object you want to detect. Left-click and drag the mouse to draw the detection zone (Region 1).

After defining the detection zone, select **Define object size** and then left-click and drag the mouse to indicate the size of the object you want to detect.

**Note:** For instance, if you want to prevent somebody from removing the computer monitor on the desk, draw an area that fits the size of the monitor on the screen.

**Start Simulation:** Click the Start Simulation button and test the function on the preview screen.

## 8.1.5 Event - Lose Focus

This function alarms you when any of the cameras is losing focus and has blur image.

### Basic Setting

The screenshot shows the 'Alarm Event Configuration' dialog box with the 'Basic' tab selected. The title bar reads 'Alarm Event Configuration'. Inside, the 'Basic' tab is active, and the event is named 'Camera 1 - Lose Focus'. The 'Enable Event' checkbox is checked. Under the 'Life Cycle' section, the radio button for 'Automatic cancel event when event disappear' is selected. Under the 'Activated Period' section, the radio button for 'Always Activated' is selected. Below this, there are time pickers showing '07:58' to '22:01'. At the bottom right, there are 'OK' and 'Cancel' buttons.

**Enable Event:** Check the box to activate.


#### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

### Advanced setting

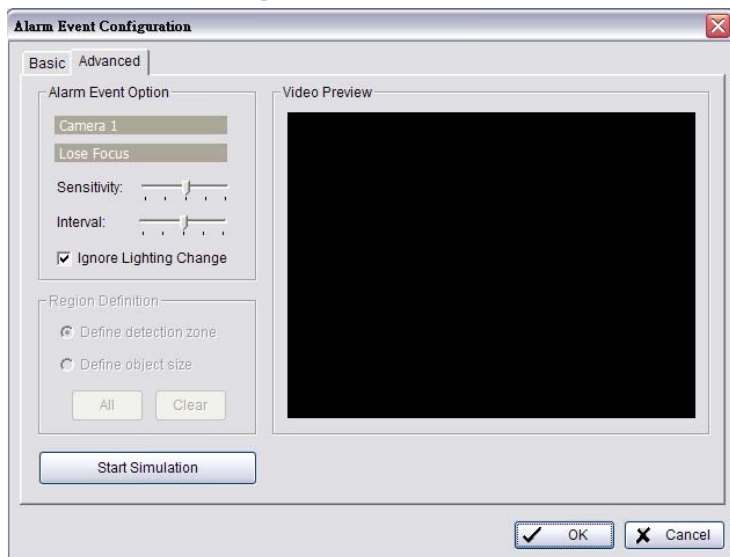

**Sensitivity:** Click and move the slider control to the **right to increase** sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the **left to reduce** the sensitivity of movement detection. Set up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Click and move the slider control to the **right to increase** interval time so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the interval time.


**Ignore Lighting:** Check the box to avoid alarm being set off by light changing.

**Start Simulation:** Click the Start Simulation button and test the function on the preview screen.

## 8.1.6 Event - Camera Occlusion

This function alarms you when any of the cameras is blocked.

### Basic Setting

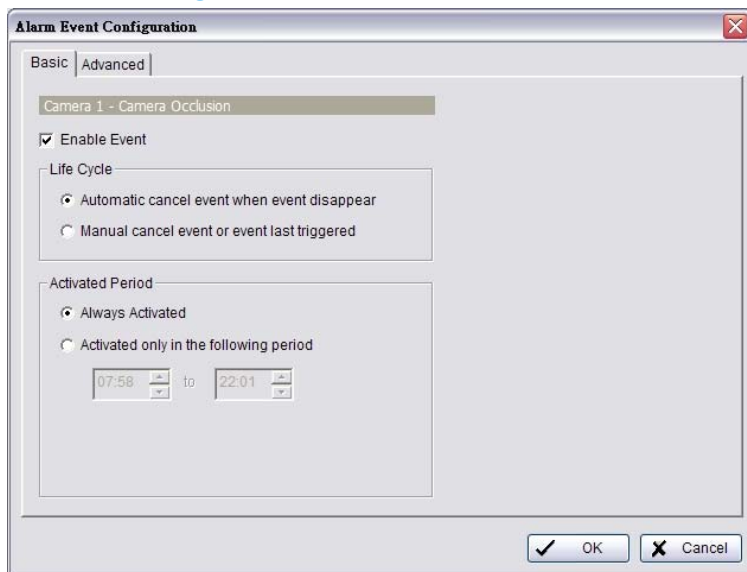

**Enable Event:** Check the box to activate.


#### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

### Advanced setting

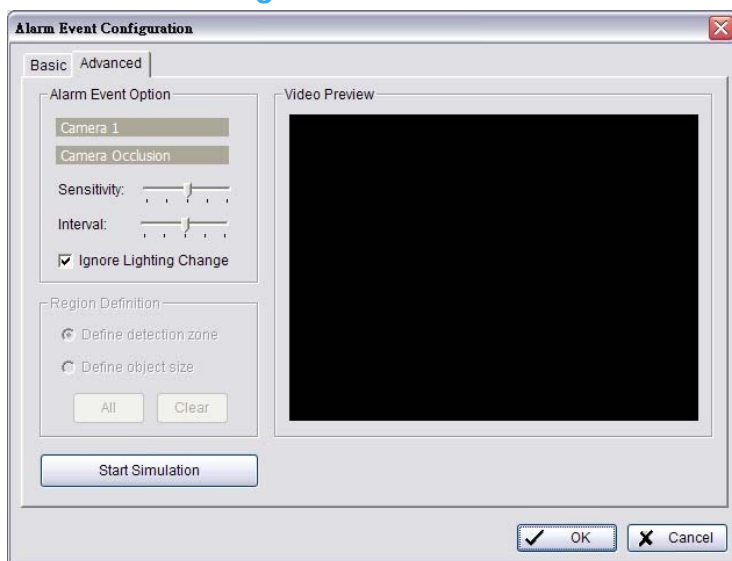


**Sensitivity:** Click and move the slider control to the **right to increase** sensitivity so that a relatively small movement will trigger the alarm. Move the bar to the **left to reduce** the sensitivity of movement detection. Set up an appropriate Sensitivity value will reduce the chance of false alarm. For example, you can lower the Sensitivity to avoid the alarm being triggered by a swinging tree in the breeze.

**Interval:** Click and move the slider control to the **right to increase** interval time so that the alarm will only be triggered when the movement lasts longer. Move to the **left to reduce** the interval time.

**Ignore Lighting:** Check the box to avoid alarm being set off by light changing.

**Start Simulation:** Click the Start Simulation button and test the function on the preview screen.

## 8.1.7 Event - Digital Input Event

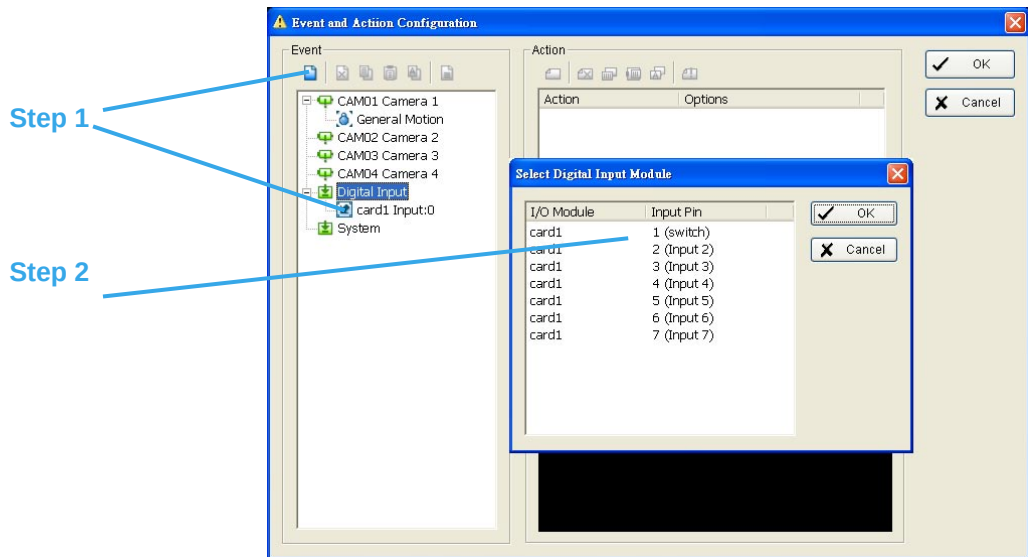

**Step 1:** Click and highlight **Digital Input** on the event type list, and click the **Insert Event** icon.

**Step 2:** Select the device that is connected to your system, that is, the PC you are working with.

### Basic Setting


**Enable Event:** Check the box to activate.

### Life Cycle


**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.

**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

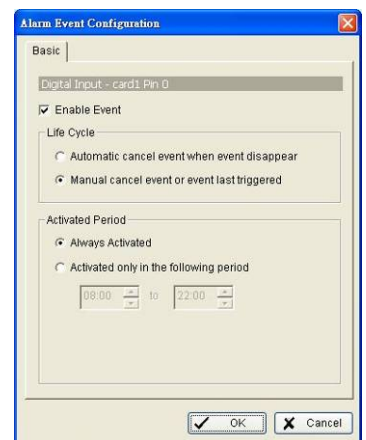

## 8.1.8 Event - System

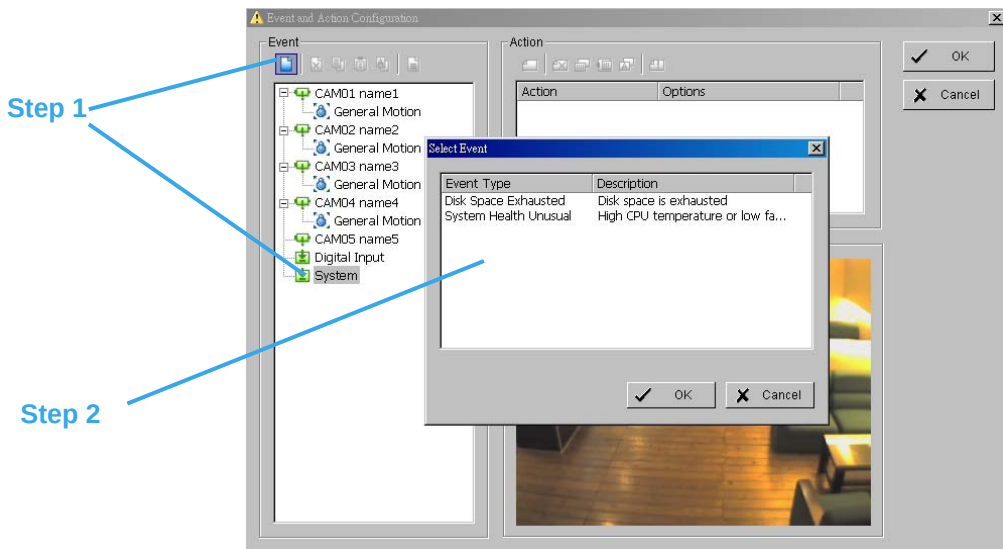

**Step 1:** Click and highlight **Digital Input** on the event type list, and click the **Insert Event** icon.

**Step 2:** There are two events. Select the event you want to detect.

**Disk Space Exhausted:** This function alarms you when disk space is exhausted.

### Basic Setting


**Enable Event:** Check the box to activate.

### Life Cycle

**Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.


**Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

**Activated Period:** You can set up the system to react during a certain time period; for example, office hours

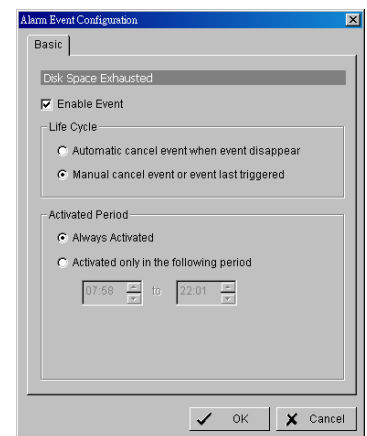

**System Health Unusual:** This function alarms you when high CPU temperature or low fan speeds.


Advanced setting

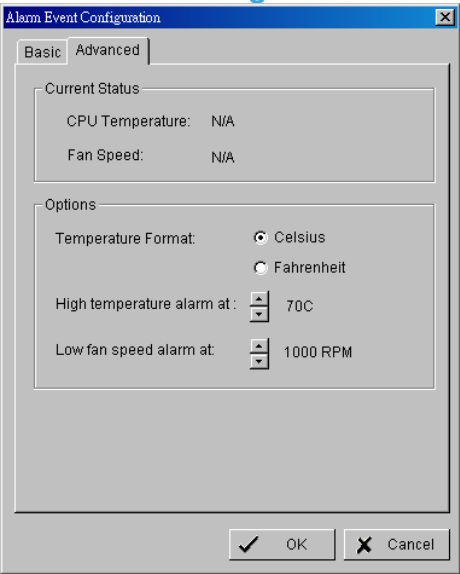

- Current Status:** Show you the current CPU temperature and fan speed.
- Option:** Check the temperature format Celsius or Fahrenheit and adjust the high temperature alarm at what temperature degrees and low fan speed alarm at what RPM.


Basic Setting

- Enable Event:** Check the box to activate.
- Life Cycle**
  - Automatically cancel event when event disappears:** the alarm/action will be off once the abnormality is fixed or ends.
  - Manually cancel event or event continues triggered:** The alarm/action will continue until being canceled from the Main Console (Start>Open Event Report>Cancel All Events). The user currently not at the seat watching the screen will be notified by the alarm.

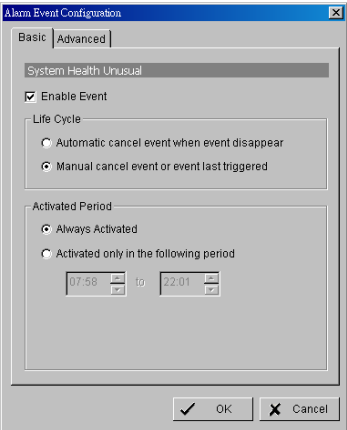

# 8.2 Action

**Insert Action:** To setup actions responding to an unusual event.

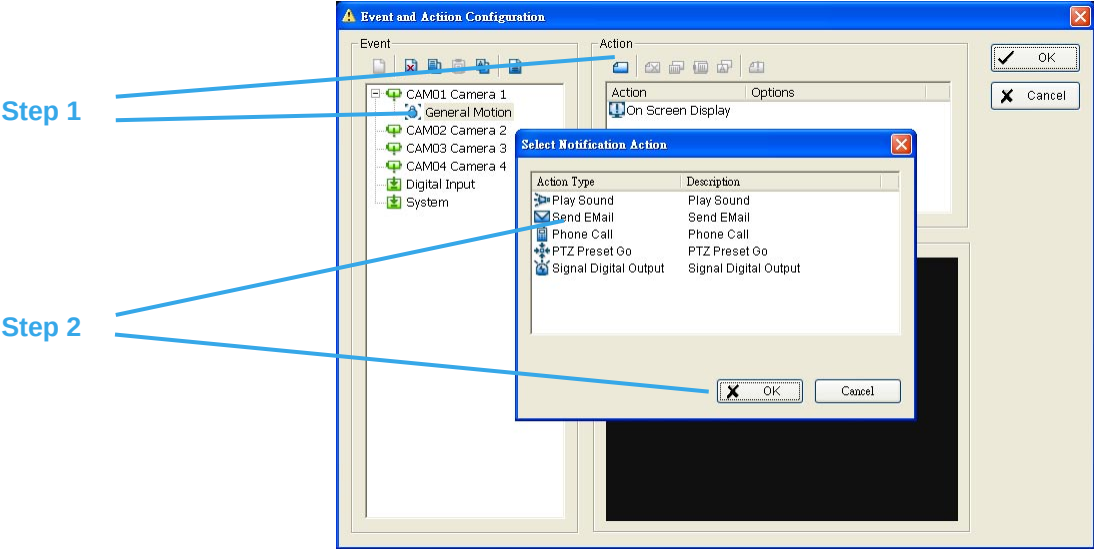

**Step 1:** Choose an event and click the “Insert Action” icon.

**Step 2:** There are 6 types of actions: On Screen Display, Play Sound, Send E-mail, Send SMS Message, PTZ Preset Go and Signal Digital Output. Select the action you want on Action Type list and then click OK.

**Step 3:** Configure the setting of the Action Type if needed.

## 8.2.1 Action - Action Type

**On Screen display:** A red warning will be flashing on the screen of Main Console, indicating which type of unusual event is detected.

**Play Sound:** Sound alarm warning. Choose a Wave file (.wav) and the system will play the sound as alarm when an unusual event is detected.

**Send E-mail:** The system will send an E-mail immediately to given accounts indicating the type of event, the time, and attaching a picture taken while the event is detected. To give the system the E-mail accounts, go to Config > Setup > Hotline.


**Phone Call:** The system will call a given phone number when an unusual event is detected. To setup the phone number and make an audio record for the phone call, go to Config > Setup > Hotline.

**PTZ Preset Go:** The PTZ (pan/tilt/zoom) camera will go to a preset spot when an unusual event is detected. Select the PTZ camera on the pop-up panel, and then, at Alarm On section, select the Preset number with which you want the PTZ camera to go when an event is detected; and assign a Preset configuration for Alarm Off.

**Note:** You need to configure your PTZ camera before using this function.

**Signal Digital Output:** Triggers traditional alarming devices that connect to the system, such as alarm lights and sirens.

## 9. Start

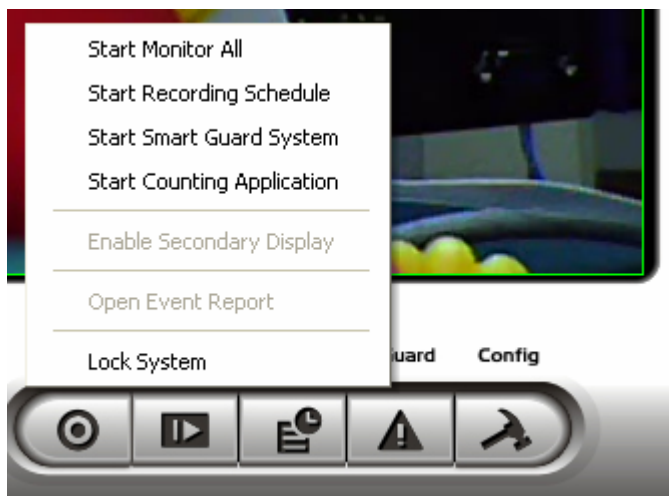


**START:** Click on the Start icon and select from the drop down menu to activate/ deactivate: (a) Recording Schedule System, (b) Smart Guard System, or (c) Counting Application. Select Start/Stop Monitor All to activate/ deactivate all the functions at once.

You may also enable secondary display, open event report, and lock the system here.

**Note:** When activating any of the monitor functions, system considers the current screen status as normal. Therefore, if you want to, for example, detect Missing Object, be sure the object needed to be protected is in its position at the moment you click Start button.

# 10. Remote Live Viewer

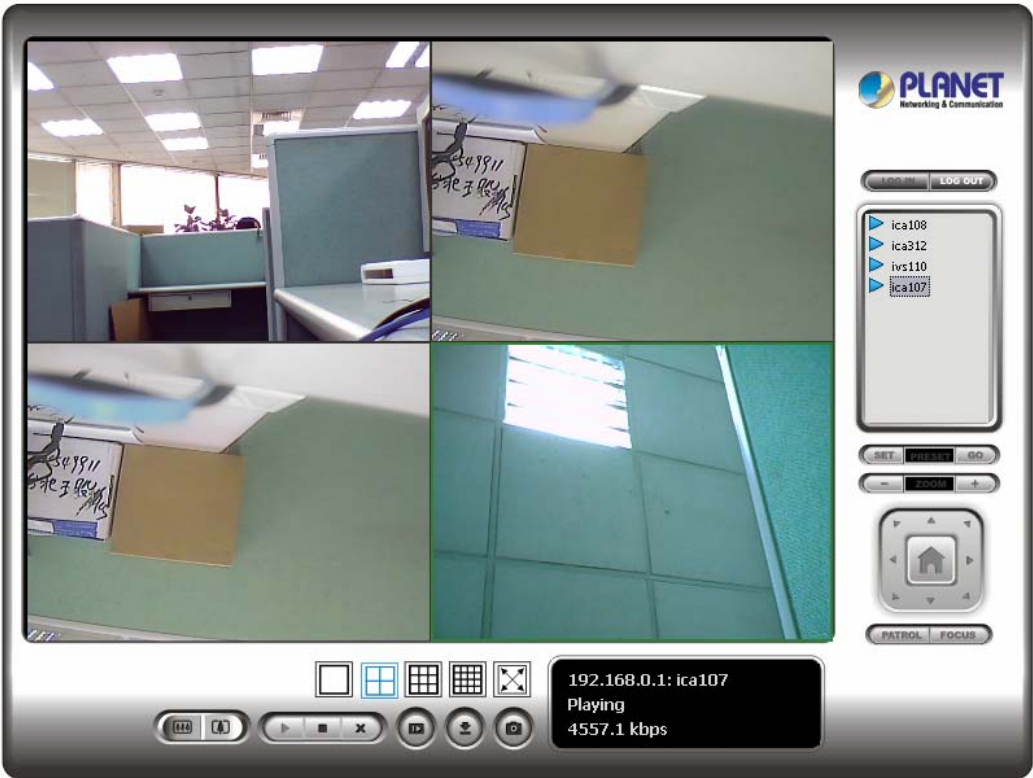

With the Remote Live Viewer console, remote users may watch real-time video from remote live streaming servers.

## 10.1 Show Camera(s) On the Display Screen

Select a camera(s) from the server/camera list on the right and then drag it to where you want the image to be displayed.

On the server/ camera list, right click on a camera to connect/ disconnect it.

**Log In/ Log Out:** Select a server or a group and click on the log in/ out icon to access/ leave the server. You may also log in/ out from the server by right clicking on it.

**Server and Camera List:** Display a complete list of the server(s) and camera(s) that are added to the system.


**PTZ Camera Control:** You may control the camera view by utilizing the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support PTZ function.



Log In/ Log Out  
(Server/ Group)

Server and Camera List

PTZ Camera Control

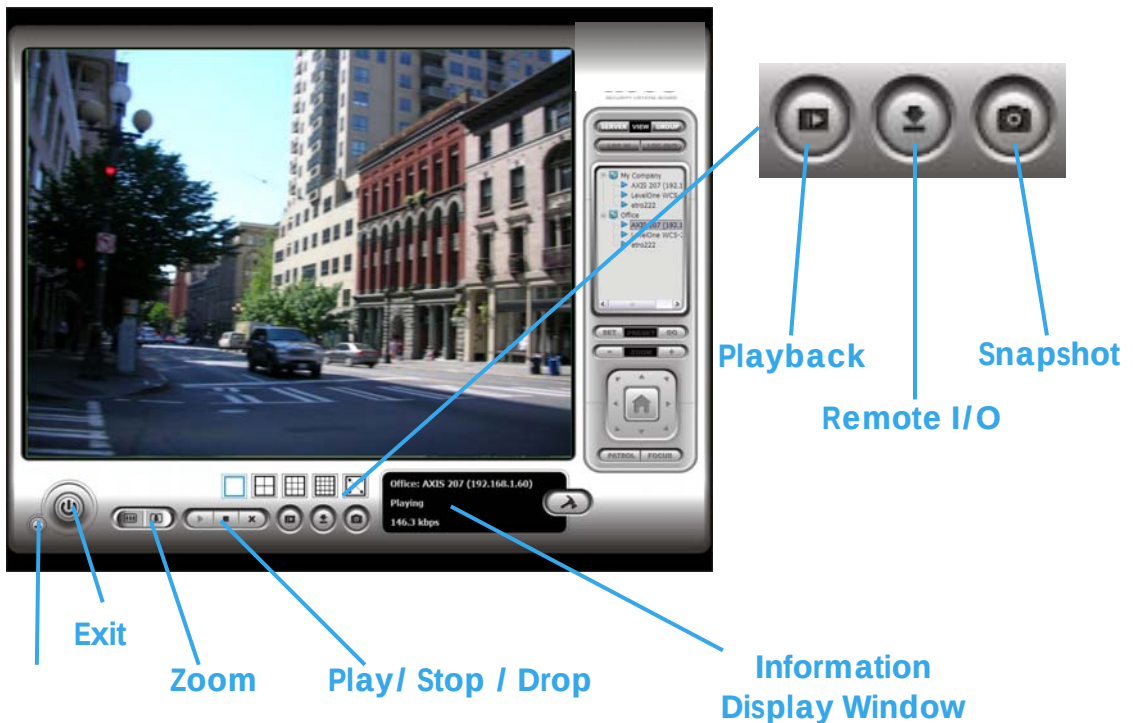

**Minimize:** Minimize the Remote Live View Console window.

**Exit:** Shut down the system or log out current user.

**Digital Zoom:** Click on the "+" or "-" signs to zoom in and out the view.

**Play / Stop/ Drop:** Select a camera/ video and click on this button to play/stop/disconnect a particular channel.


**Information Display Window:** Display video information including server name, video current status, and bit rate for a selected channel.

**Playback:** View playback video remotely.

**Remote I/O:** Utilize I/O device function remotely. - User can remote adjust the Output Pins by turning it on or off

**Snapshot:** Select the snapshot function to capture a specific video image immediately.

# 11. Web View

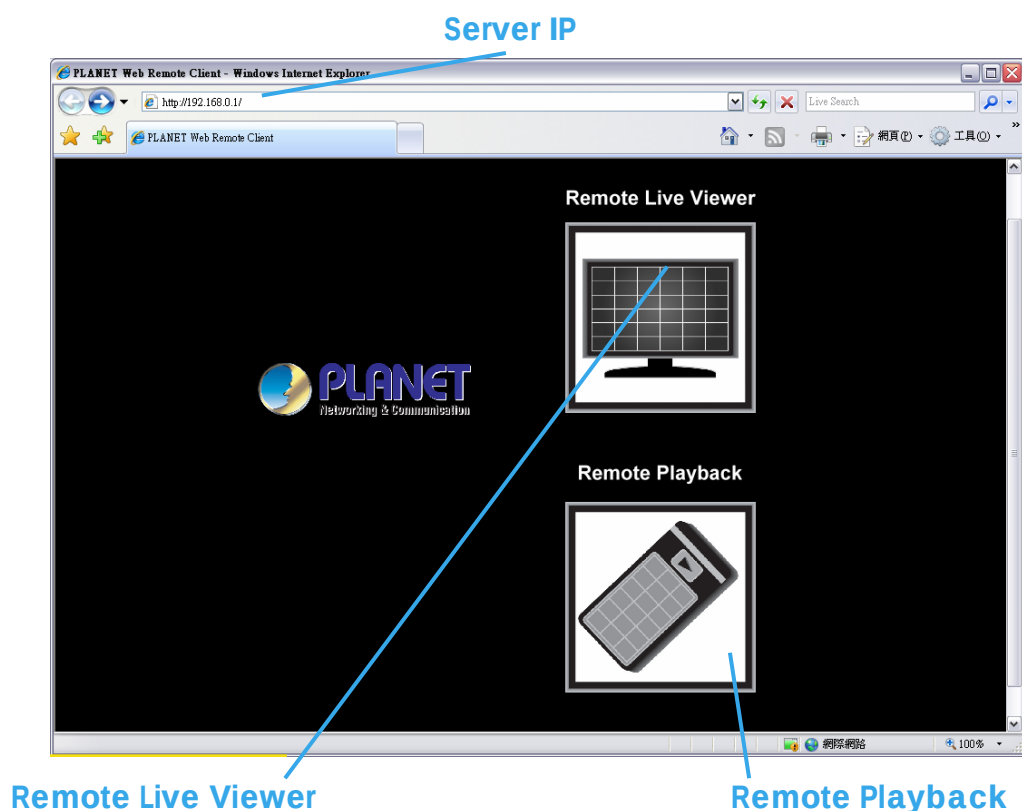

**Note:** Must make sure the Liver Stream Server is enabled.

**Server IP:** Open an Internet Explorer browser and enter the IP address or DDNS “name” of the server followed by the connecting port.

Example: <http://192.168.0.20:8080/>

**Note:** 192.168.0.20 is the IP address of the server.

8080 is the port specified in “Use Default Web Server” in Network Service.


**Remote Live Viewer:** Press this icon to use Remote Live Viewer which functions are the same as Remote Live Viewer.

**Remote Playback:** Press this icon to use Remote Playback which functions are the same as Playback but remote server and backup functions.


# 12. DB Tool

The DB Tool Export/import database files; Export configurations; and Edit storage location.  
**Warning** : improper use of this DB Tool may cause lose of the recorded video data.

Step 1: Execute DB Tool from program files.

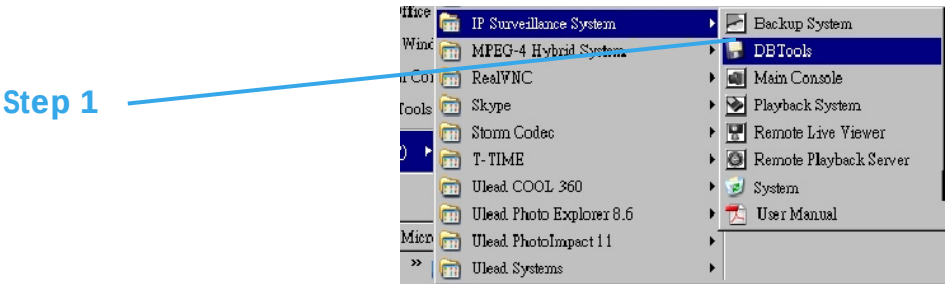

Step 2: Enter the password of administrator to login.

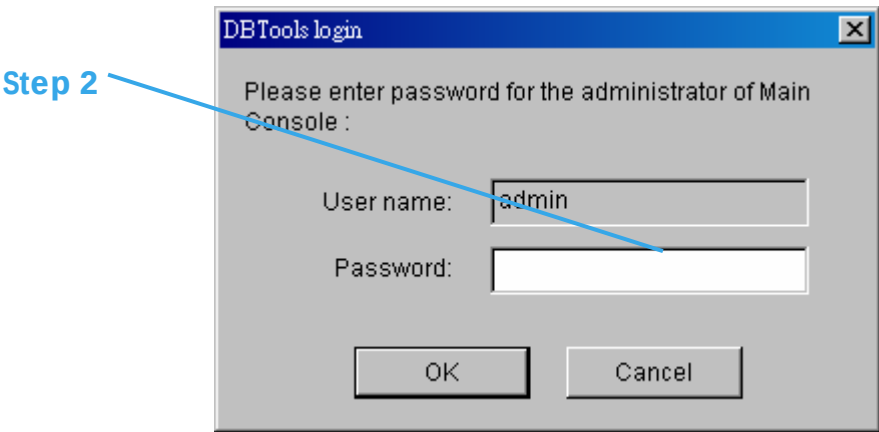


## 12.1 Export Database

**Step 1:** Select system database location (generally they will reside in c:\program files\your\_installation\_directory\).

**Step 2:** Select the destination you want to export.

**Step 3:** Press “Export” to start to export database.

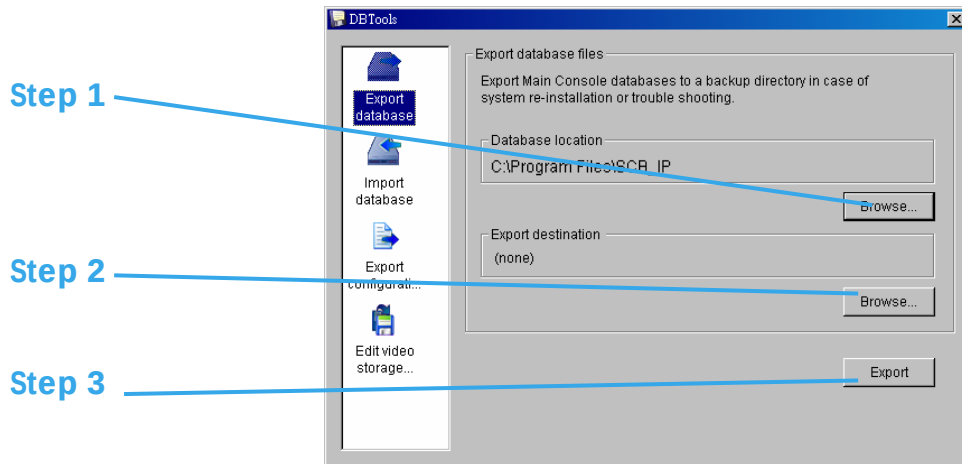


## 12.2 Import Database

**Step 1:** Select the database location you want to import.

**Step 2:** Select the installation path you want to import.


**Step 3:** Press “Import” to start to import database.

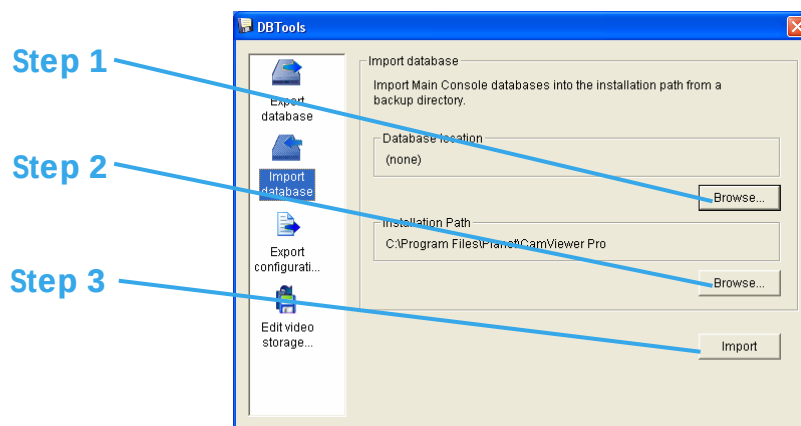

**Example of using export database and import database:**

In certain case that when video data needs to be transfer from old PC to another new PC, user will need to perform the following procedure.

1. Manually copy all recorded video data from the default installation path or other user-defined storage path of the old PC.

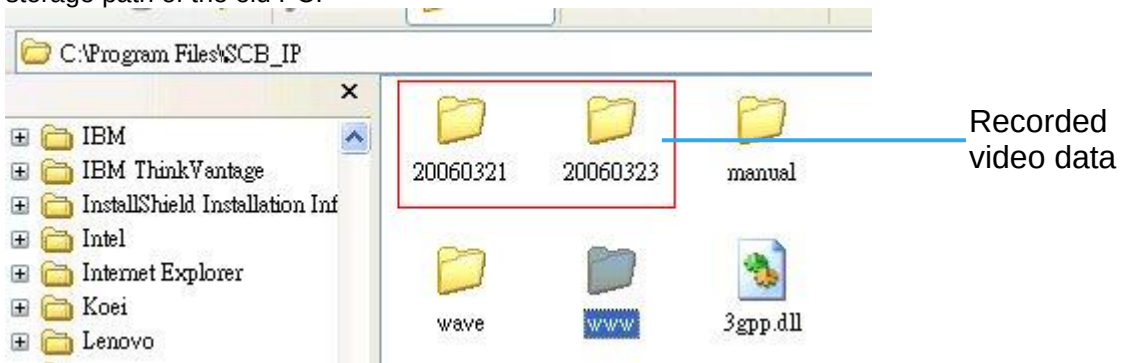


2. Run “12.1 Export database” on old PC.

3. Manually paste all recorded video data to the default installation path or other user-defined storage path of the new PC

4. Run “12.2 Import database” on new PC

5. Old recorded video data can be viewed by playback system on the new PC.


## 12.3 Export Configurations

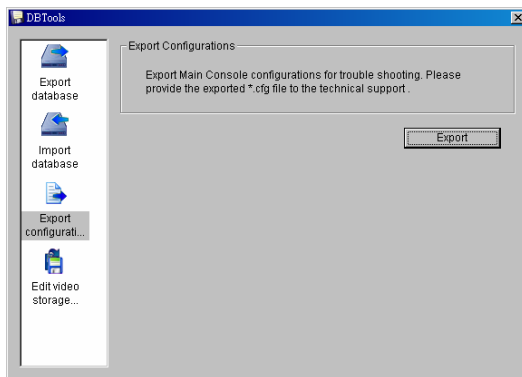

**Step 1:** Press “Export”.

**Step 2:** Select the location you want to Export and type the name of the configurations.

**Step 3:** Press “Save” to start to import database.

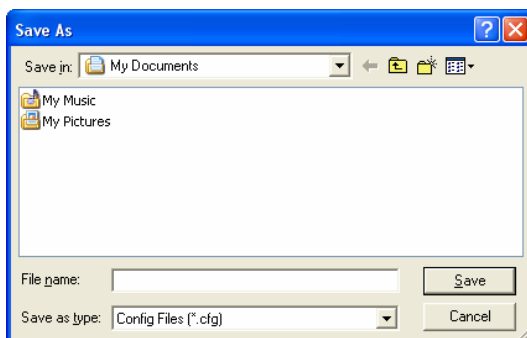

# 12.4 Edit Storage Location

If you move the recorded videos to a new directory, to ensure the videos can still be recognized by the Playback system, you should change the original directory.

Step 1: Select the original directory in the table.

Step 2: Change the selected path to the new directory for the moved video.

Step 3: Press “Update” to finish editing storage location.

